



# ATT EL52300 Keypad/Plastic Display Screen Replacement

Use this keypad replacement guide if buttons...

Written By: Katty



# INTRODUCTION

Use this keypad replacement guide if buttons are missing or damaged. A potential hazard would be affecting the motherboard through the charge that you internally carry, therefore you should use the anti-static wrist strap to prevent this. References to the other guides will be used.

---

## TOOLS:

[Anti-Static Wrist Strap](#) (1)

[iFixit Opening Tool](#) (1)

[Phillips #1 Screwdriver](#) (1)

---

## Step 1 — Battery



- Find the bump where the battery cover meets the phone. Put your thumb here, and push and slide the cover down.

## Step 2



- Unplug the battery by squeezing your hands on the small white plug and lifting it up.

⚠ Do not pull on the wire itself because you might damage the wire!


- The battery is now detached and ready to be removed by lifting it out.

## Step 3 — Motherboard



- Remove the two 3.75 mm screws with a PH1 screwdriver.


## Step 4

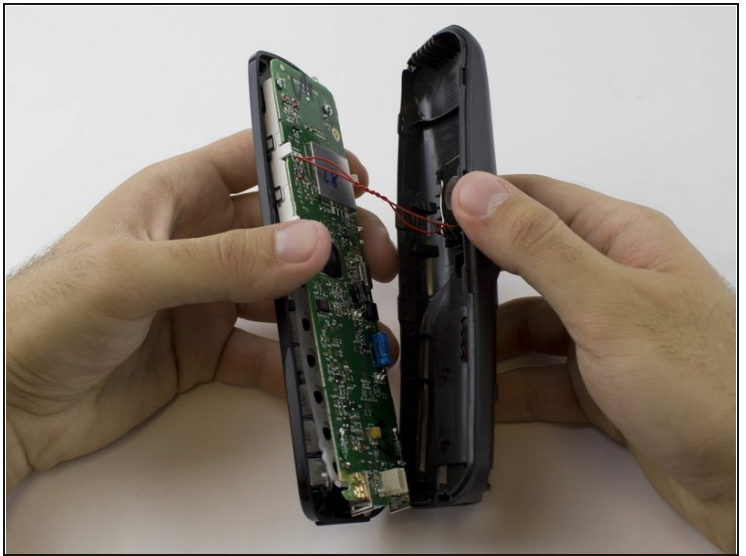

- Use a plastic opening tool to remove the handset case.

⚠ Be careful to not lift the case too far as the ringer cable is attached to the case.

## Step 5

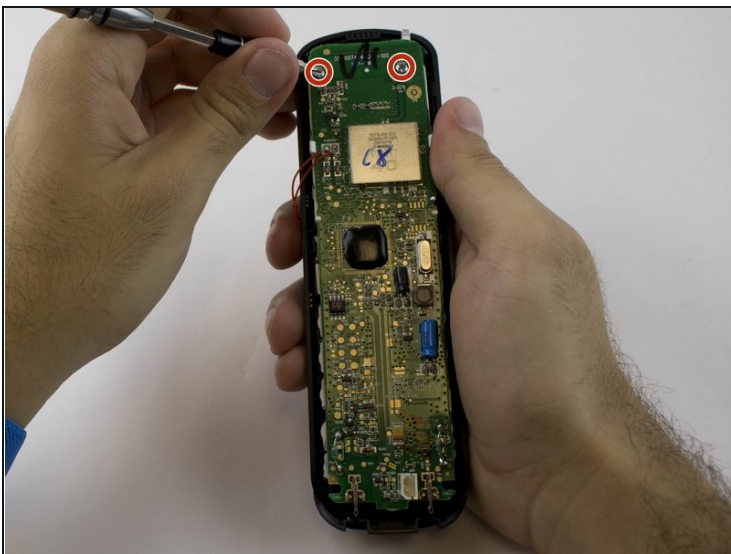

- Remove the two 3.65 mm screws on the motherboard with a PH1 screwdriver.

⚠ Use an [anti-static wrist strap](#) to prevent damage to the motherboard.



## Step 6 — Keypad/Plastic Display Screen



① The keypad lies on the top of the motherboard and is easily detachable.

- Remove the keypad.

## Step 7



- Replace the plastic display screen, or the keypad buttons as needed.

To reassemble your device, follow these instructions in reverse order.