

Spy Gear Video Walkie Talkies Top Cover Replacement

This guide will allow you to remove the top cover of your walkie talkie to gain access to the internal components.

Written By: Adam Kinnett





Step 1 — Top Cover



- Remove the battery cover by removing the P1 Philips screw.
- Remove the 3 AA batteries by hand.

Step 2




 Unscrew Top Cover with a 3mm Triangle driver bit from the Driver Kit.

Step 3



• Use Opening Tool to release barbed latch on top cover.

Step 4

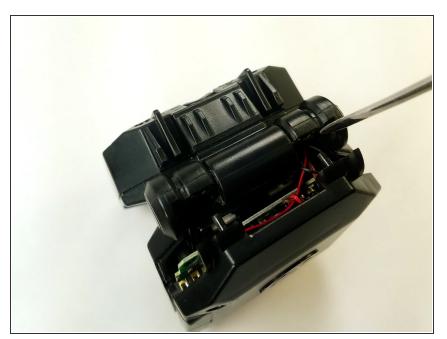

• Release pilot studs near the hinge with Metal Spudger.

Step 5



• Once the Top Cover is free, you will have full access to the circuitry.

To reassemble your device, follow these instructions in reverse order.