



Asus 1015E-DS03 Battery Replacement

This simple guide will help you to remove the battery from the laptop.

Written By: Joe Capriola




INTRODUCTION

If the laptop powers on when the charger connected, but fails to power on or stay on when disconnected, then your battery may need to be replaced. This guide will show you how to replace the battery. There are no tools needed.

TOOLS:


- [Fingers](#) (1)

Step 1 — Battery

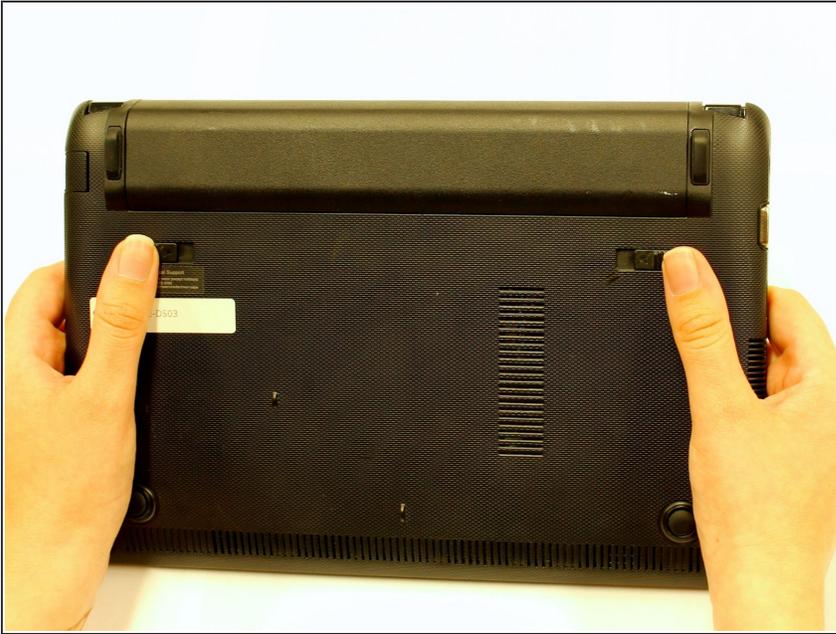

- Hold the laptop using both hands with the battery facing upwards.

Step 2

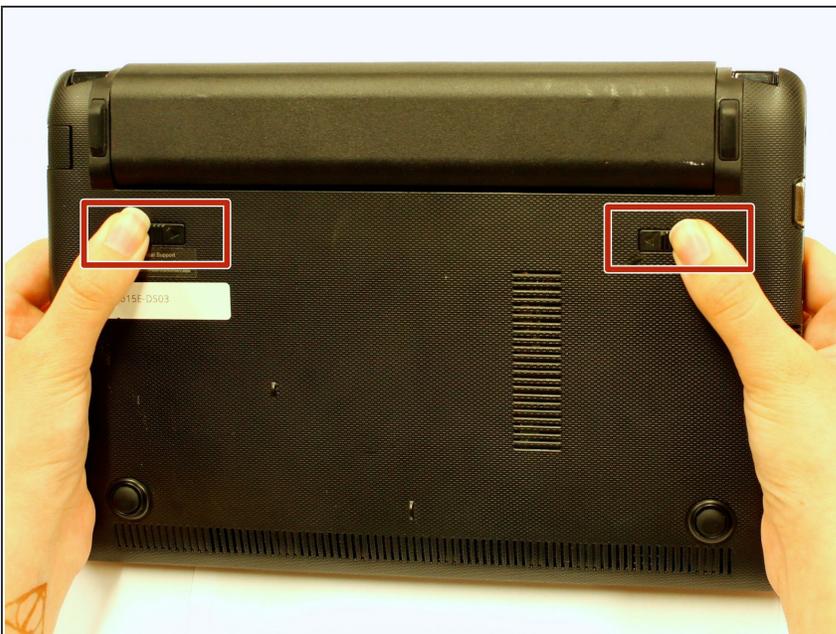

- Push the two tabs located below the battery in towards each other using your thumbs.

Step 3



- Push the battery upwards and out of the laptop as shown.

Step 4



- Continue to push the battery upwards until it is completely separated from the laptop as shown.

To reassemble your device, follow these instructions in reverse order.