



Asus 1015E-DS03 Keyboard Replacement

Use this guide to help remove the keyboard on your Asus 1015-DS03

Written By: Joe Capriola



INTRODUCTION

After the battery has been removed, this guide will show the user how to remove the keyboard. A spudger and a screwdriver will be needed for this guide.

TOOLS:


- [Fingers](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Battery



- Hold the laptop using both hands with the battery facing upwards.

Step 2

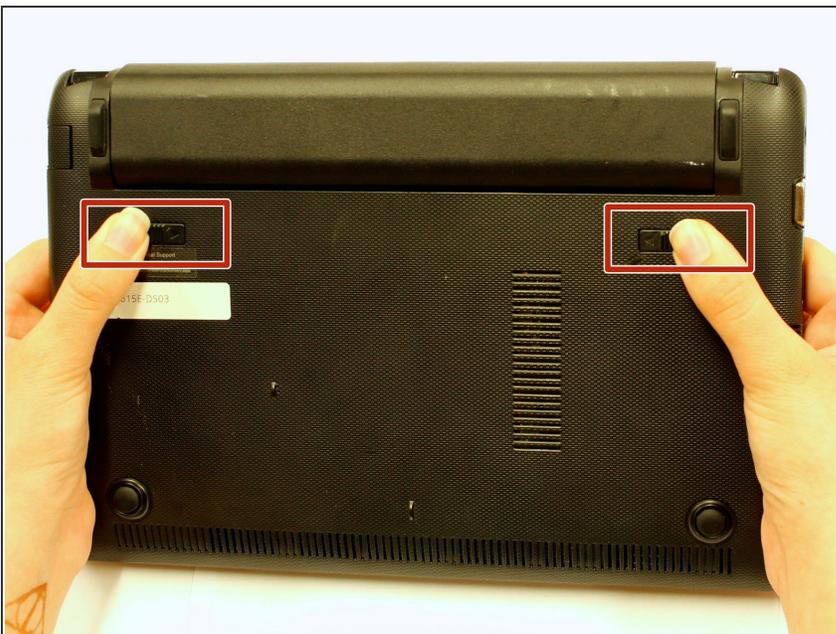

- Push the two tabs located below the battery in towards each other using your thumbs.

Step 3



- Push the battery upwards and out of the laptop as shown.

Step 4



- Continue to push the battery upwards until it is completely separated from the laptop as shown.



Step 5 — Keyboard



- Once the battery is removed, unscrew the highlighted 3mm screws (4) using a #0 Phillips head screwdriver.


⚠ Be very careful not to lose the screws, these four screws are very small.

Step 6

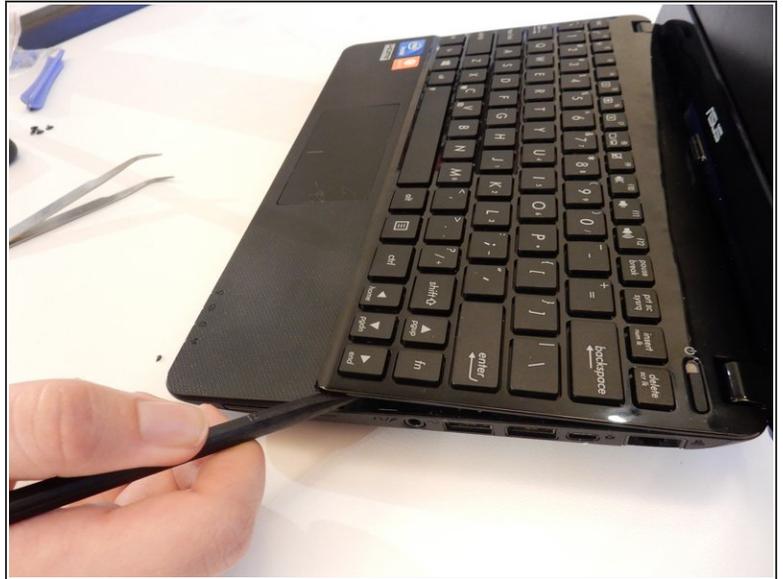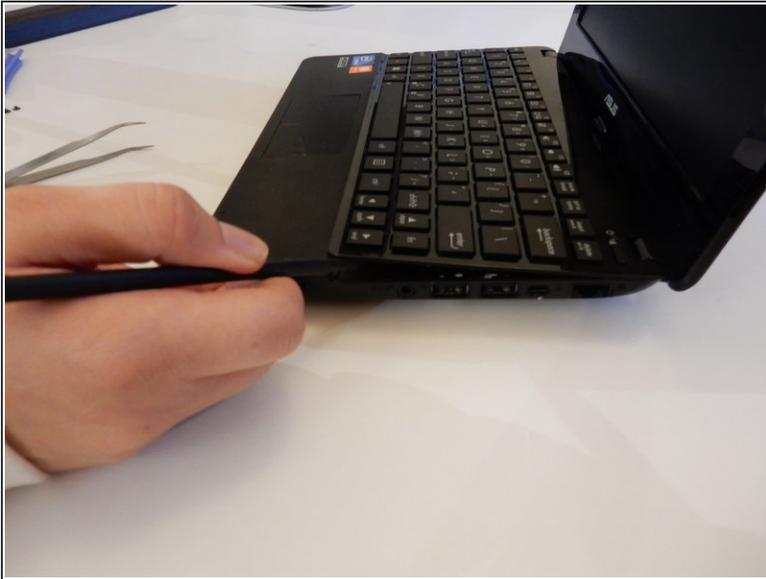

- After all four screws are removed, flip the laptop over with the keyboard facing up.
- Use a spudger to pry up where the keyboard is attached to the laptop on all sides until it is detached from the laptop.
- ⓘ It is normal to hear cracking noises when prying off the keyboard.
- ⚠ After keyboard is detached from laptop, there is a ribbon cable still attached to the motherboard. See next step before completely removing keyboard.


Step 7

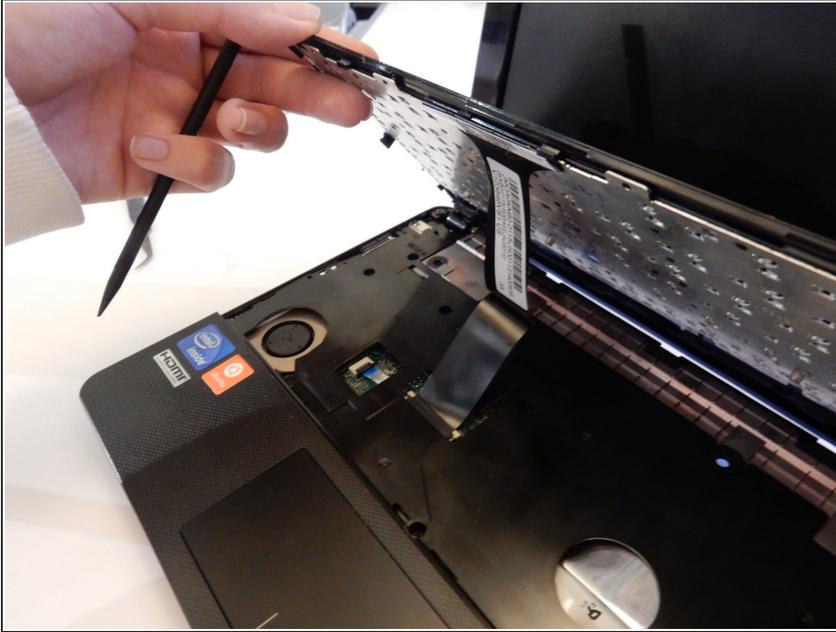

- After the keyboard is detached, the ribbon cable which connects the keyboard to the laptop's motherboard is exposed.


 Be careful not to tear or rip the ribbon cable.

Step 8

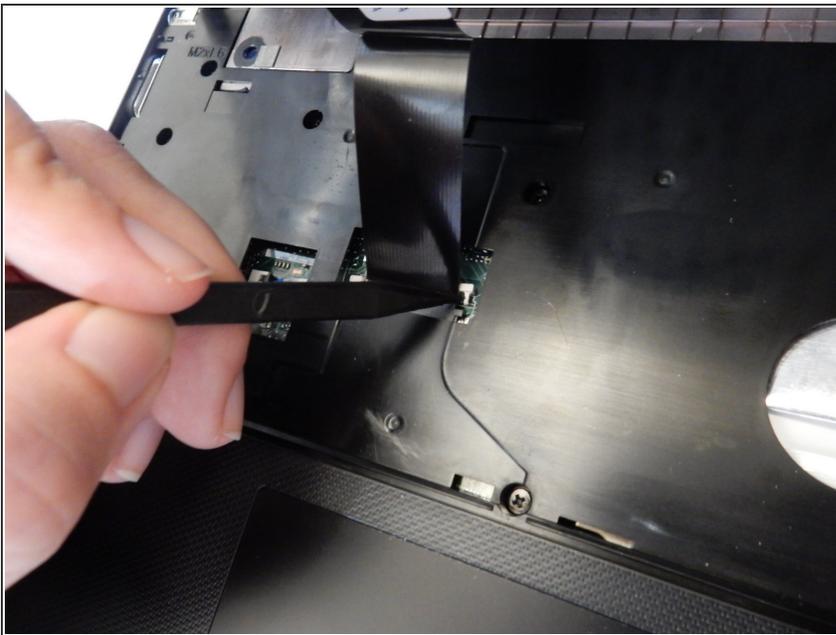

- Using the spudger push the white clips upwards that are holding the cable.

Step 9

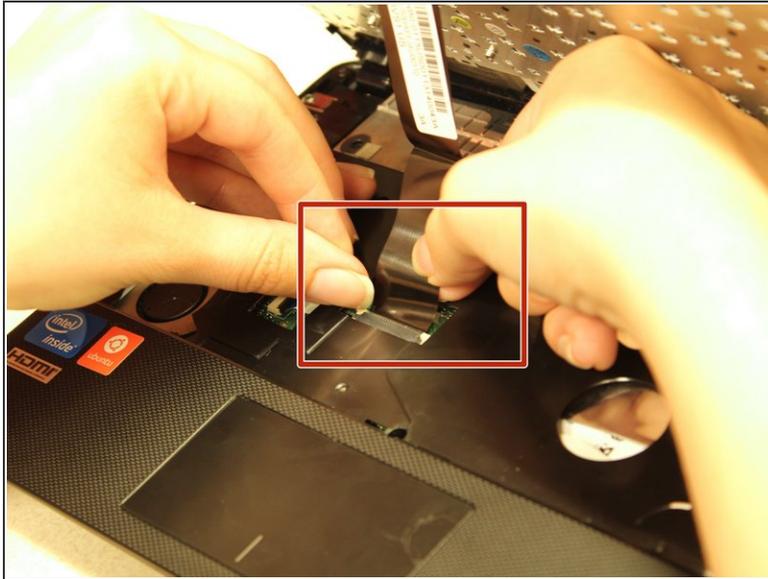

- Gently pull the strip out of the square slot.

To reassemble your device, follow these instructions in reverse order.