



SVP 5800 Front Casing Replacement

This guide demonstrates how to remove and replace the front casing that surrounds the mechanical parts of the device.

Written By: Cheyenne Heinen



INTRODUCTION

This guide enumerates the steps of removing and replacing the front casing of the SPV Aqua 5800 Camera in order to protect the mechanisms within.

TOOLS:

- [Phillips #000 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Strap Hook




- Locate the two 3.5 mm screws on the side of the device.
- Apply pressure to the PH J000 philips head screwdriver and turn in a counter clockwise motion until the screw becomes loose enough to pull out.

Step 2 — Front Casing



- Once you have properly removed the strap hook, locate the two 3 mm screws located on the opposite side of the strap hook.
- ⓘ Refer to the prerequisite guide on removing the strap hook for instructions.
- Place the PH J000 philips head screwdriver on the head of screw; apply pressure and turn in a counter clockwise motion until screws come loose.

Step 3

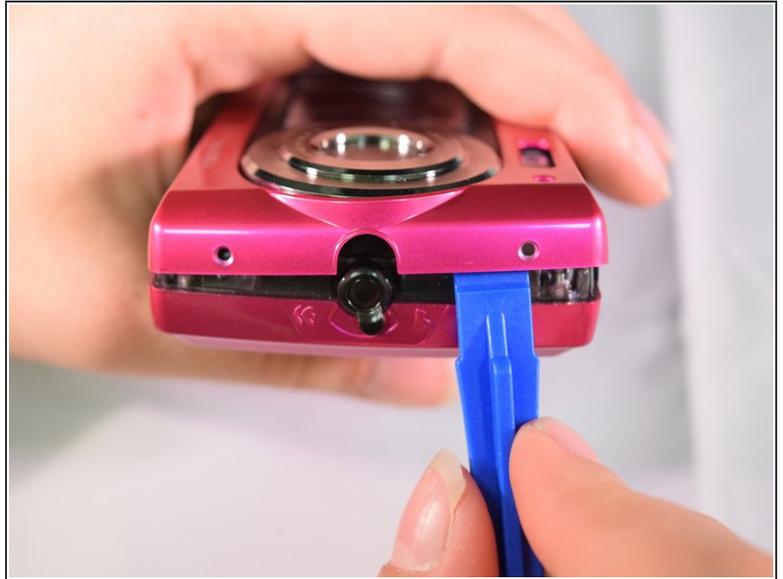

- Place the plastic opening tool on the crack between the front and back casings.
- Apply pressure by pulling down on the plastic opening tool to pry the case apart.

Step 4



- Wedge your fingers in the opening and slowly pull the front casing away from the bottom casing until it completely separates from the device.

 Using too much force in this step can damage your device.

This document was generated on 2020-11-24 05:31:26 AM (MST).

To reassemble your device, follow these instructions in reverse order.