



Acer Aspire One D255E Screen Replacement

This guide will walk you through replacing the screen on the device.

Written By: Brian



INTRODUCTION

Damaged screens are one of the most common issues that will occur with a computer. While most laptops require the complete disassembly of the computer to replace the screen, the Acer Aspire One D255E requires significantly less work. You should read through the entire guide before performing the repair and should have all necessary tools readily available. You should also find a safe location to store the various screws taken out of the computer to ensure that they do not get mixed up or lost.


When working with electronics, it's important to choose a tool that's ESD-safe to avoid accidental damage to the device. The metal spudger is great when you need serious prying power, but the regular black nylon spudger or a plastic opening tool should be used whenever possible.



TOOLS:

- [Phillips #1 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Screen

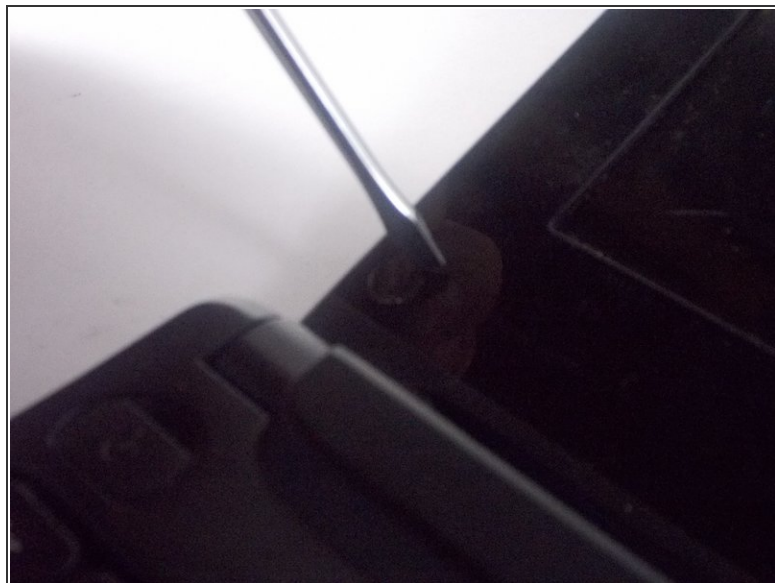

- Using a spudger remove the two screw covers on the front of the computer.

Step 2





- Remove the two 1.2 mm Phillips #1 screws that were located under the screw covers.

Step 3



- Using a spudger for assistance remove the front panel of the screen.
- ⓘ It is recommended that you use a plastic spudger to reduce the chance of damaging any internal parts.


Step 4

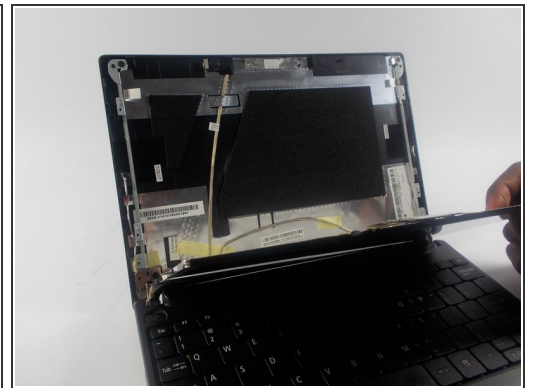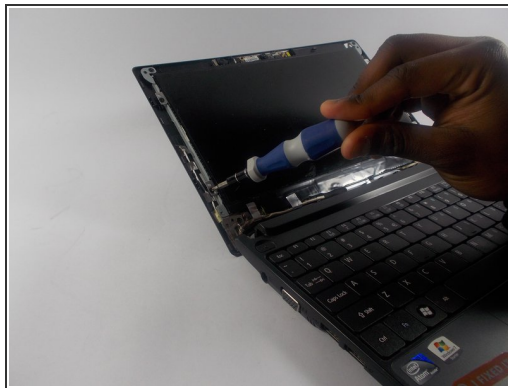

- Remove the eight 1.2 mm Phillips #1 screws holding on the screen.

⚠ There are wires connected to the screen unit. Make sure you do not attempt to pull off the screen just yet!

Step 5

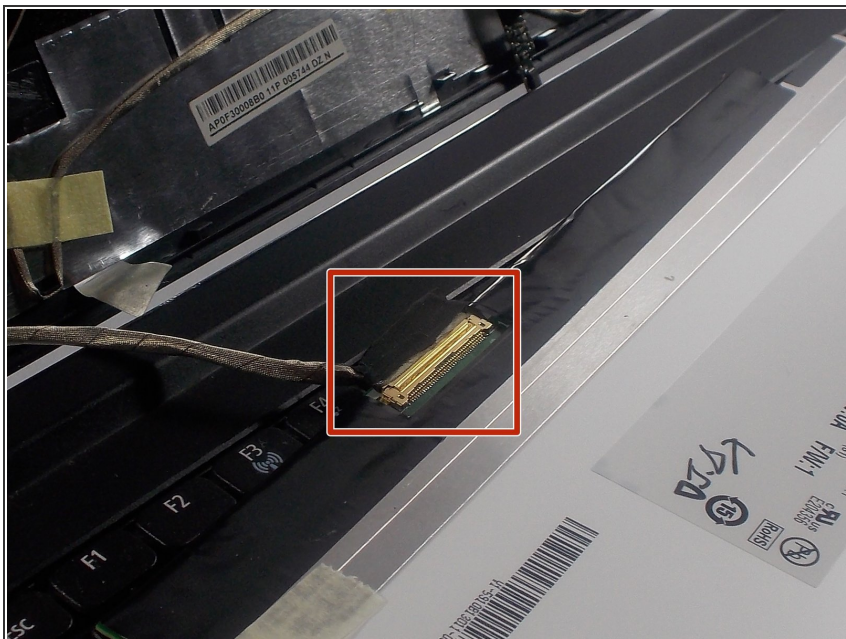

- Carefully remove the display ribbon cable from the connector.

To reassemble your device, follow these instructions in reverse order.