


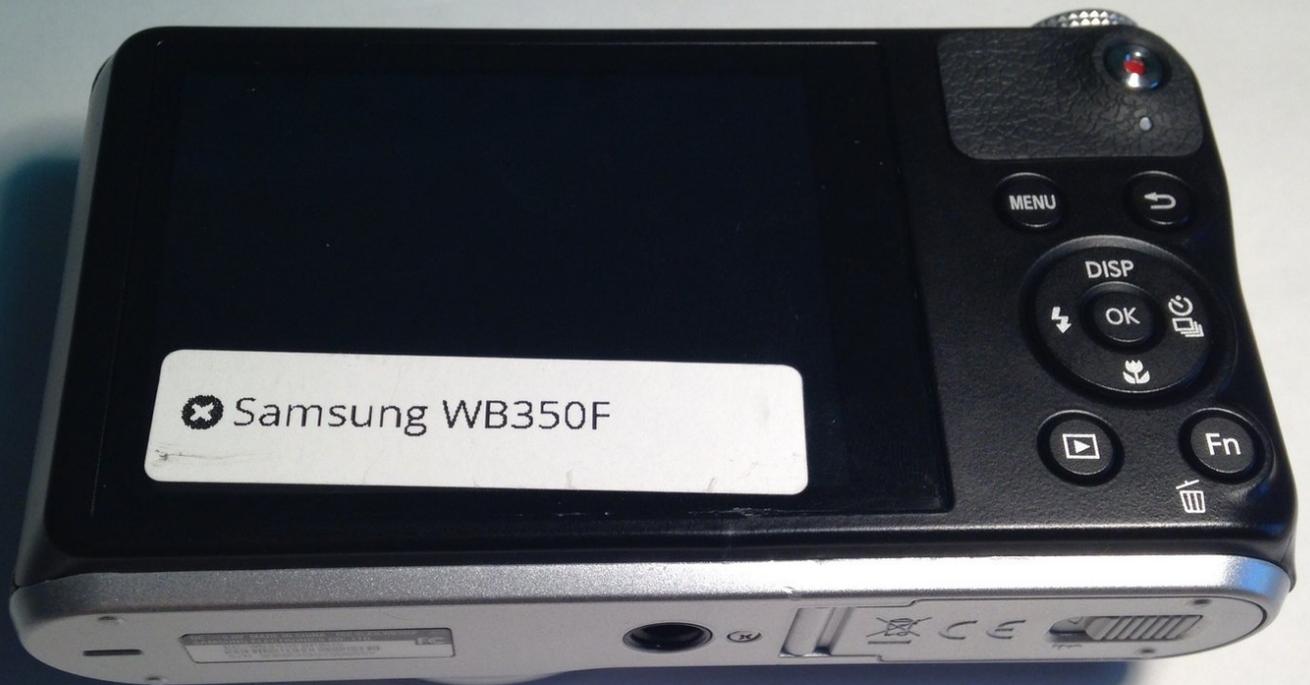

# Samsung WB350F Rear Case Replacement

This guide will walk you through replacing the rear case of your camera.

Written By: Zachary Bourgault



---

## INTRODUCTION

This guide will show you how to remove and replace the rear case of your Samsung WB350F.

---

### TOOLS:

- [Phillips #000 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
  - [Spudger](#) (1)
-

## Step 1 — Rear Case



- Remove the wristlet strap.

ⓘ If you have difficulties use your plastic spudger. If you don't have a plastic spudger, you can also use a pen/pencil.

## Step 2



- Remove five 3.2 mm screws with a Phillips #000 Screwdriver.

ⓘ There is one silver screw on the bottom and two black screws on each side.

☑ Keep the screws together for an easier re-assembly later.

### Step 3



- Open the case of the camera using your plastic opening tool.
  - Start on each end, working the tool into the opening and popping the casing up. Then work your way down the longer sides (top and bottom).
- i** If you don't have plastic opening tools, any flat plastic object, like a used gift card, can be used as an improvised alternative.

### Step 4



- Remove the plastic casing, exposing the inner workings of the camera.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2020-11-22 04:20:42 PM (MST).

