




# Canon Vixia HF R600 Battery Replacement

This guide will help you replace the battery in the Canon Vixia HF R600.



Written By: Logan Coats

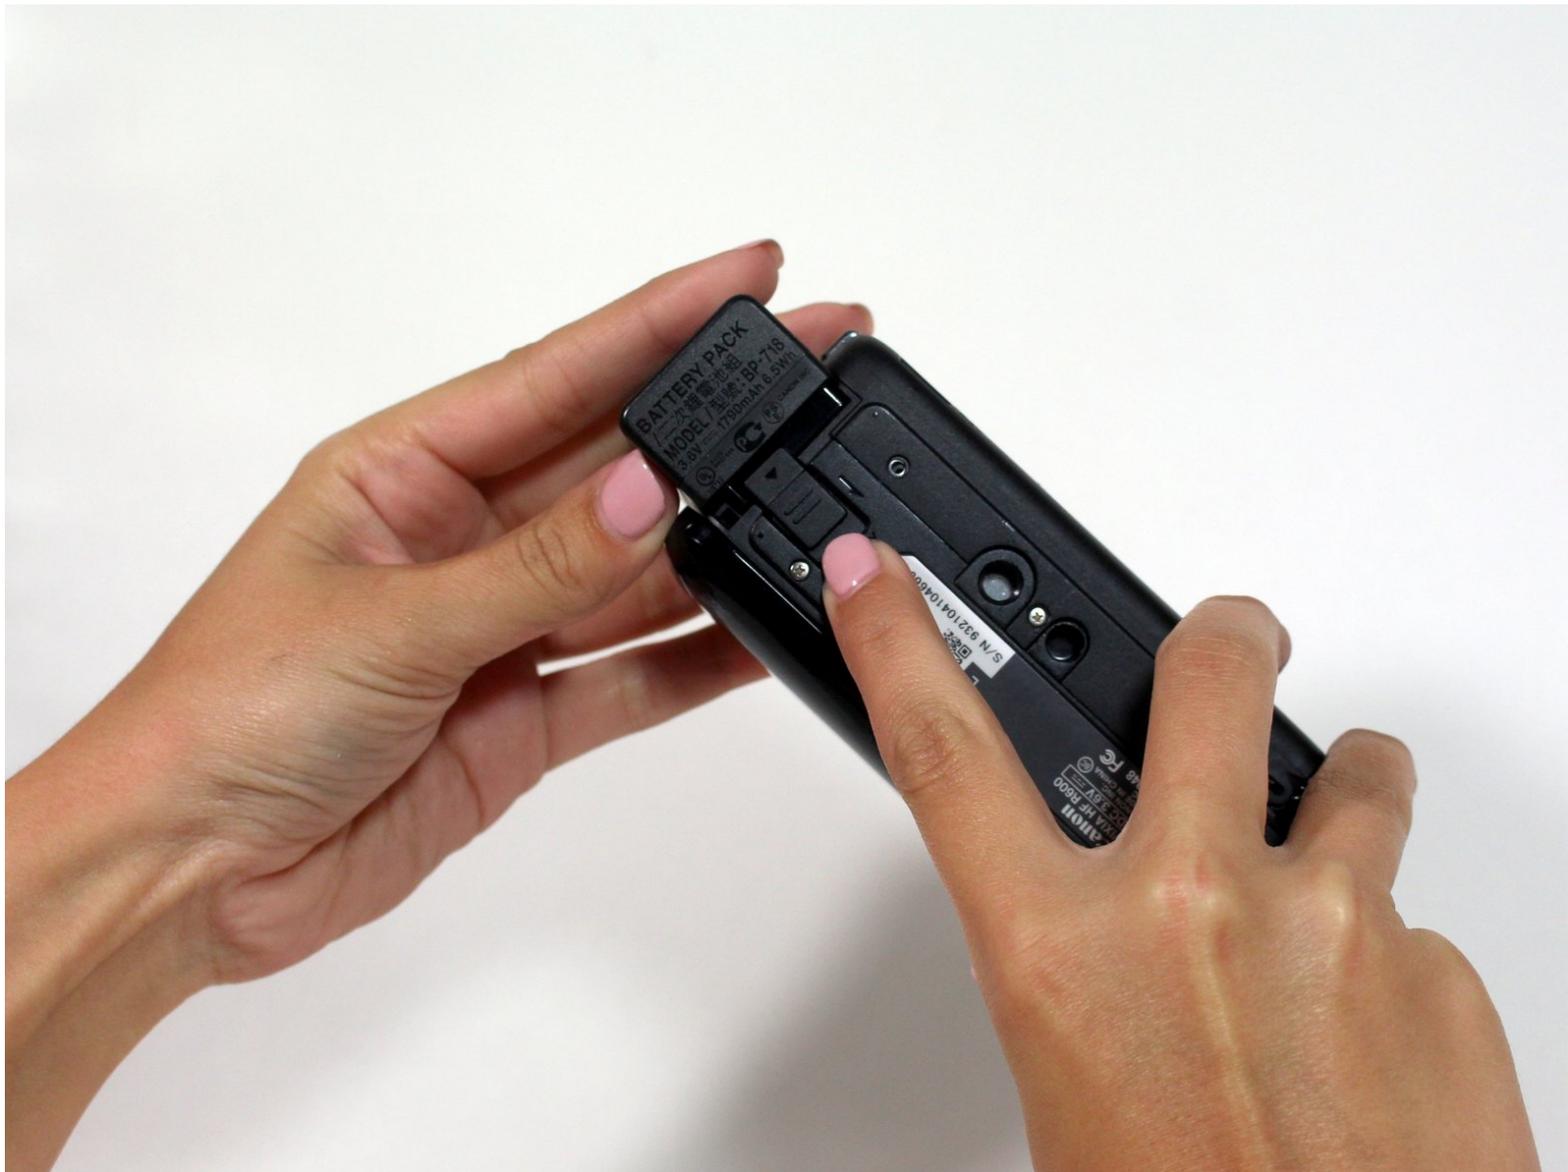

## INTRODUCTION

If your camera's battery is broken or cannot hold a charge, it will need to be replaced. This guide will show you how to quickly remove the camera's battery pack.

## Step 1 — Battery

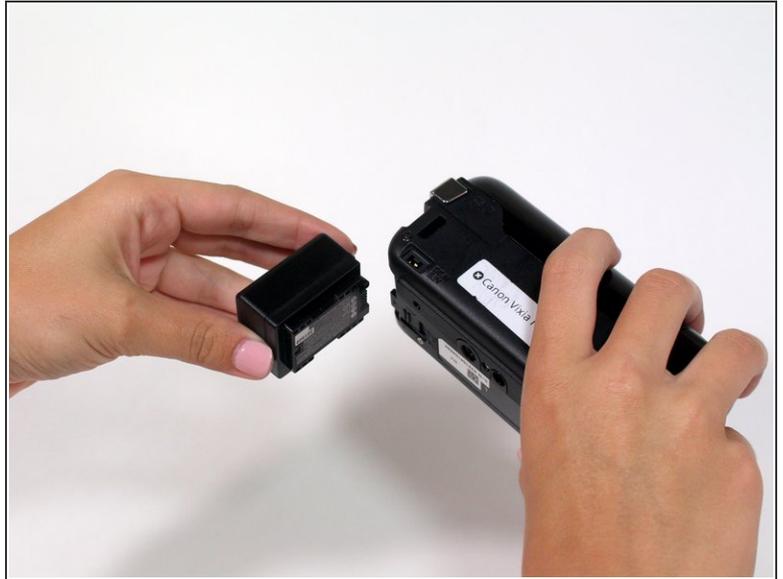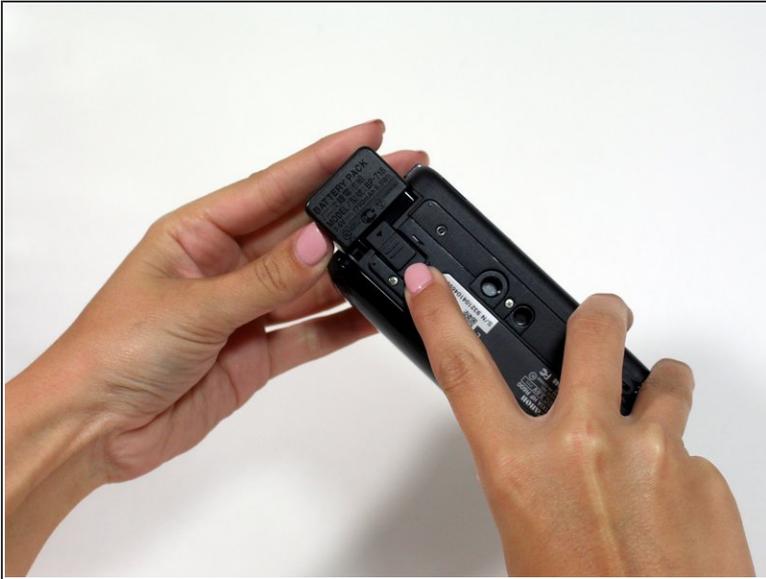

- Press in the battery release tab located on the bottom of the camera.
- Slide the battery out from the body.

To reassemble your device, follow these instructions in reverse order.