



# Samsung WB2200F Battery Cover Replacement

If the battery cover is broken, it will stop the battery from properly staying in place. That may hinder the device's ability to stay charged. Please replace it using this guide.

Written By: Rachelle



---

# INTRODUCTION

This guide will provide step by step instructions on how to replace the battery cover.



## TOOLS:

- [JIS Driver Set](#) (1)
-

## Step 1 — Battery Cover



- Slide the battery cover door open by simultaneously twisting knob and pushing towards the direction of the arrow on the cover.


## Step 2



- Remove battery by slightly tilting the camera. The battery should slide out.




### Step 3

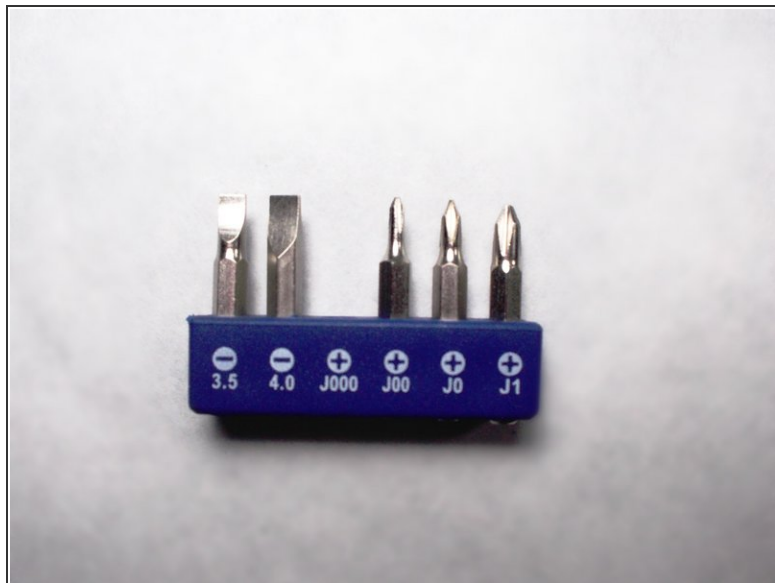

- Looking at the inside of the battery door, remove the six 4mm screws using the screw driver with the JIS size 000 head.

### Step 4

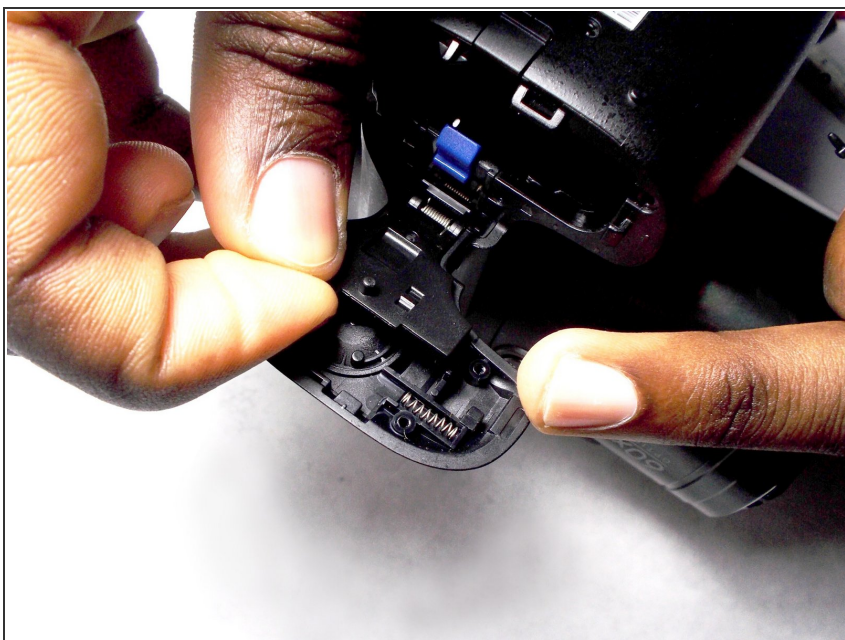

- Lift the black tab above the knob.
- Remove any debris from behind knob or replace the knob.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2020-11-28 05:09:12 AM (MST).

