




HP Stream 8 Motherboard Replacement

Written By: Nick Miller

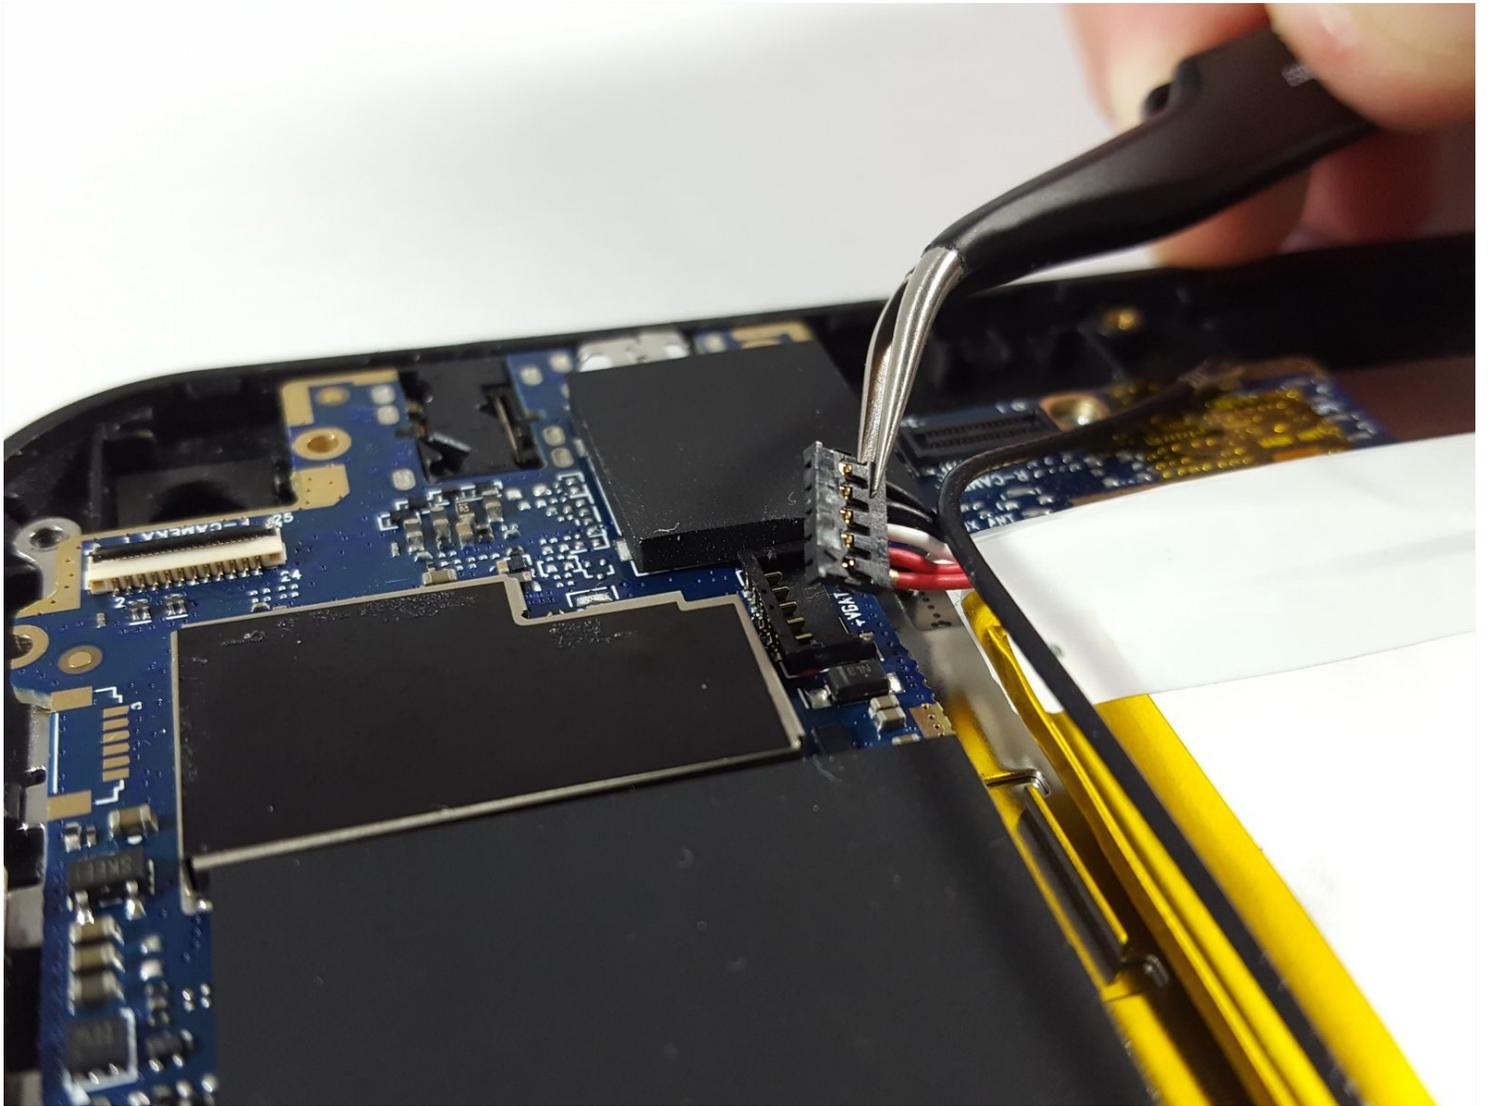

 **TOOLS:**

Phillips #00 Screwdriver (1)

Tweezers (1)

Step 1 — Midframe




- Use your nail or a spudger to pry the back cover off of the device.

Step 2




- Slide your finger around the rest of the back cover, lifting it completely off of the device.

Step 3

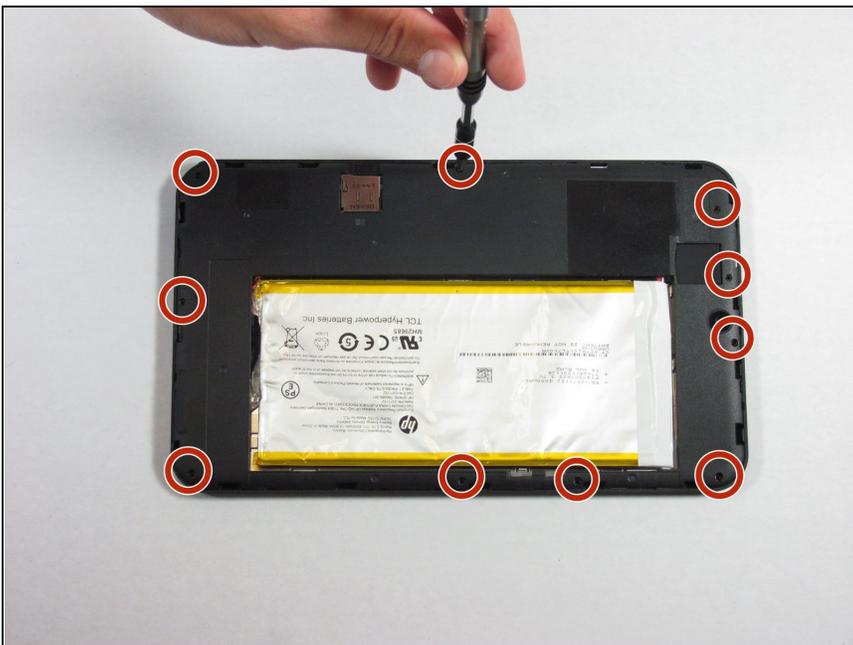

- Remove ten Phillips #00 screws from the inside cover.

Step 4

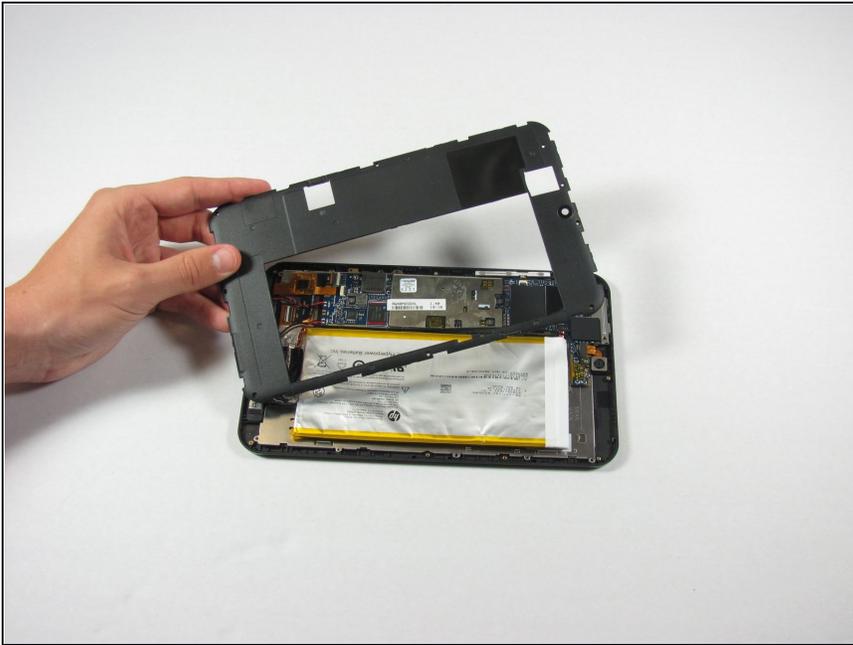


- Pry up the inside cover the same way as in the first step.

Step 5 — Front-Facing Camera




- Lift up on the small black tab at the connection point to unlock the flex ribbon cable using the tweezers.

Step 6

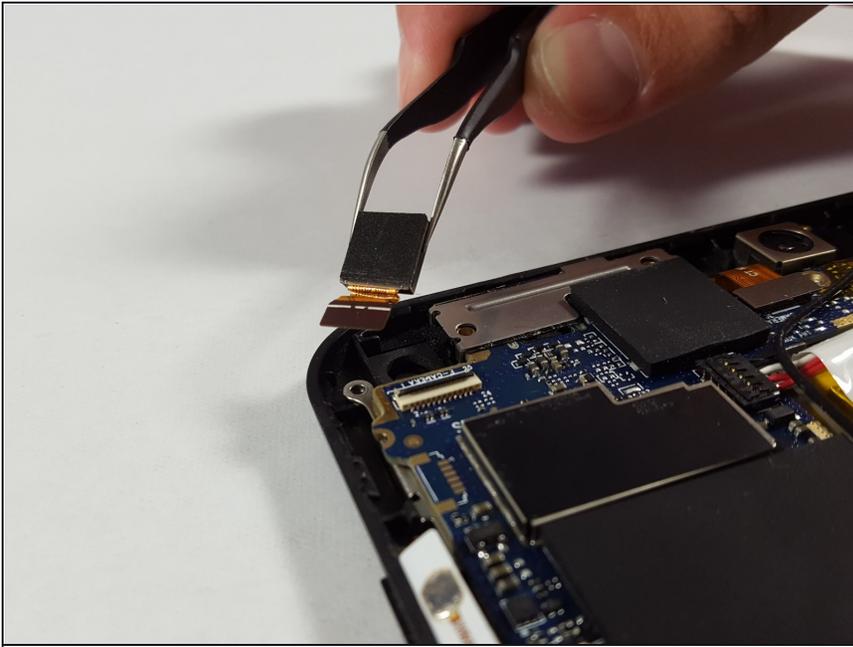


- Remove the front facing camera with tweezers.

Step 7 — Rear-Facing Camera

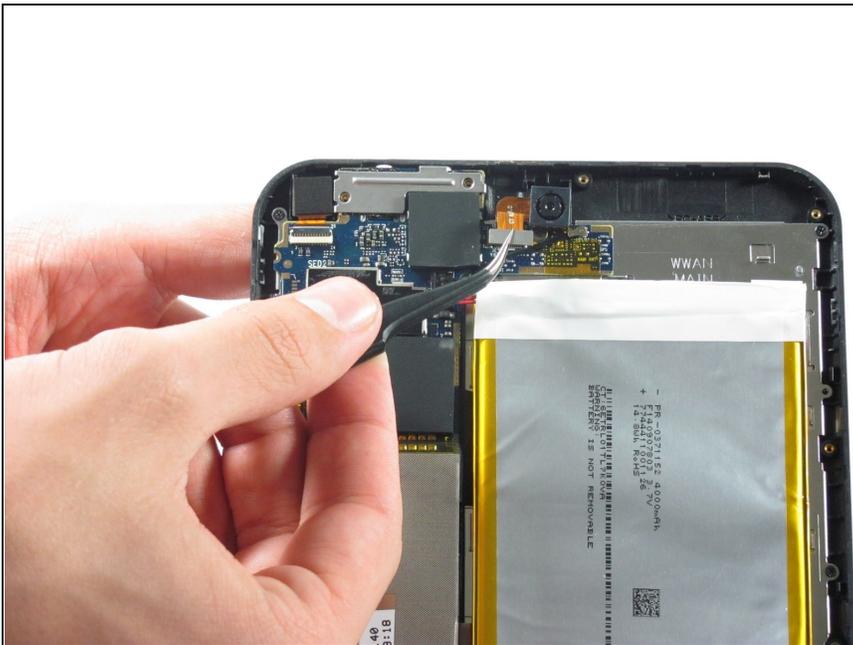


- Carefully pry up the gray metal piece on the end of the flex ribbon cable using tweezers.

Step 8

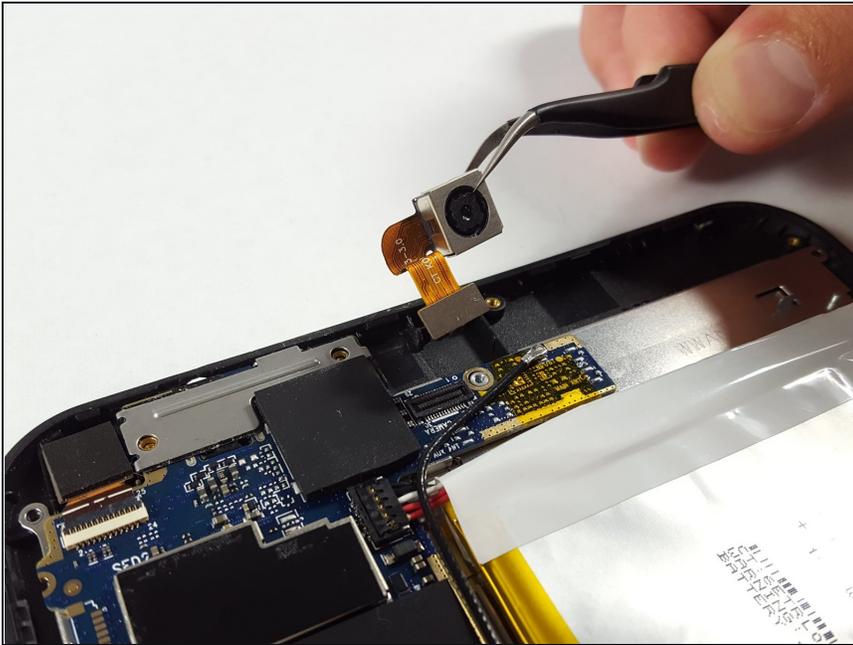

- Remove the back facing camera with the tweezers.

Step 9 — Motherboard

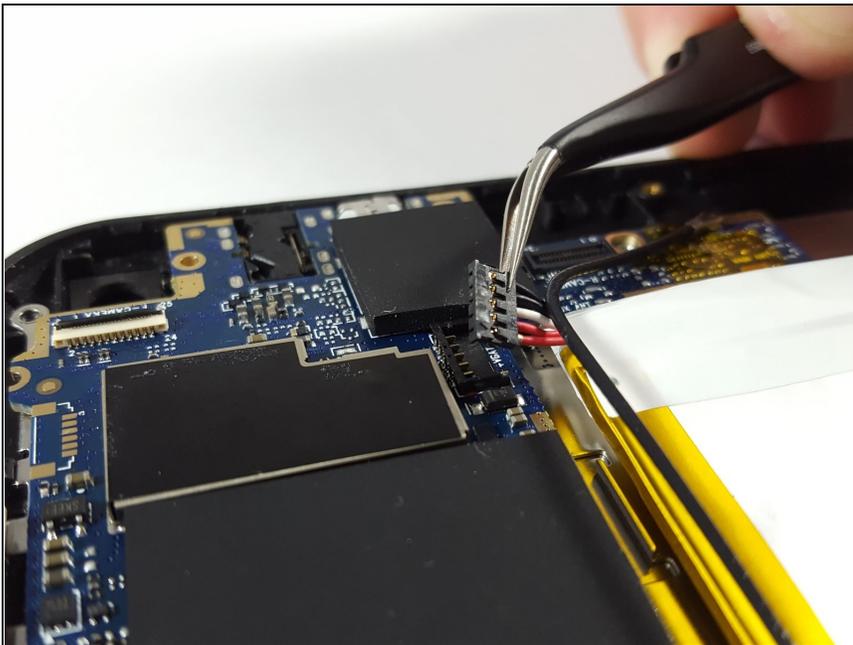


- Carefully remove the battery connector from the system board using the tweezers.

Step 10



- Lift up on the small black tab to unlock the LCD screen flex ribbon cable using the tweezers.

Step 11

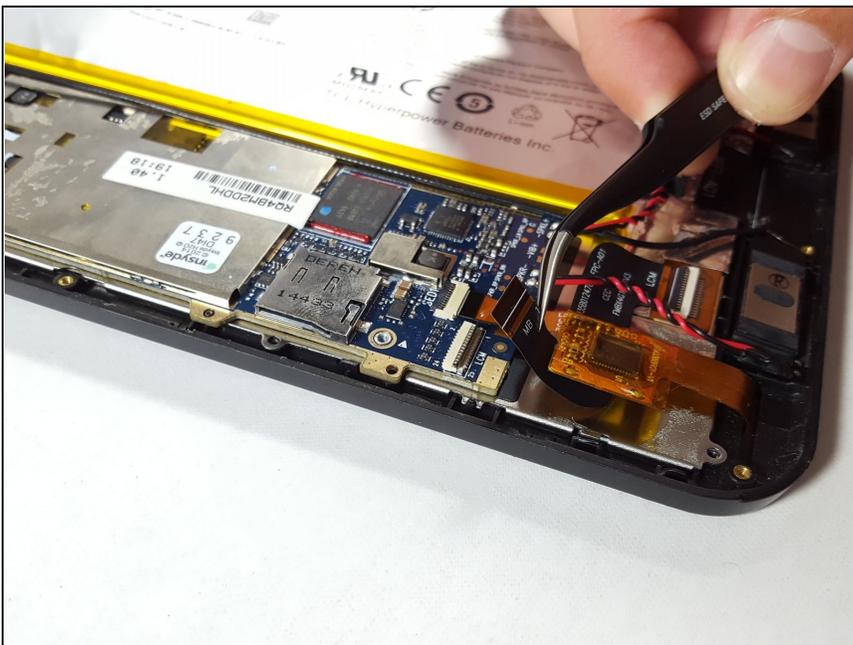

- Carefully remove the LCD screen flex ribbon cable from the system board using the tweezers.

Step 12




- Carefully remove the USB flex ribbon cable from the connection point on the system board using the tweezers.

Step 13



- Remove the two Phillips using the screwdriver with a PH00 Phillips head.

Step 14

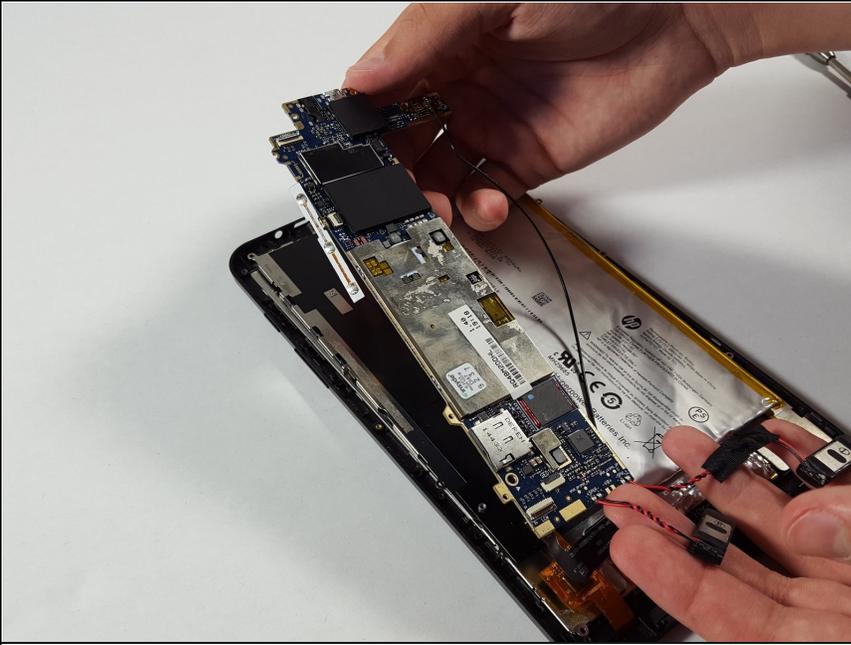

- Remove the motherboard from the device.

To reassemble your device, follow these instructions in reverse order.