




Lenovo U41-70 Teardown, Tightening Hinges

Hinges on my U41-70 were a bit loose, decided...

Written By: fixer

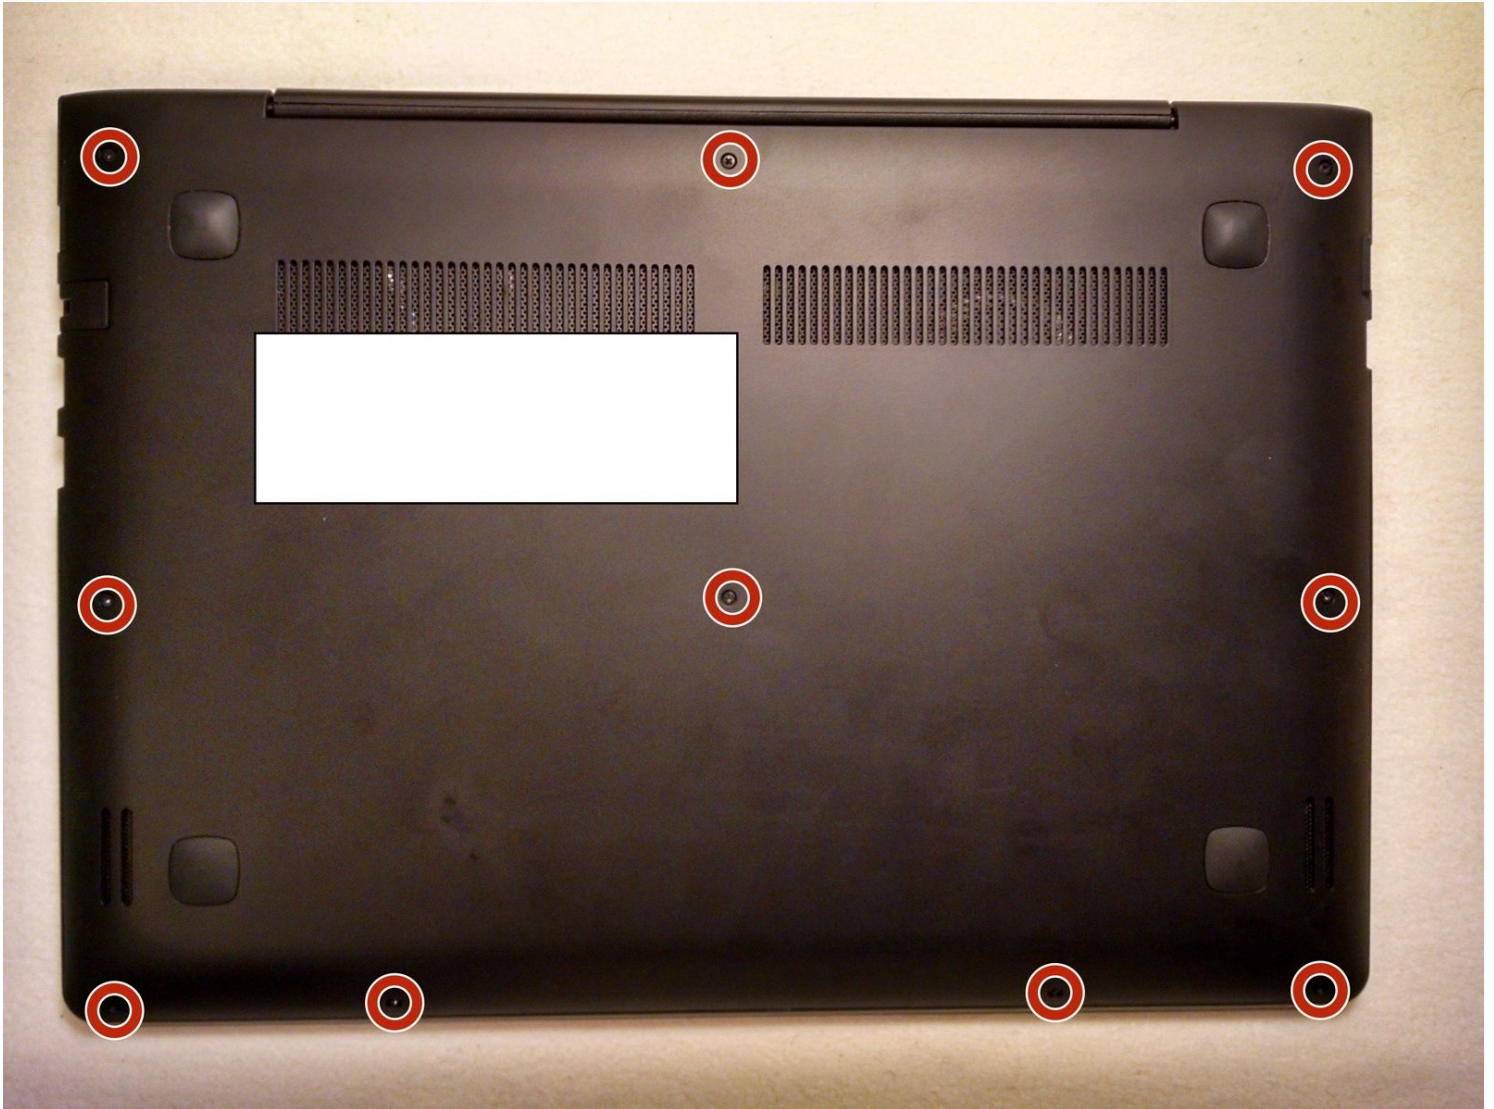

INTRODUCTION

Hinges on my U41-70 were a bit loose, decided to look inside.

TOOLS:



[Small Needle Nose Pliers](#) (1)

[Plastic Cards](#) (1)

[Phillips #0 Screwdriver](#) (1)

[iFixit Opening Tool](#) (1)

Step 1 — Tools+ Removing Backpanel Screws

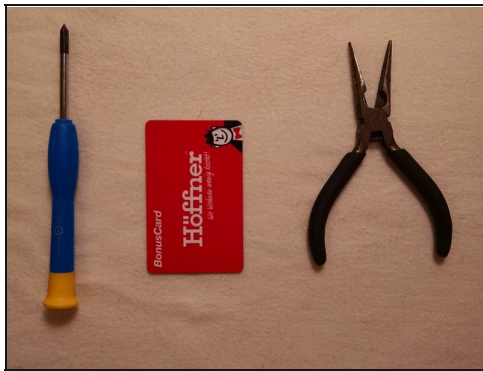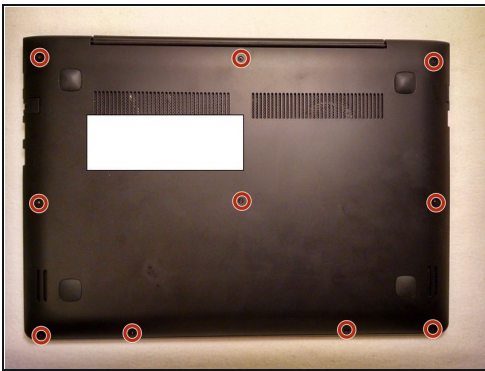


- Remove 10 Phillips Screws

Step 2 — Removing Backpanel





- Use [Plastic Card](#) to loosen Plastic clips
- Carefully work your way around
 - The whole Backpanel is held in place by plastic clips around the left, right and front

Step 3 — Open!

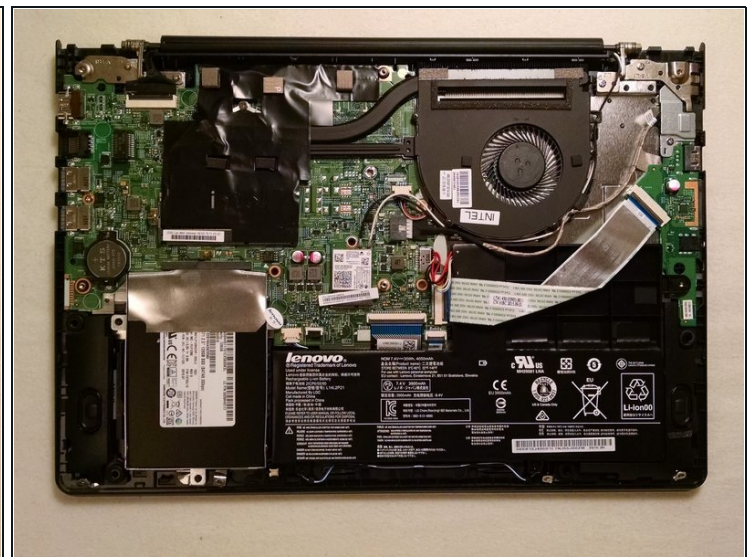


- Remove Backpanel beginning at the front and working your way to the back

Step 4 — Tighten Hinges

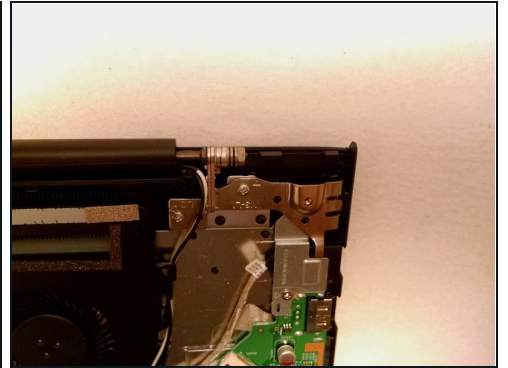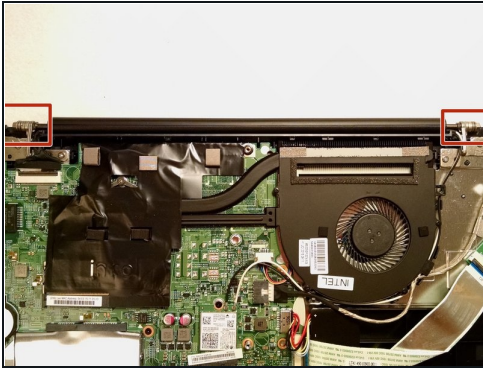

- Locate Hinges at the back

Step 5 — Tighten Hinges 2, Done!

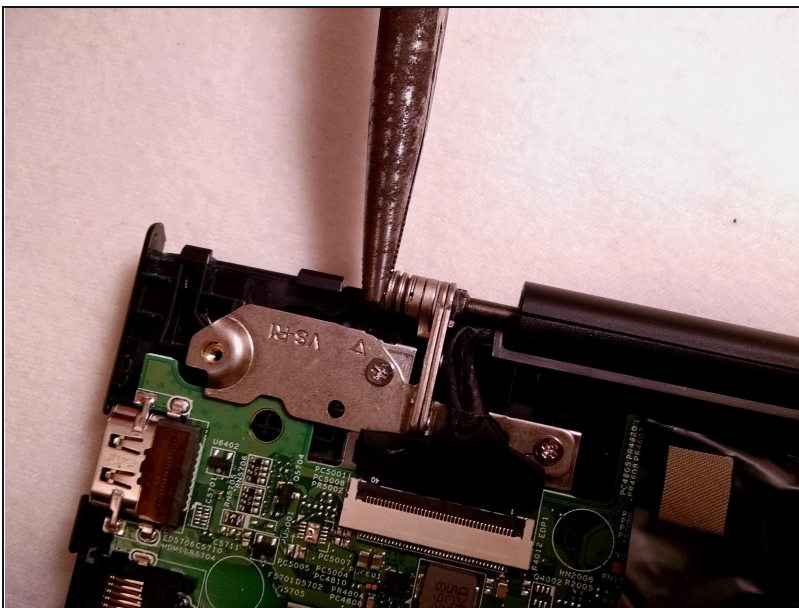

- Use Pliers or Spanner to tighten
- Righty- Tighty
- Lefty- Loosy
- Be careful not to tighten the bolts too strongly - you might later break the Plastic when trying to open the lid.