



Wiko pulp 4g Touchscreen and display Replacement

Follow the lead replacement touchscreen until step 6 and continuing with this for the replacement of the assembled display with touchscreen

Written By: Smilzo





PARTS:


- [New Item](#) (1)
-

Step 1 — Touch screen




- Remove back cover
- Remove battery

Step 2

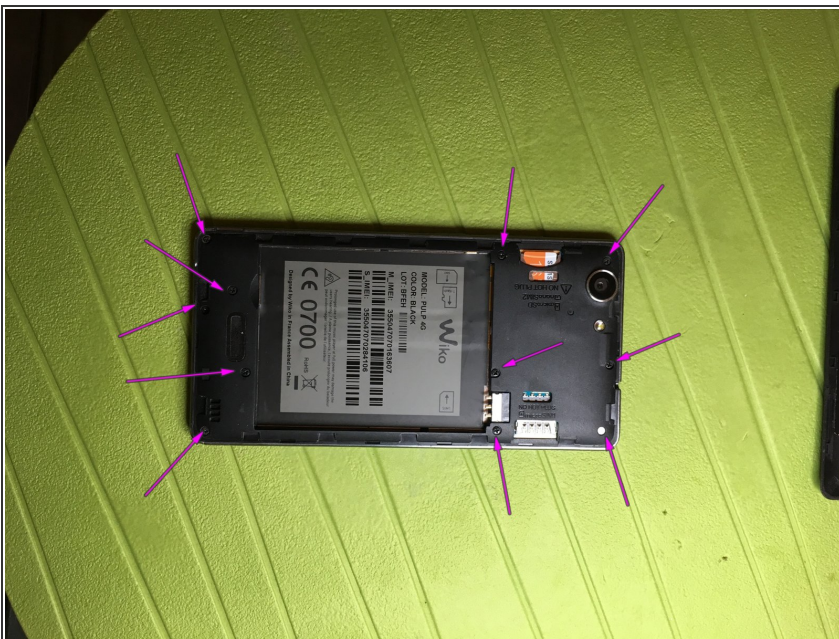



- remove the screws marked, attention is covered by a white sticker

Step 3

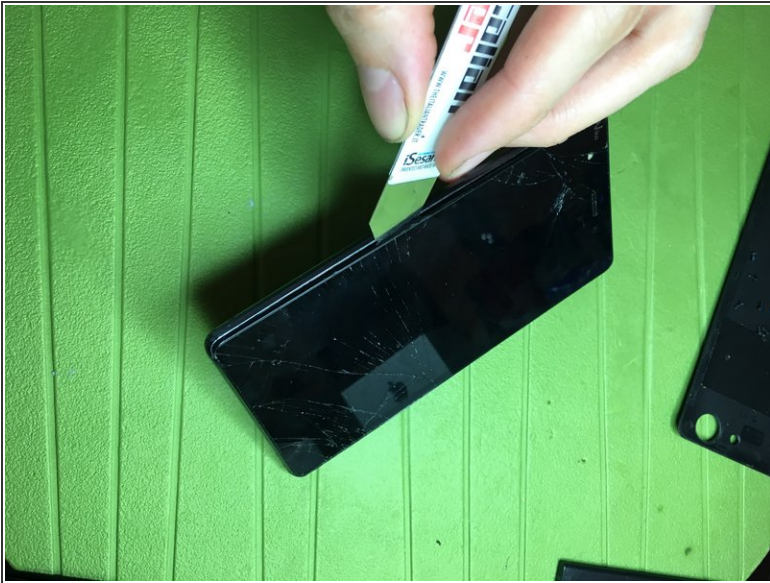

- using a thin tool separate the middle frame from the body display

Step 4

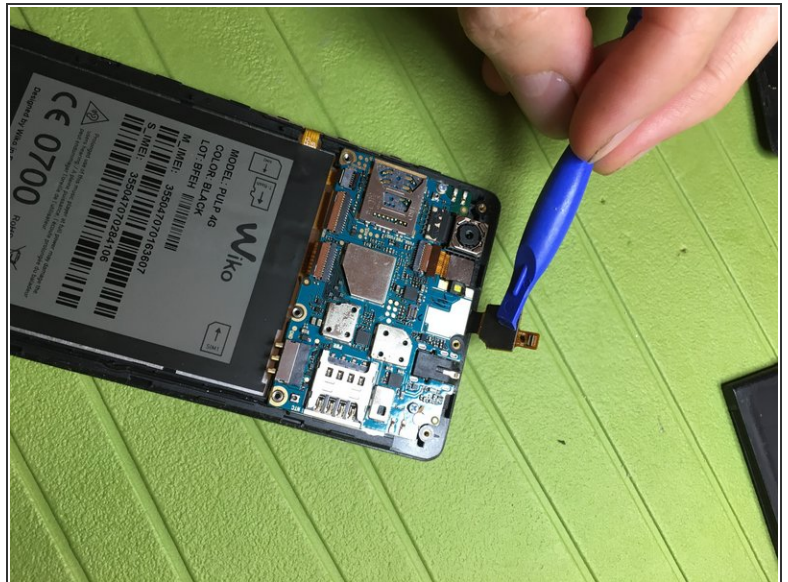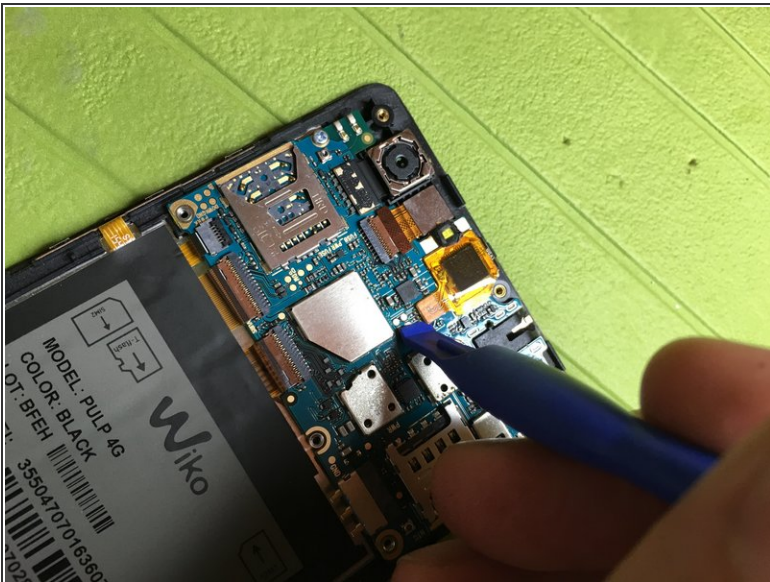


- unhook touchscreen connector

Step 5




- Remove 2 screws securing the motherboard
- Unfasten the connectors
- remove front and rear cameras

Step 6

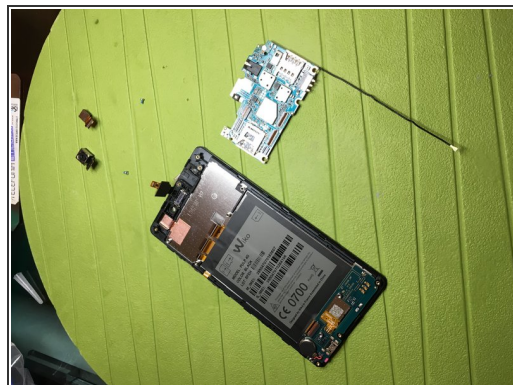


- Unhook cable connection between top and bottom card
- remove top motherboard

Step 7

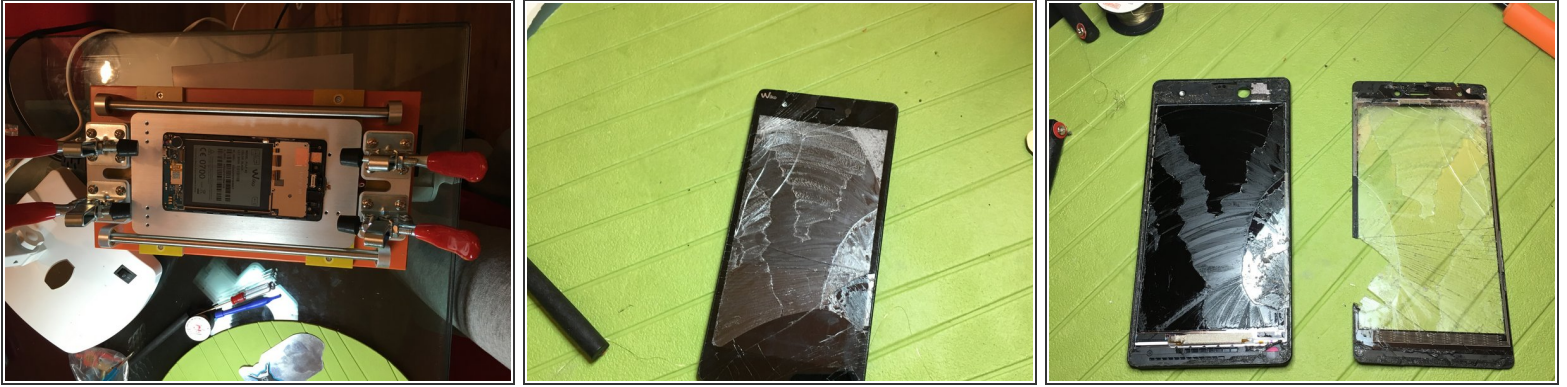


- Heat the phone with a 80-degree plate or with an appropriate dryer
- With the help of tools or special thin wire begin to separate from the touch glass display
- Utmost care not to break the display, be sure to insert between the touch screen display instruments and not between glass and touch screen ..
- There are no flat key is therefore the only attention to the display

Step 8

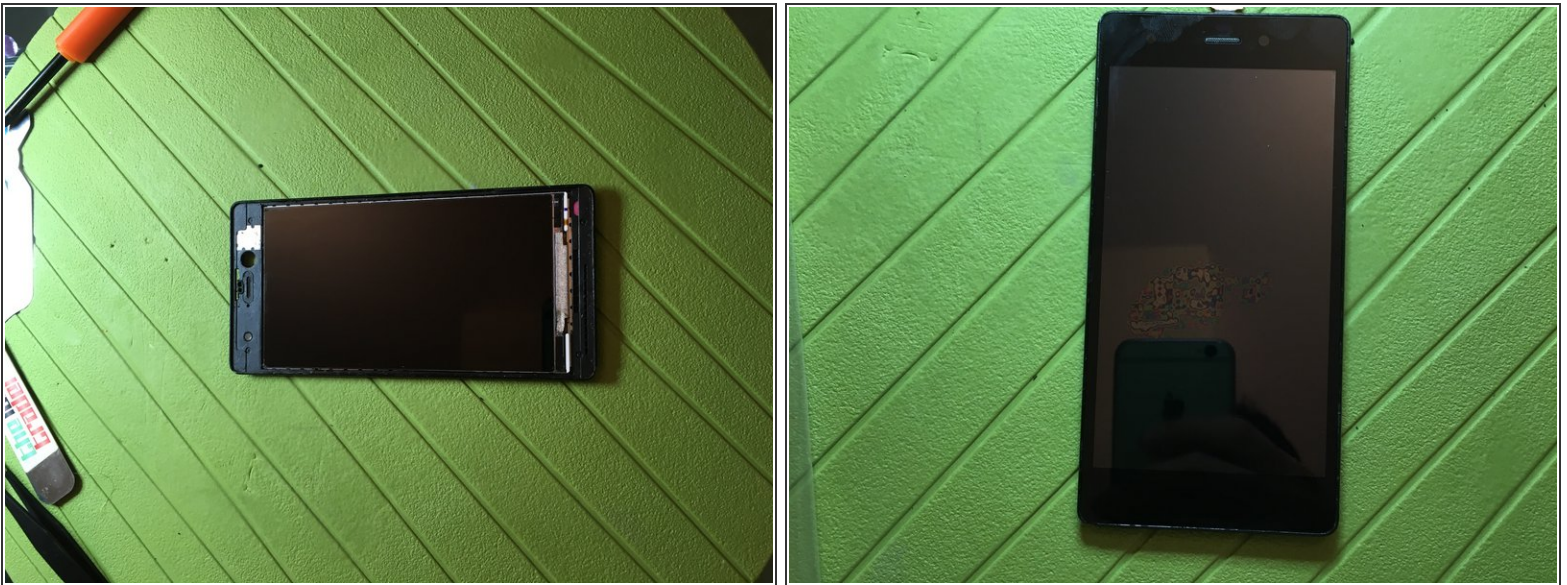

- Clean the display from the sticky residue
- applying adhesive on the edges and the new touchscreen glass

Step 9 — Touchscreen and display

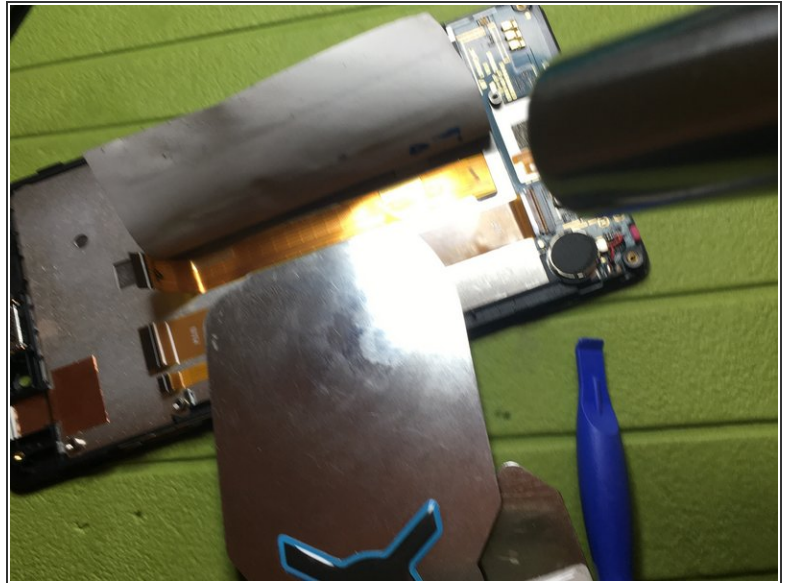

- Follow the guide "replace touchscreen" until the 6 step, and jump the step 7 & 8.
- With an heat gun or an other source of heat to pull off the adhesive holding down the battery.
- With the battery removed applied another bit of heat gun to remove the Flat Display

Step 10



- With heat and and an small ESD tweezers lift the glass from the frame and extract touch screen and display from the phone body

To assemble the device, follow these instructions in reverse order.