


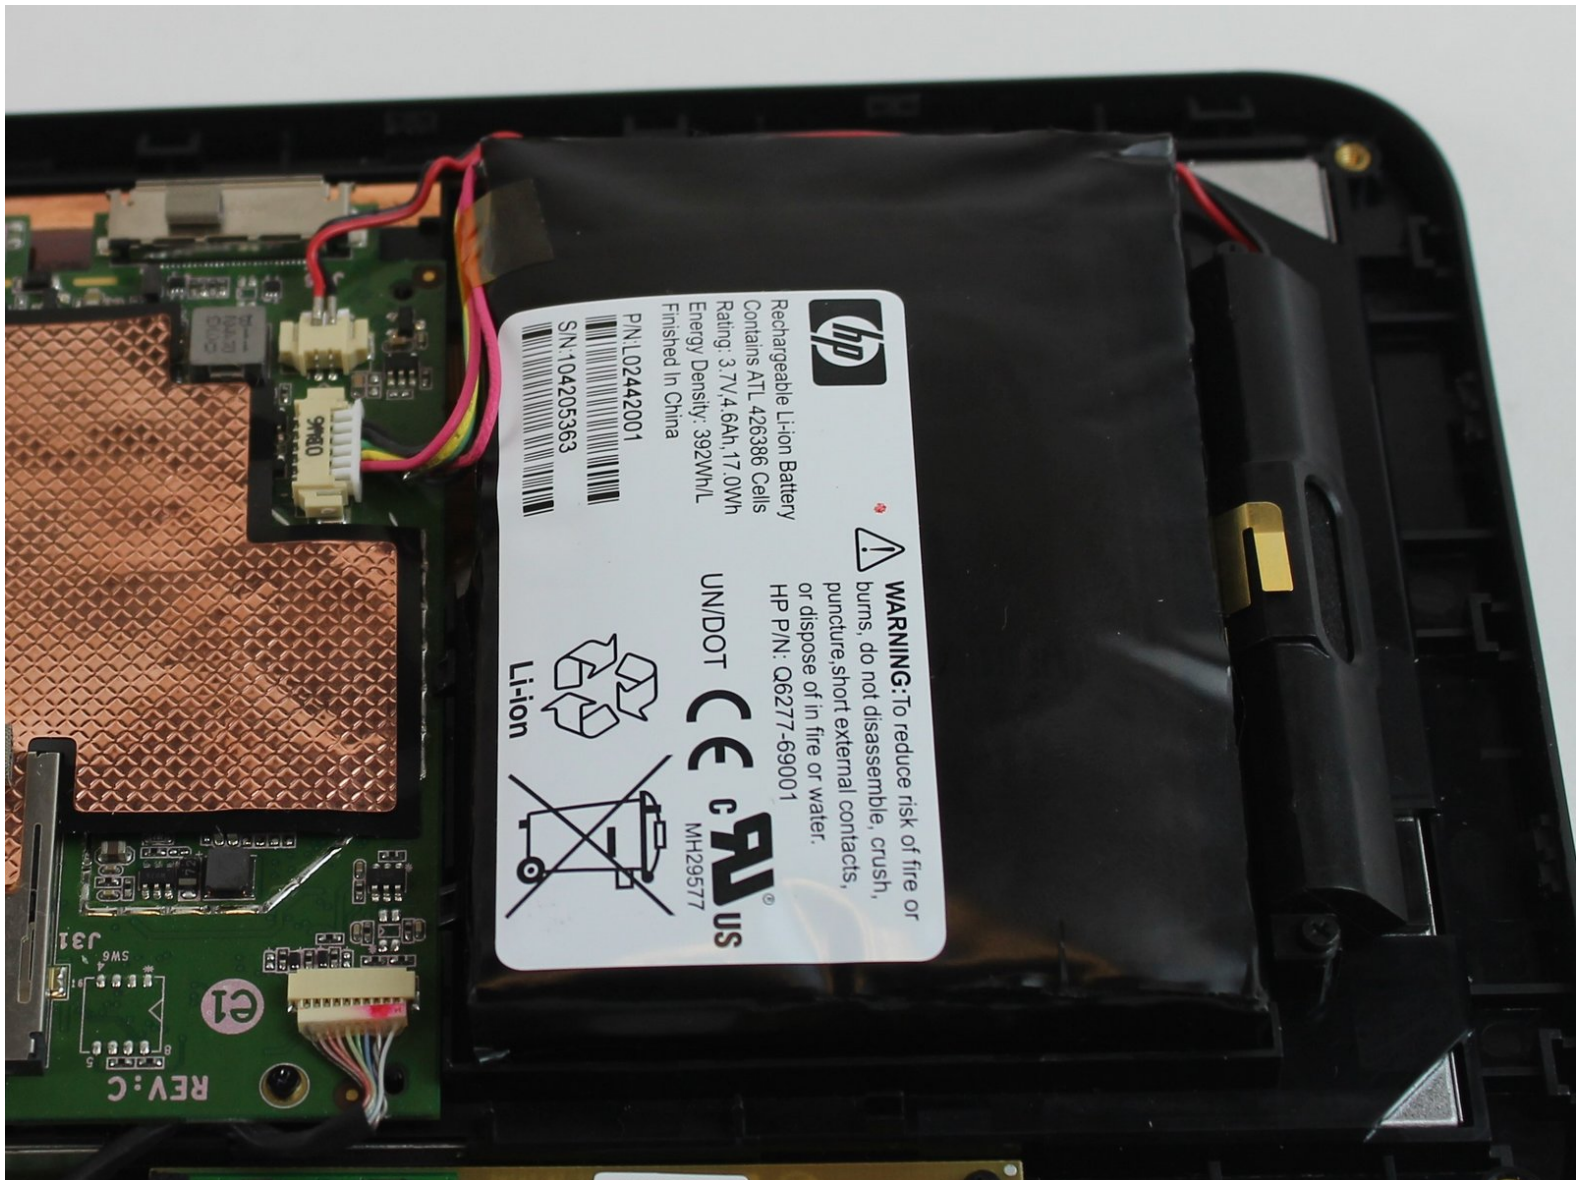

HP eStation Zeen Battery Replacement

This guide is used to replace the battery of the HP eStation Zeen.

Written By: dalton hale



INTRODUCTION


After following the troubleshooting procedures and the device still will not turn on it may be time to replace the battery.



TOOLS:


- [Phillips #0 Screwdriver](#) (1)
 - [Metal Spudger](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery

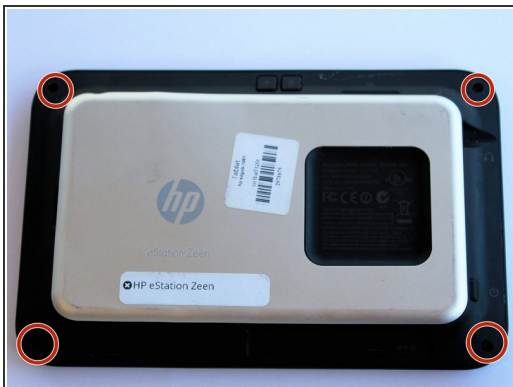

- Remove the screw caps using a metal spudger.
- Remove the four 6mm screws using a Phillips #0 screwdriver.

Step 2

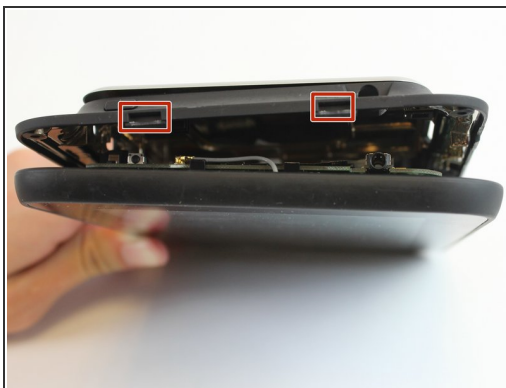

- Unclip each side by inserting a plastic opening tool and slide it along edges.
- Remove the back panel by lifting the panel away from the device.

Step 3



- Disconnect the battery clip with a plastic opening tool.

⚠ The clip is very fragile.

Step 4



- Remove the battery using the plastic opening tool.

i There is glue holding the battery down so it will require some effort.

To reassemble your device, follow these instructions in reverse order.