



# Lenovo Vibe Z2 Pro Charging Assembly Replacement

In this guide we'll show you how to replace the charging assembly and the headphone jack for your Lenovo Vibe Z2 Pro

Written By: Bryan Sepulveda



## INTRODUCTION


If after replacing your battery, your phone is still not charging, you might have a faulty charging assembly. Learn how to replace it in this guide

---

### TOOLS:

- [Metal Spudger](#) (1)
  - [Spudger](#) (1)
  - [Phillips #000 Screwdriver](#) (1)
  - [Tweezers](#) (1)
  - [T4 Torx Screwdriver](#) (1)
-

## Step 1 — Lenovo Vibe Z2 Pro Backplate Disassembly

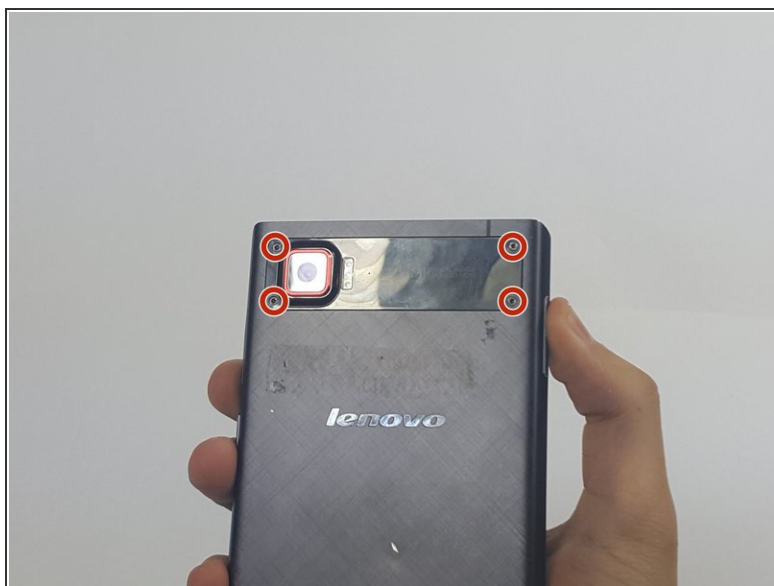

- Remove the 4.9 mm torx head screws located on the camera plate on the back of the phone

## Step 2



- Remove the 3.65 mm Torx head screws at the bottom of the phone.

### Step 3



- Remove the SIM card tray by pushing a pin into the hole on the side of the phone.

### Step 4



- Push the Spudger along the gap between the phone and the backplate to separate them.





## Step 5



- Carefully pull the backplate away from the phone.

## Step 6 — Battery

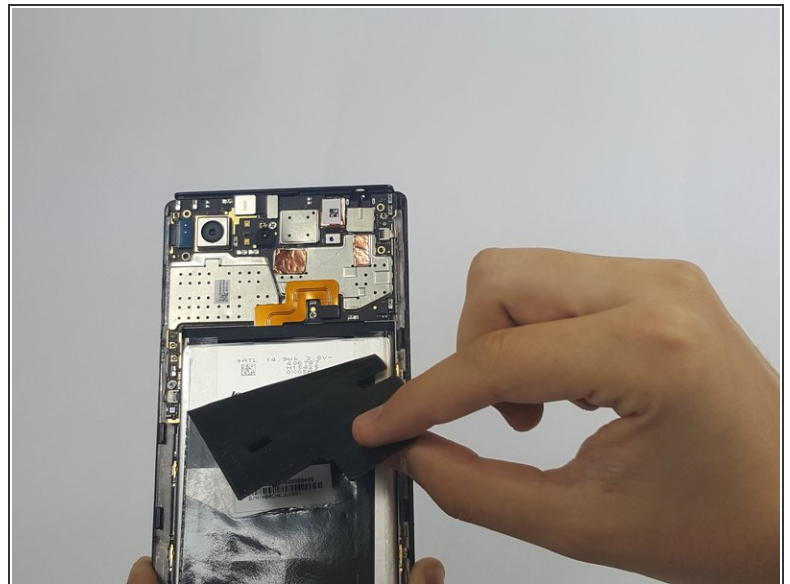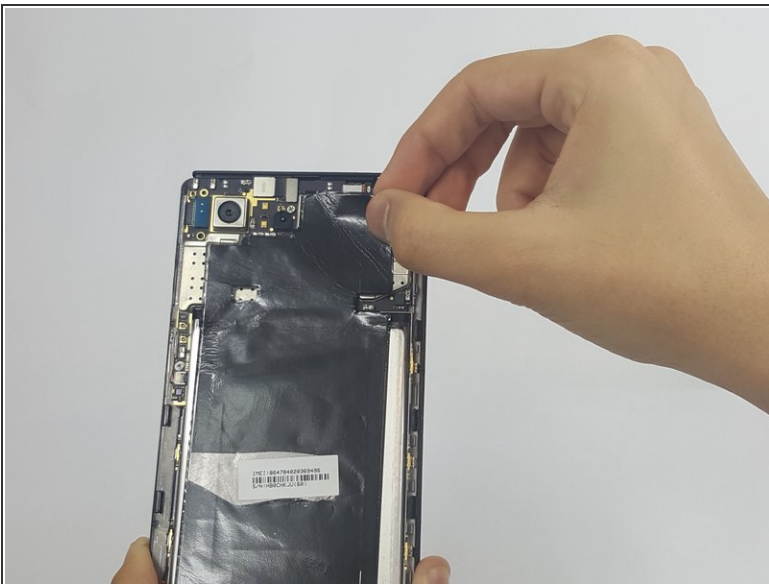

- Peel away protective the film using your hands.

## Step 7




- Remove any adhesive strips holding the battery in place gently using a fingernail or spudger.
- ⚠ The regular black nylon spudger should be used whenever possible, especially around batteries.

## Step 8



- Disconnect the orange battery ribbon cable by gently lifting with a spudger.

## Step 9

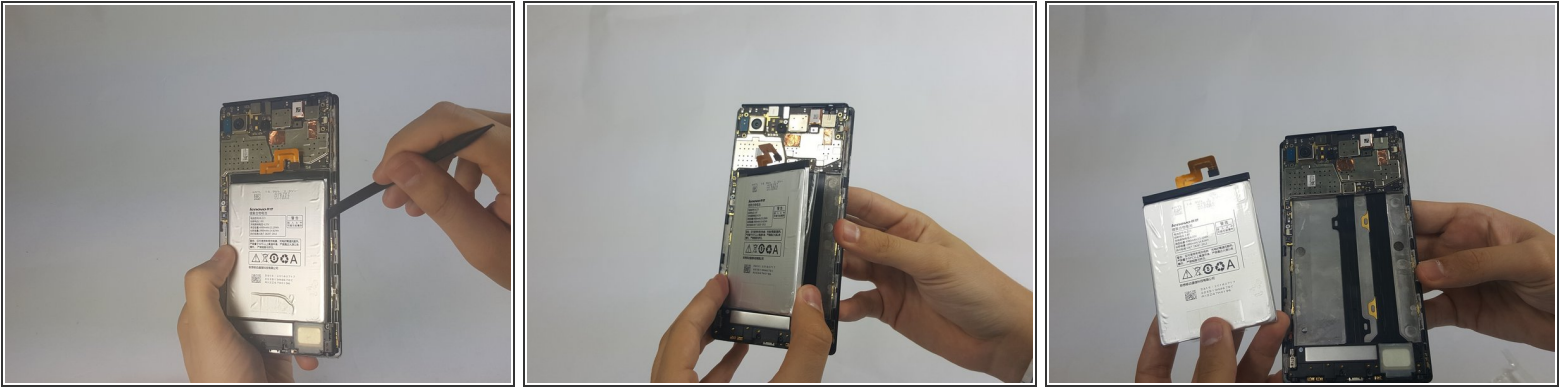

- Insert a fingernail or spudger into either side of the battery and lift upward.
- Remove the battery from phone.


## Step 10 — Motherboard



- Remove the 3.15mm Phillips Head #000 screws from motherboard.




## Step 11

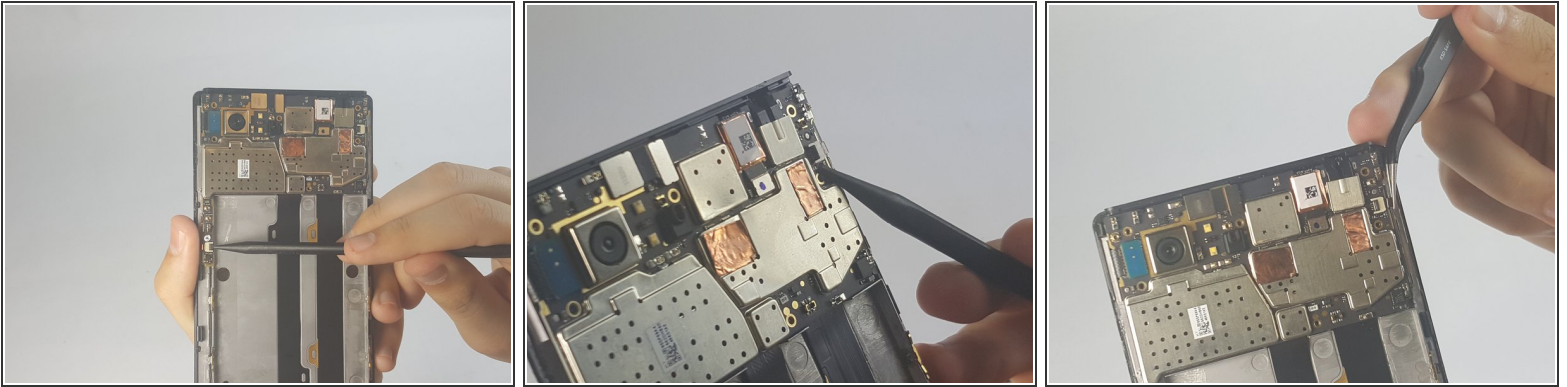

- Disconnect the two ribbon cables by gently lifting on the black hinges and pulling away with tweezers



## Step 12

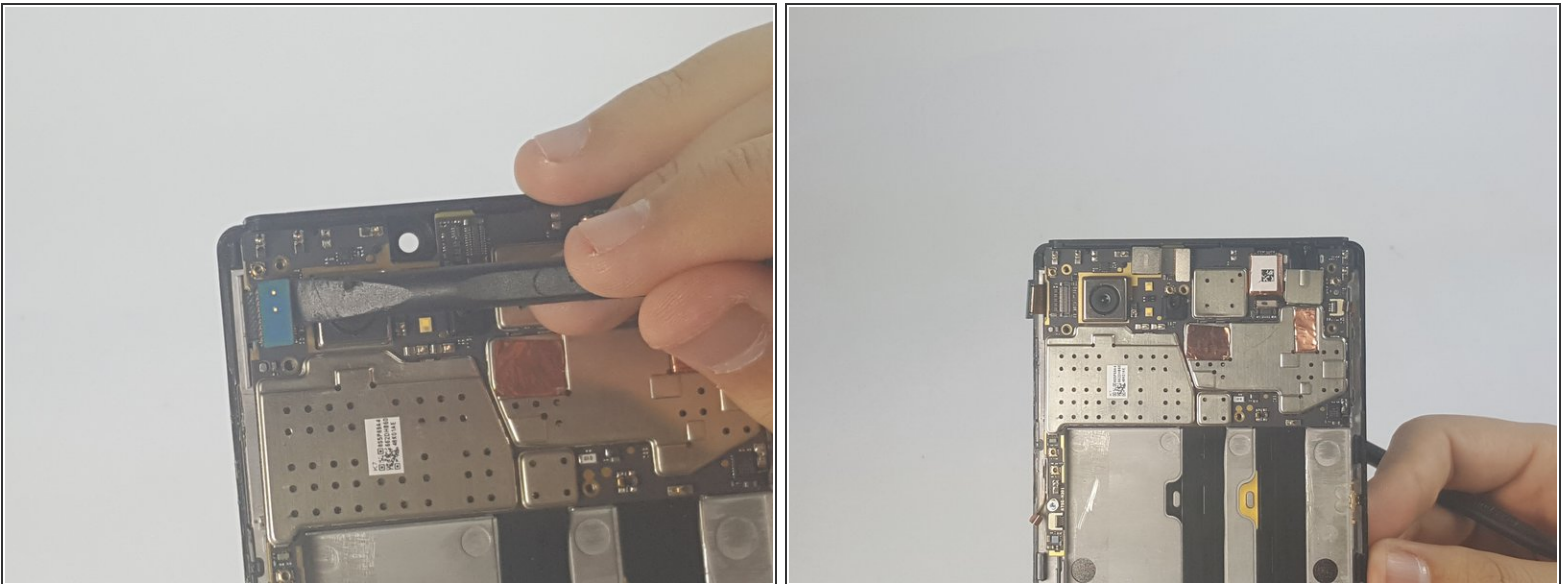

- Gently disconnect the rear-camera connector





## Step 13

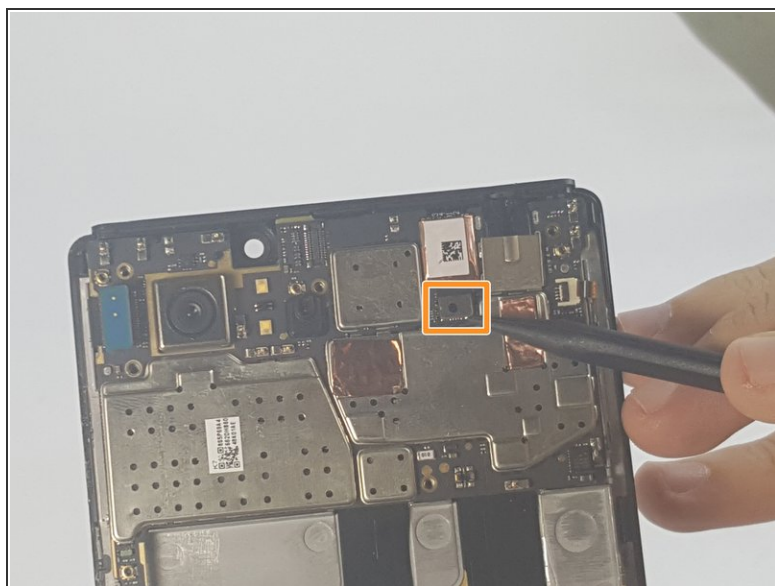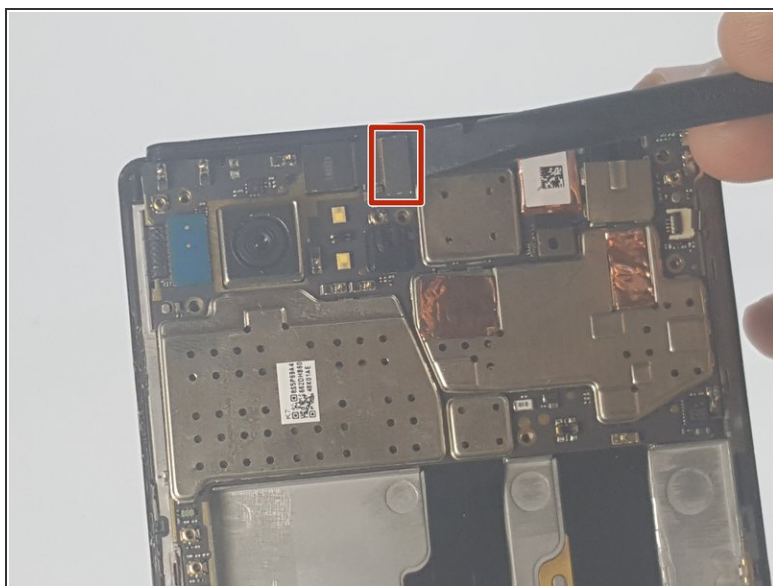


- Gently remove the front-facing camera by gently lifting on the connector tab.
- Remove the other connector by gently lifting with a spudger.

## Step 14

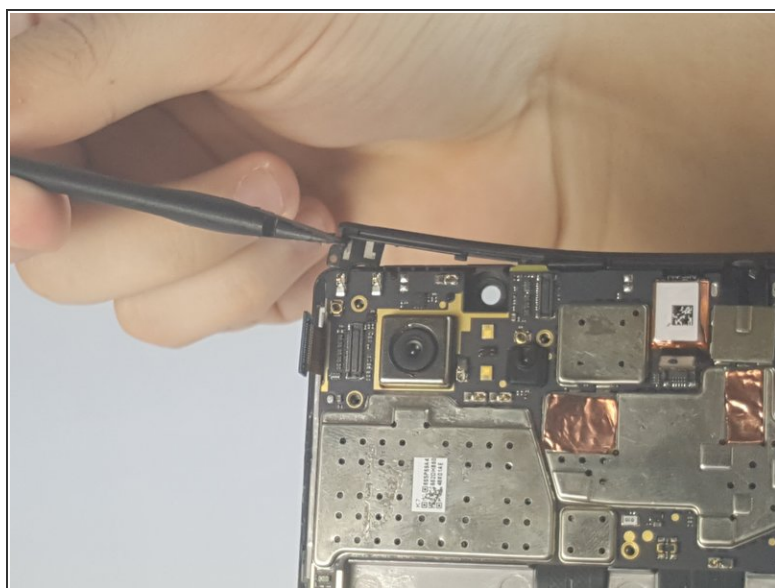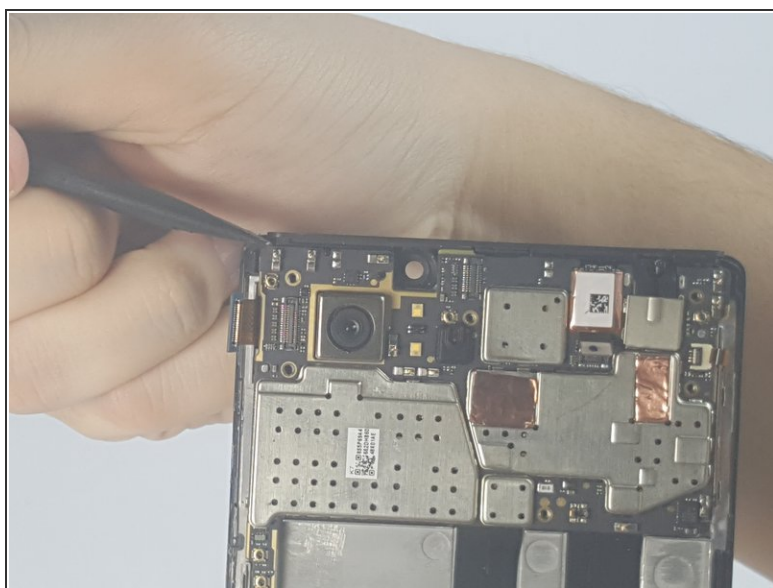


- Pry off the plastic brace along the top edge of the phone

## Step 15

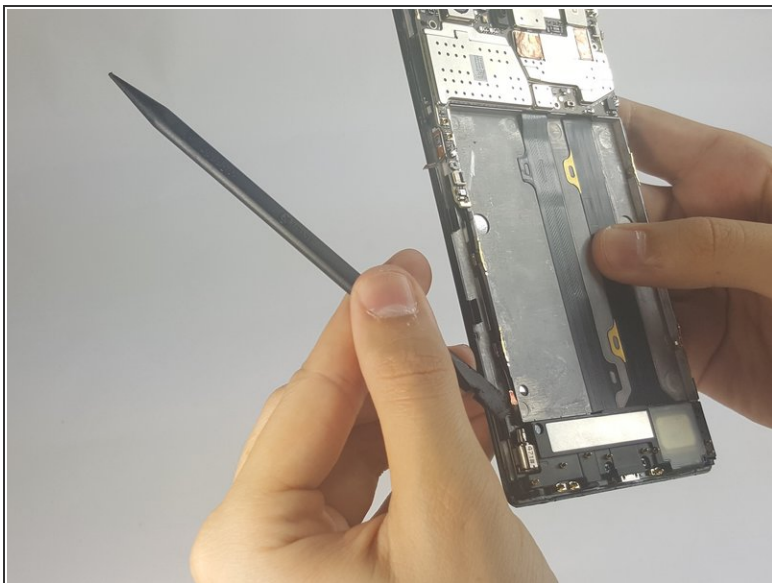

- Remove the antenna connected to the bottom piece of the screen plate


## Step 16

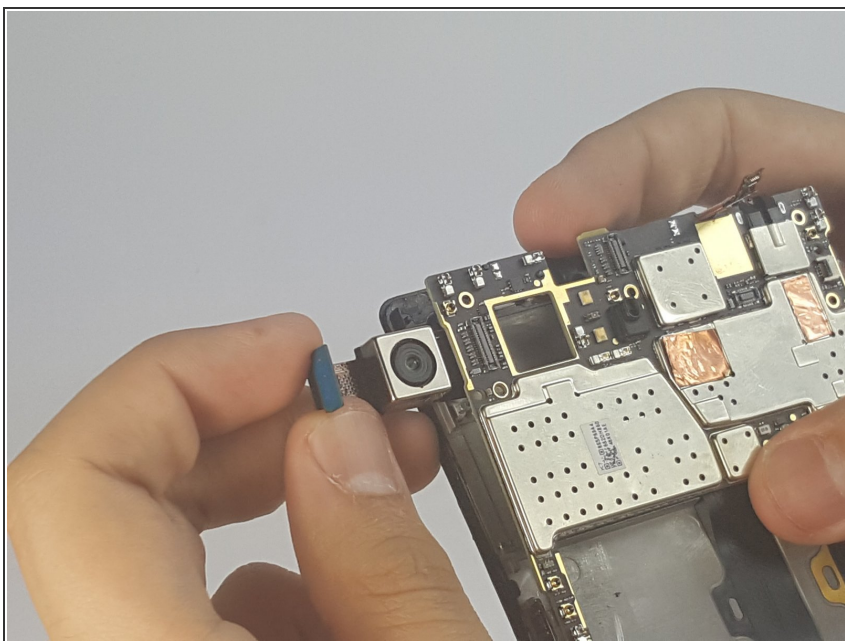

- Gently lift the motherboard off the frame
- Pull the camera out from behind the motherboard




## Step 17

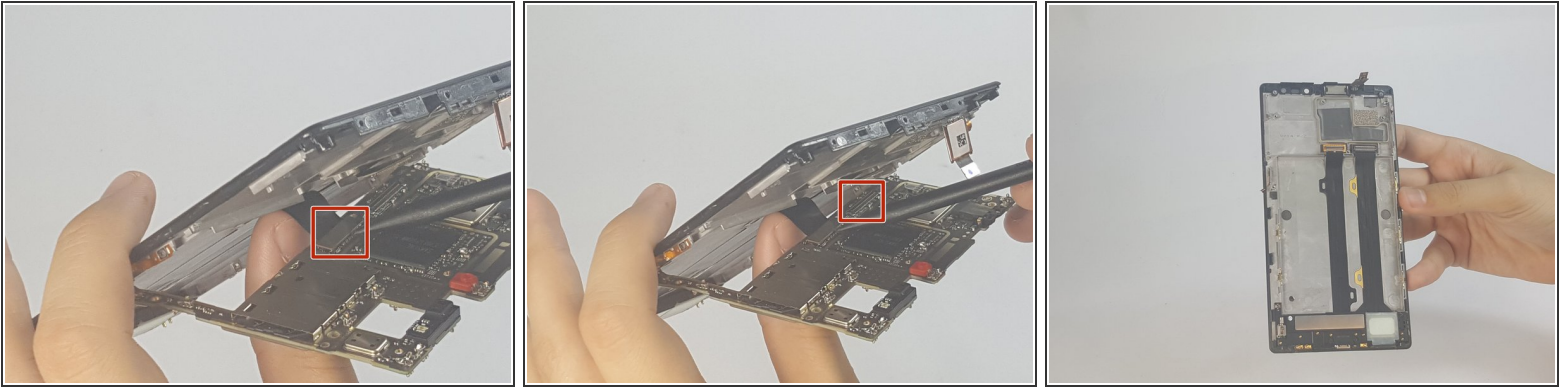




- Using a spudger, disconnect the charging port assembly cable and the screen connection cable.
- Remove the motherboard completely.

## Step 18 — Charging Assembly & Headphone Jack

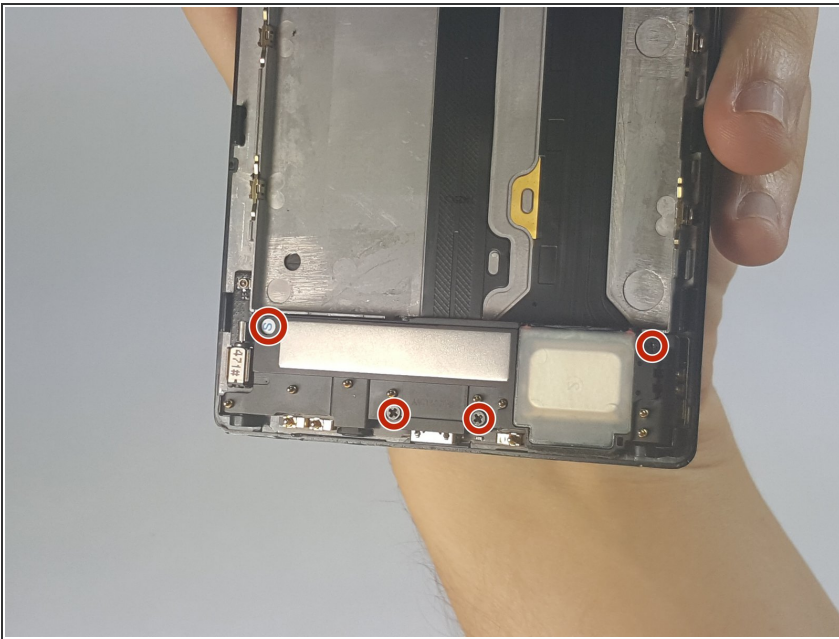

- Remove the 3.6 mm Phillips head screws from the charging assembly

## Step 19

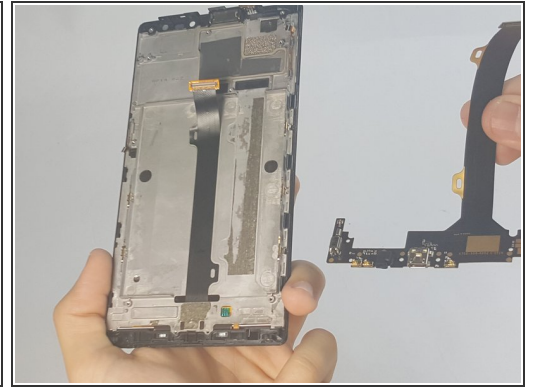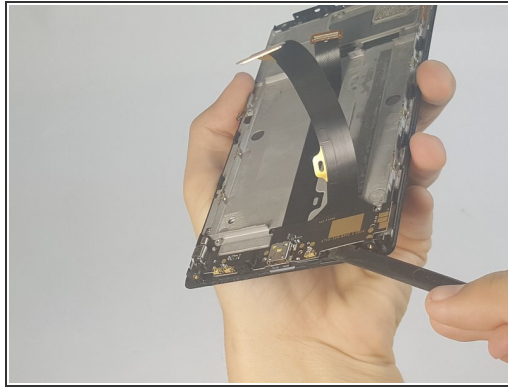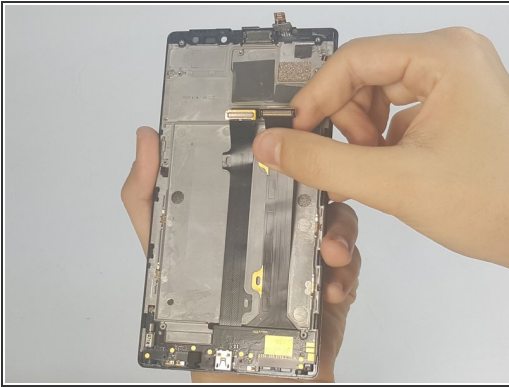

- Gently peel the flat cable away from the screen
- Gently lift the charging assembly using a spudger

To reassemble your device, follow these instructions in reverse order.