



Lenovo Yoga 700-11ISK Back Panel Replacement

All of the Yoga 700's components can be replaced by removing the back cover. This guide walks through the steps it takes to remove it.

Written By: Sean Wong




INTRODUCTION

The back panel covers and protects all the internal components of the laptop. Only remove this cover if you need to service or replace major internal components inside of the laptop. If your back panel is damaged or broken, use this guide to remove and replace it.

TOOLS:

- [T5 Torx Screwdriver](#) (1)
-

Step 1 — Back Panel

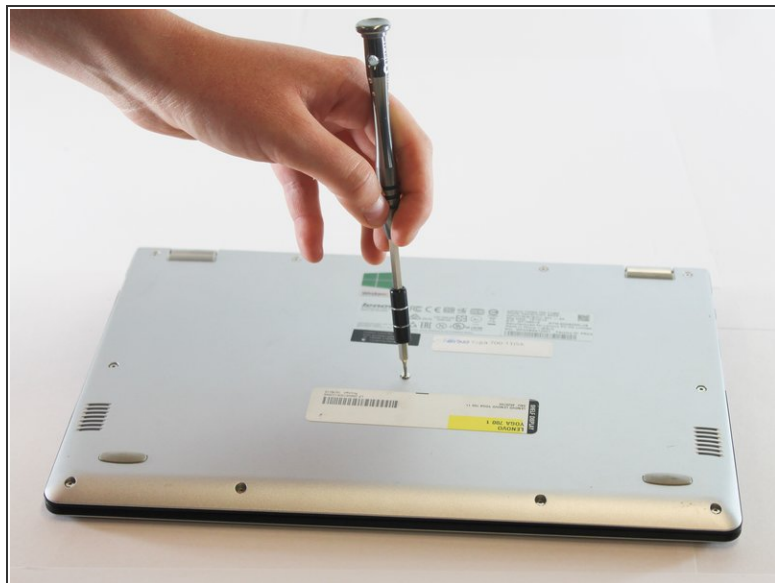

- Flip your device so that the bottom panel is facing up.
- Remove the eleven 5mm Torx T5 screws from the back panel.

Step 2



- Use a spudger to unclip clips on the front and near the USB ports on each side
- Lift the back panel off

To reassemble your device, follow these instructions in reverse order.