

iBook G4 14" 1.42 GHz Battery Replacement

Written By: Walter Galan




INTRODUCTION

Changing the battery is easy -- all you need is a coin.



Step 1 — Battery

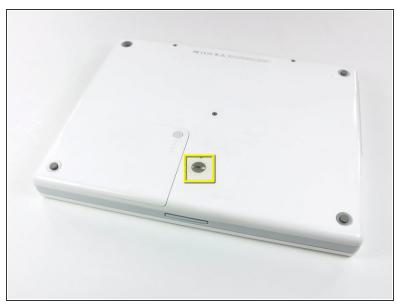



- Use a coin to rotate the battery locking screw 90 degrees clockwise.
- Lift the battery out of the computer.

To reassemble your device, follow these instructions in reverse order.