



How to load HP Deskjet 6122 paper

Many problems are associated with a paper tray being low. This is a common problem and is quite easy to fix.

Written By: Joe



INTRODUCTION


This guide will walk you through how to change the paper and common problems and solutions associated with being low on paper.

Step 1 — How to load HP Deskjet 6122 paper



- Open the paper tray to see if it is empty.

Step 2

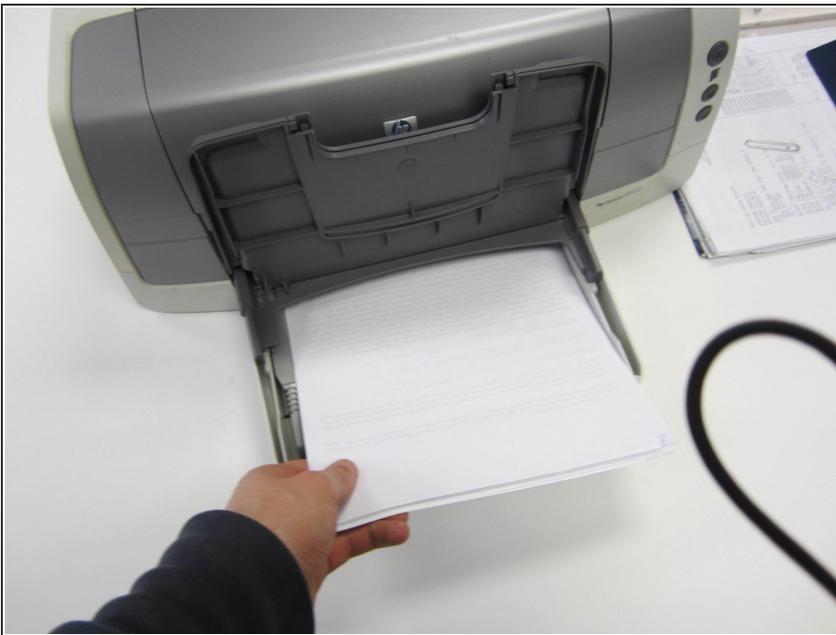


- If the paper tray is empty, add paper to the tray.
- If there is already paper in the tray, realign the paper so that it fits in the gears, and can feed through properly.

Step 3



- Ensure that all paper is in the correct tray.
- ⓘ The correct tray is on the upper deck of the printer.

Step 4

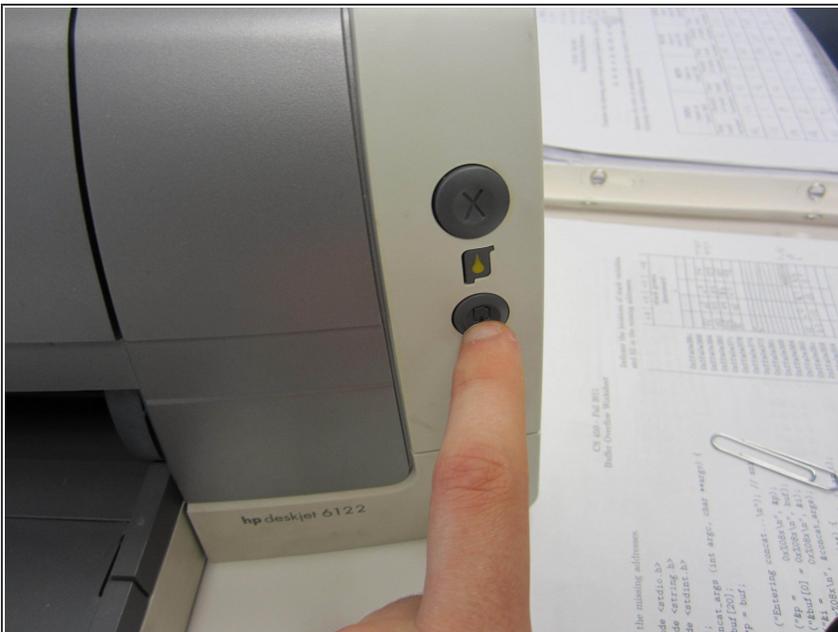


- Run the printer to verify it now prints.
- ⓘ If the paper still does not run through the printer, inspect the paper tray again.

Step 5



- Remove any paper that looks to be overloading the tray feeder.
- ⓘ Sometimes there can be too much paper in the tray, preventing it from working properly.

Step 6

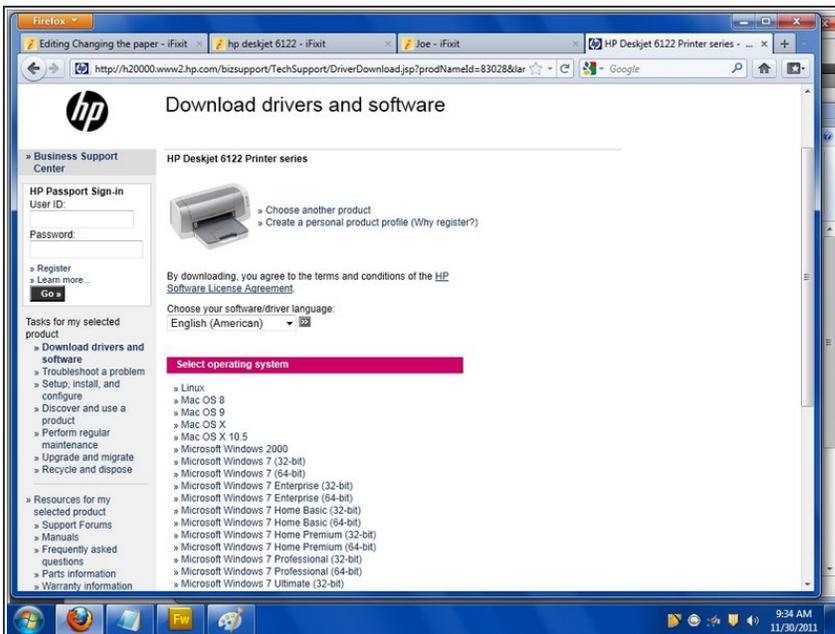

- Try to print one last time. If it still fails, consider consulting a page to update drivers.

To reassemble your device, follow these instructions in reverse order.