


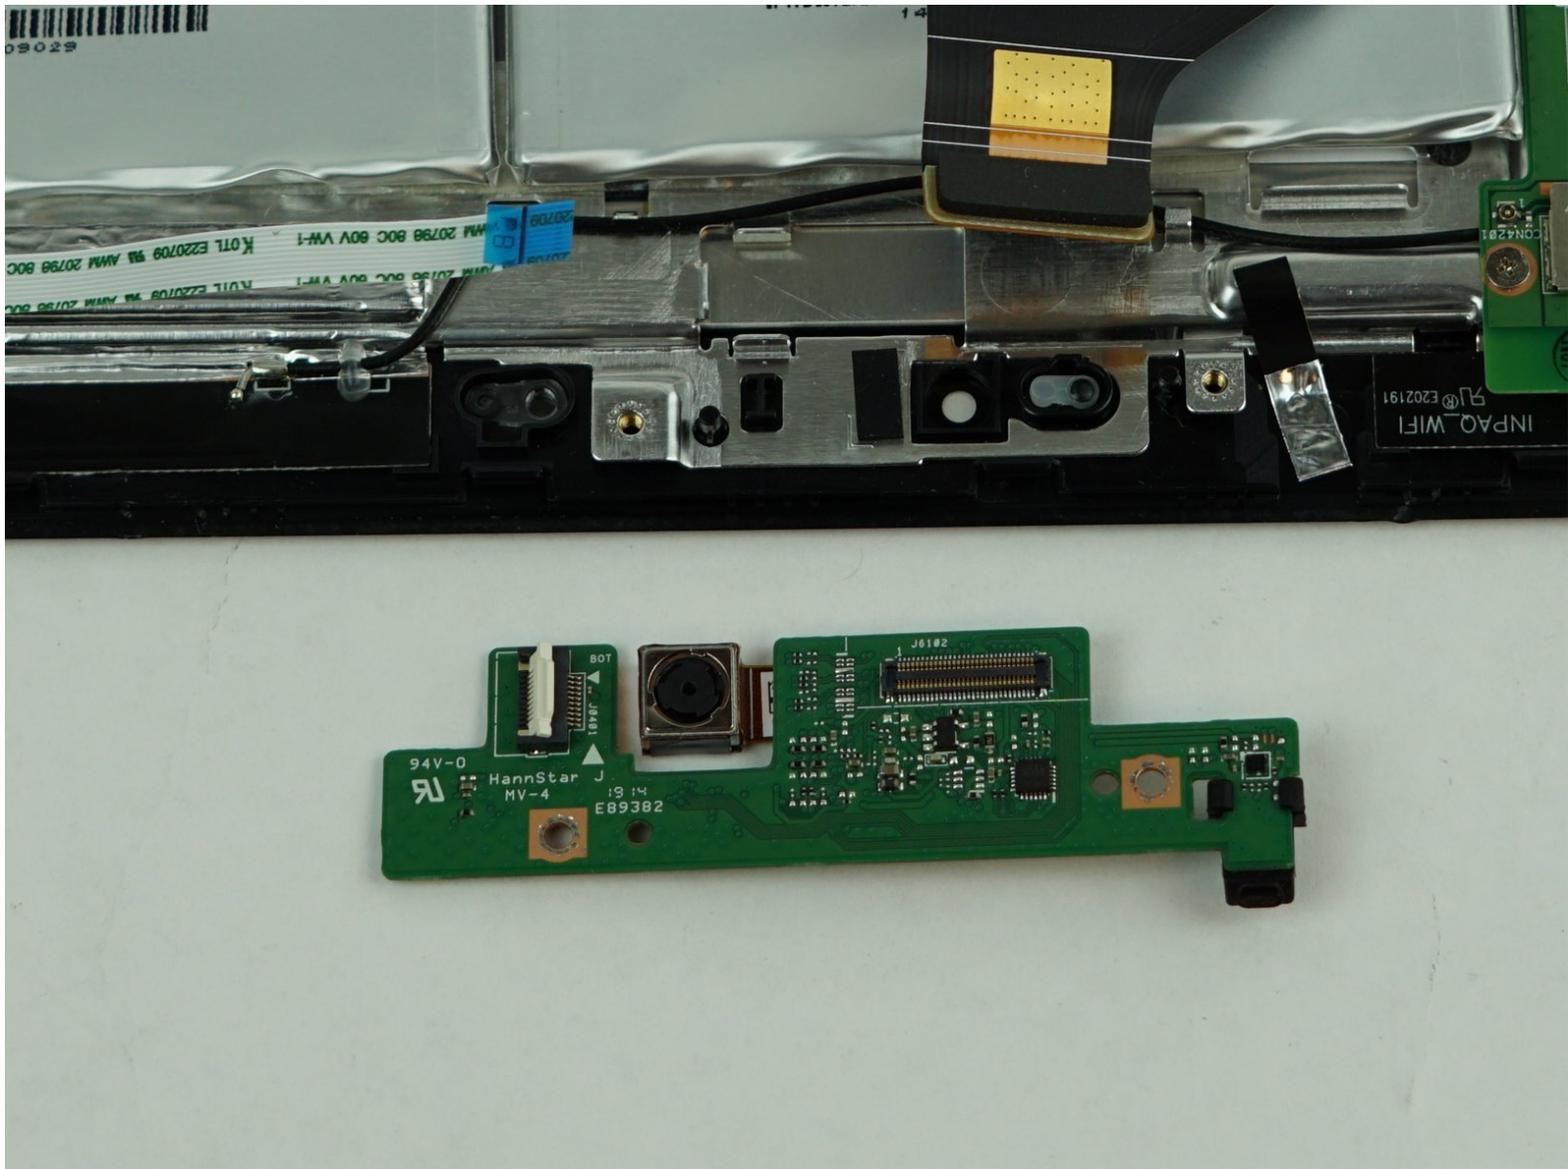

Asus Transformer Book T100TAR Front Camera Replacement

Replace and repair the front-facing camera on your tablet.

Written By: Alyssa Ballesteros



INTRODUCTION

If the front-facing camera on your laptop is broken, this guide will teach you step-by-step on how to disassemble your laptop and replace the camera.

TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Front Camera



- Detach and separate the screen from the keyboard by pressing the silver release button at the base of the tablet.


Step 2



- Take the metal spudger and insert it into the seam of the rear cover casing and gently pry upwards.
- If done correctly, you should feel the clips release.
- Ensure that all the clips are released by sliding the spudger along the four edges of the tablet.


⚠ Do not force the clips to release. This will cause them to break, and if broken, the screen will become loose. Open the rear cover gently and with caution.

Step 3

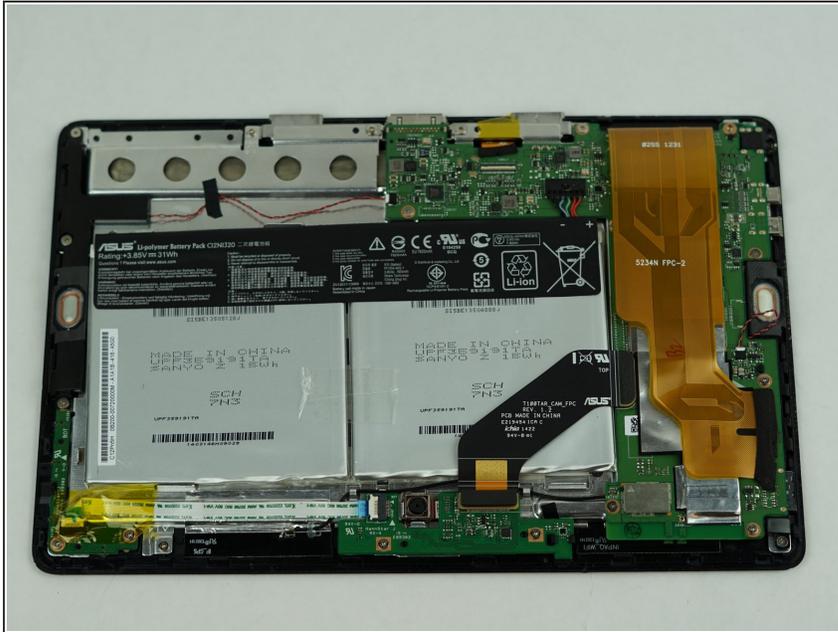


- Take off the rear case

Step 4

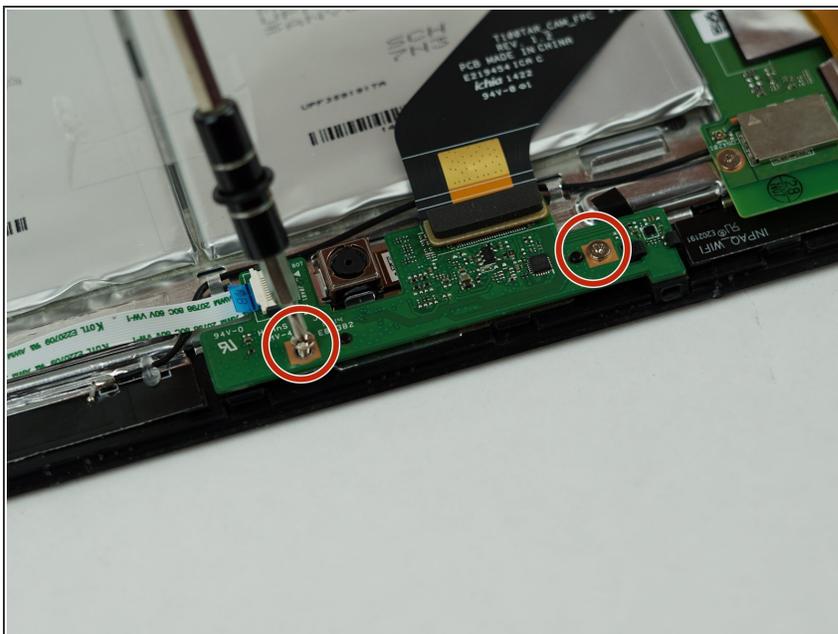


- Unscrew two 5mm screws from the camera board using a Phillips #0 Screwdriver.

Step 5

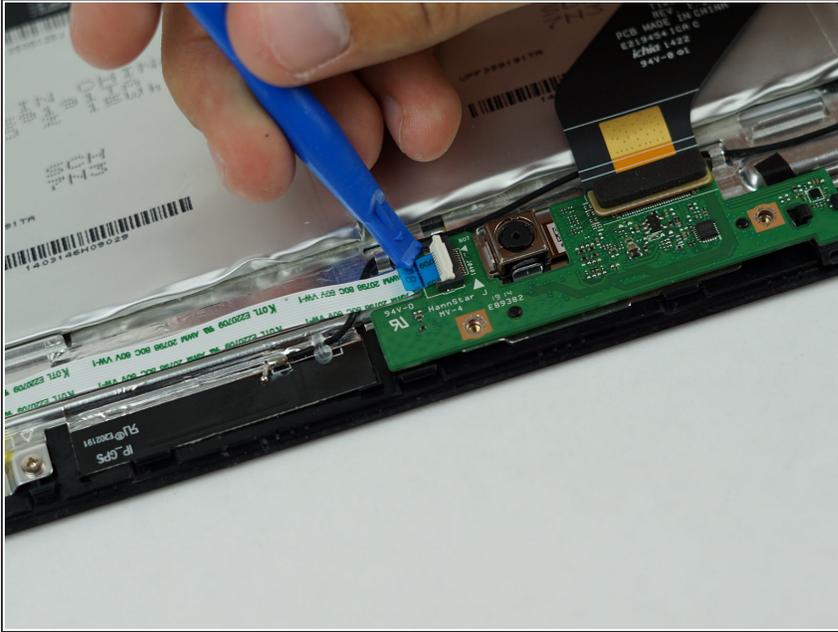

- Using a plastic opening tool, lift the white tab holding the power button cable, located on the camera board and pull out the cable strip.

Step 6

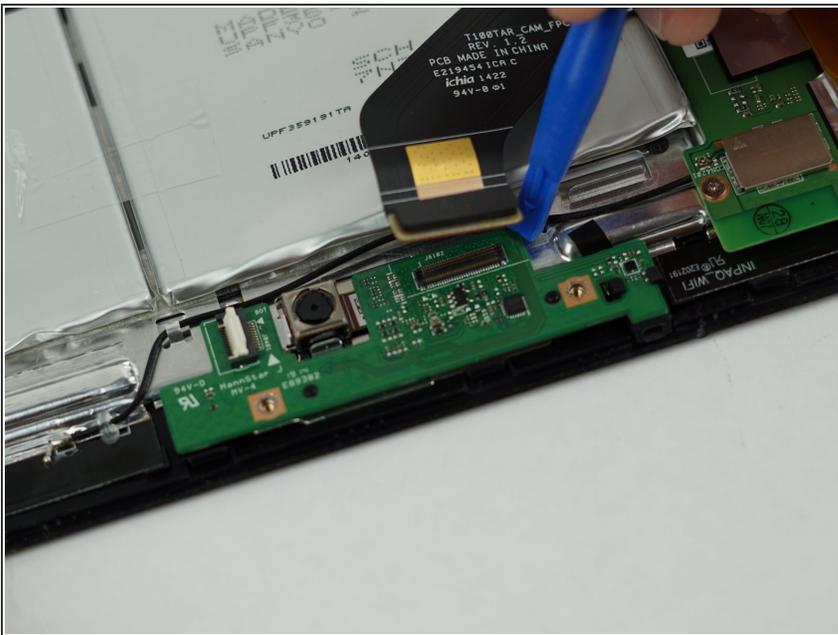

- Also using the plastic opening tool, gently lift up and remove the large black strip connecting the camera board to the motherboard.

Step 7



- Remove the camera board.

To reassemble your device, follow these instructions in reverse order.