



iRobot Roomba 770 Filter Replacement

This guide shows you how to replace the filters on your iRobot Roomba 770.

Written By: Andrew Horvath



INTRODUCTION

If used regularly, the filters of this device should be changed every 2 months. This guide will teach you how to replace the filters on your iRobot Roomba 770.

Step 1 — Filter




- Orient the Roomba so that the "Clean Button" is up, and so that the words are right side up.
- Push down on the large button on the part of the Roomba that is closest to you. Pull the back of the Roomba (the dust bin) out.

Step 2



- Take the dust bin and orient it so that the curved part is facing away and the clear side is facing up.
- Push the small yellow tab inward, and swing it out toward you.

Step 3

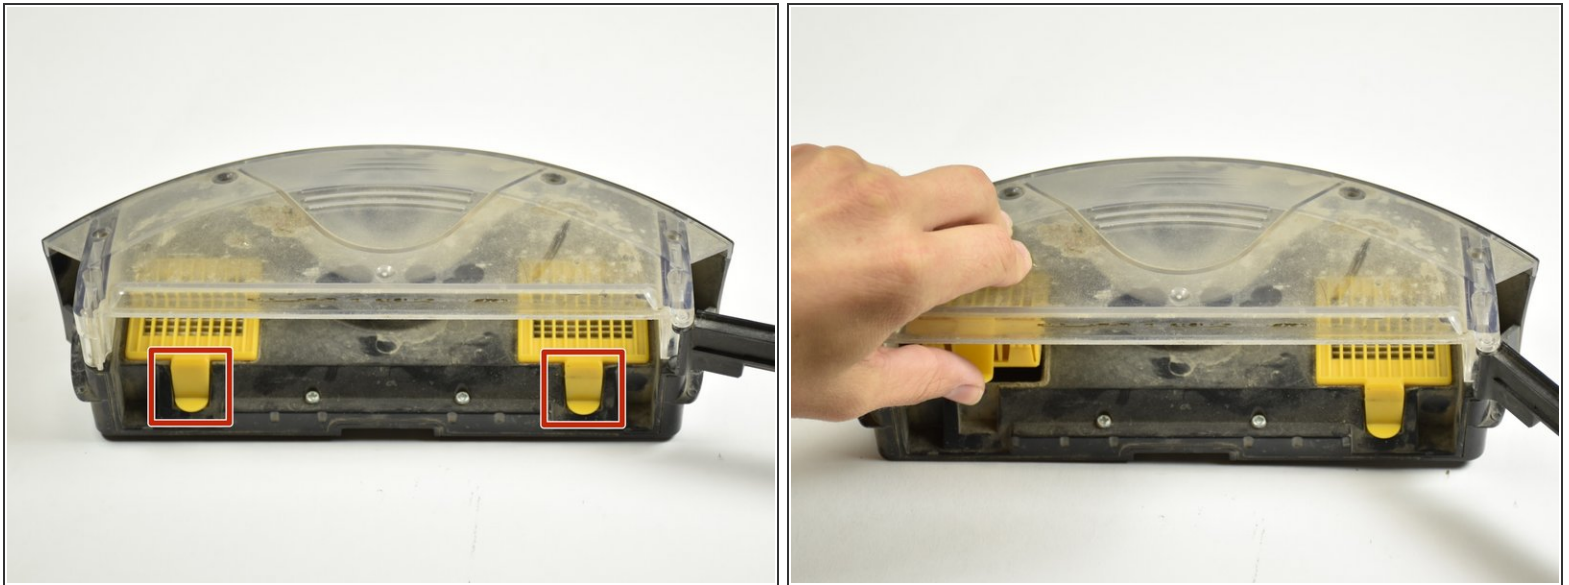

- Push up on the yellow tabs on the yellow filters, and pull both filters out.

To reassemble your device, follow these instructions in reverse order.