

Nikon 1 AW 1 O-Ring Replacement

Use this guide to replace the O-Ring seal of your Nikon 1 AW1.

Written By: Lester Rodriguez Piti



INTRODUCTION

Here we are going to show you how to replace the O-Ring on the Nikon 1 AW 1 Camera.



TOOLS:

• iFixit Opening Tools (1)


Step 1 — O-Ring





 Press and hold the lens release button, twist the lens in a clockwise motion, then pull it off of the camera.

Step 2

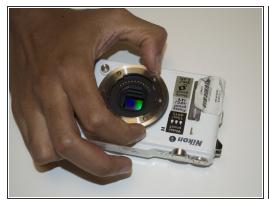





 Squeeze the O-ring under the lens support to push out the O-ring. Use a plastic opening tool to get under the O-ring, and slowly work around the metal lens support to pull the O-ring completely out.

To reassemble your device, follow these instructions in reverse order.