


Pandigital Super Nova Front Facing Camera Replacement

Remove the front facing camera of the Pandigital Super Nova.

Written By: sterling hannsz

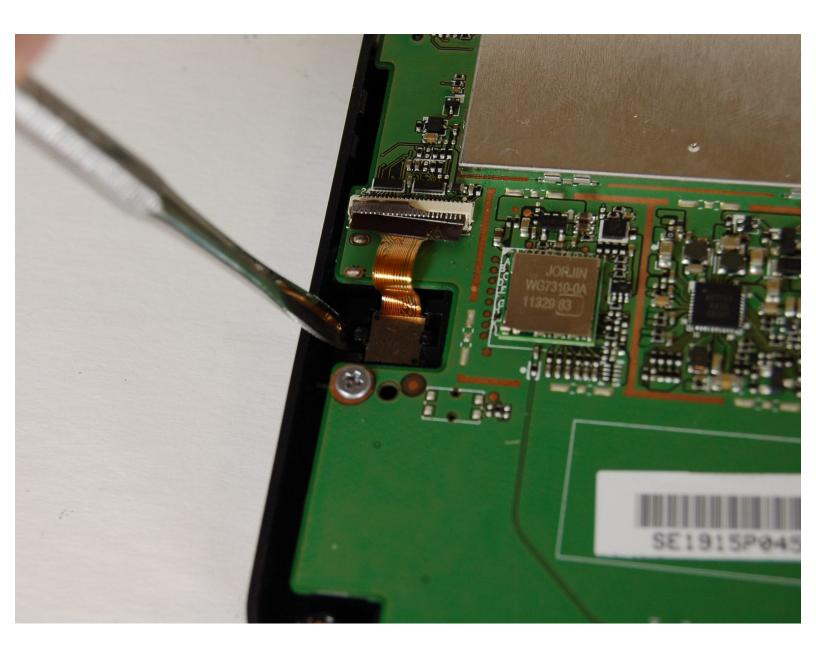

INTRODUCTION


This guide demonstrates in detail how to remove and replace a Pandigital Super Nova front facing camera in order to preserve the function of the camera. See the battery replacement guide for instructions for taking off the back cover.



TOOLS:

- iFixit Opening Tools (1)
- Metal Spudger Set (1)
- Phillips #0 Screwdriver (1)
- Tweezers (1)

Step 1 — Battery

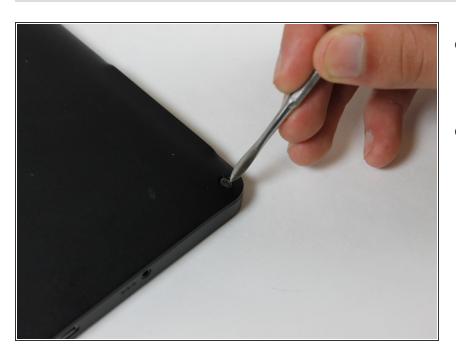

- Remove the screw covers from each corner of the back side of the device.
- Set aside.

Step 2




- Using a Philips screwdriver, remove all four .15 mm screws from each corner.
- Set aside.

Step 3



 Using the plastic opening tool, remove the back cover of the device.

Step 4

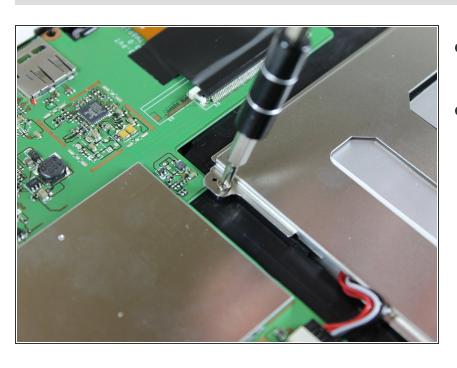

- Remove the three .11 mm screws that hold the battery in place.
- Set aside.


Step 5






- Unplug the battery and remove from device.
 - Avoid touching the motherboard as it is fragile.

Step 6 — Front Facing Camera

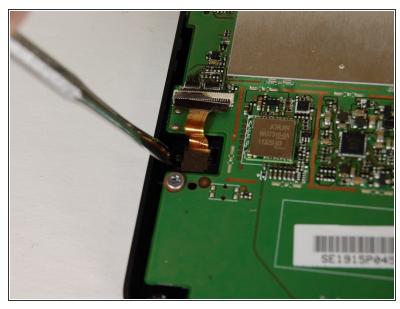


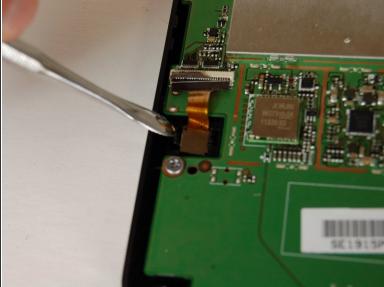

- Use a metal pry tool to separate the camera and the small clip that holds it in place.
 - ♠ Do NOT touch the MotherBoard with your bare hands. There is risk of short circuiting the device. Use nitrile gloves to prevent this.

Step 7



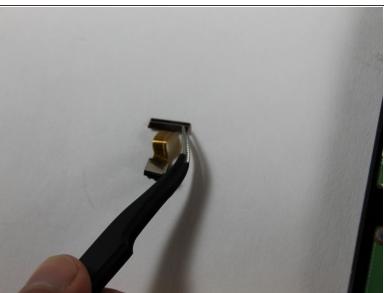

Use a pair of small tweezers to gently pull the camera connector out of the motherboard.

To reassemble your device, follow these instructions in reverse order.