



Hp Pavilion dv6-2155dx Optical Drive Replacement

Written By: Joseph Sanda



INTRODUCTION

This guide will show you how to safely remove the CD/DVD optical drive in the laptop.



TOOLS:


- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Optical Drive



- Flip the computer around to the back side.
- Remove the three screws from the memory module cover.
- ⓘ Screws will not come out all the way.
- ⓘ All screws to loosen/removed in this guide will require a Phillips #01 screwdriver.

Step 2

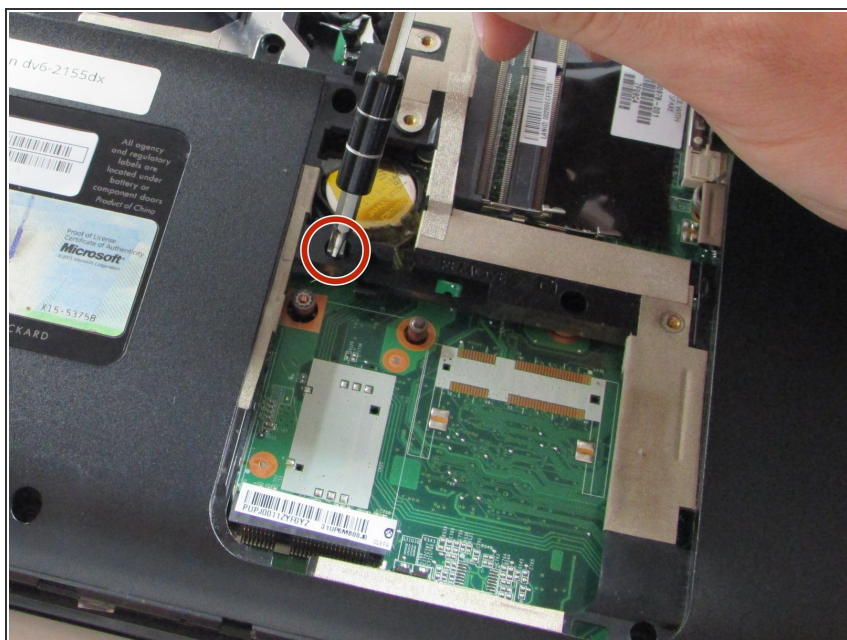

- Remove the screw completely from the memory module panel to help release the Optical drive from the body of the computer.
- The screw is 7mm long and head is 4mm wide.

Step 3



- Locate the small hole next to the eject button.
 - Get a paper clip and insert in to the small hole until you hear a clicking sound and seeing the tray pop out.
- ⚠ Before removing the optical drive, be sure that there is nothing in the drive. Optical drives are fragile so handle with care.

Step 4



- Gently pull the Optical drive out of the slot until the whole thing comes out.

To reassemble your device, follow these instructions in reverse order.