




Dell Studio 1555 Battery Replacement

Battery replacement guide for the Dell Studio 1555.

Written By: Josh Boone

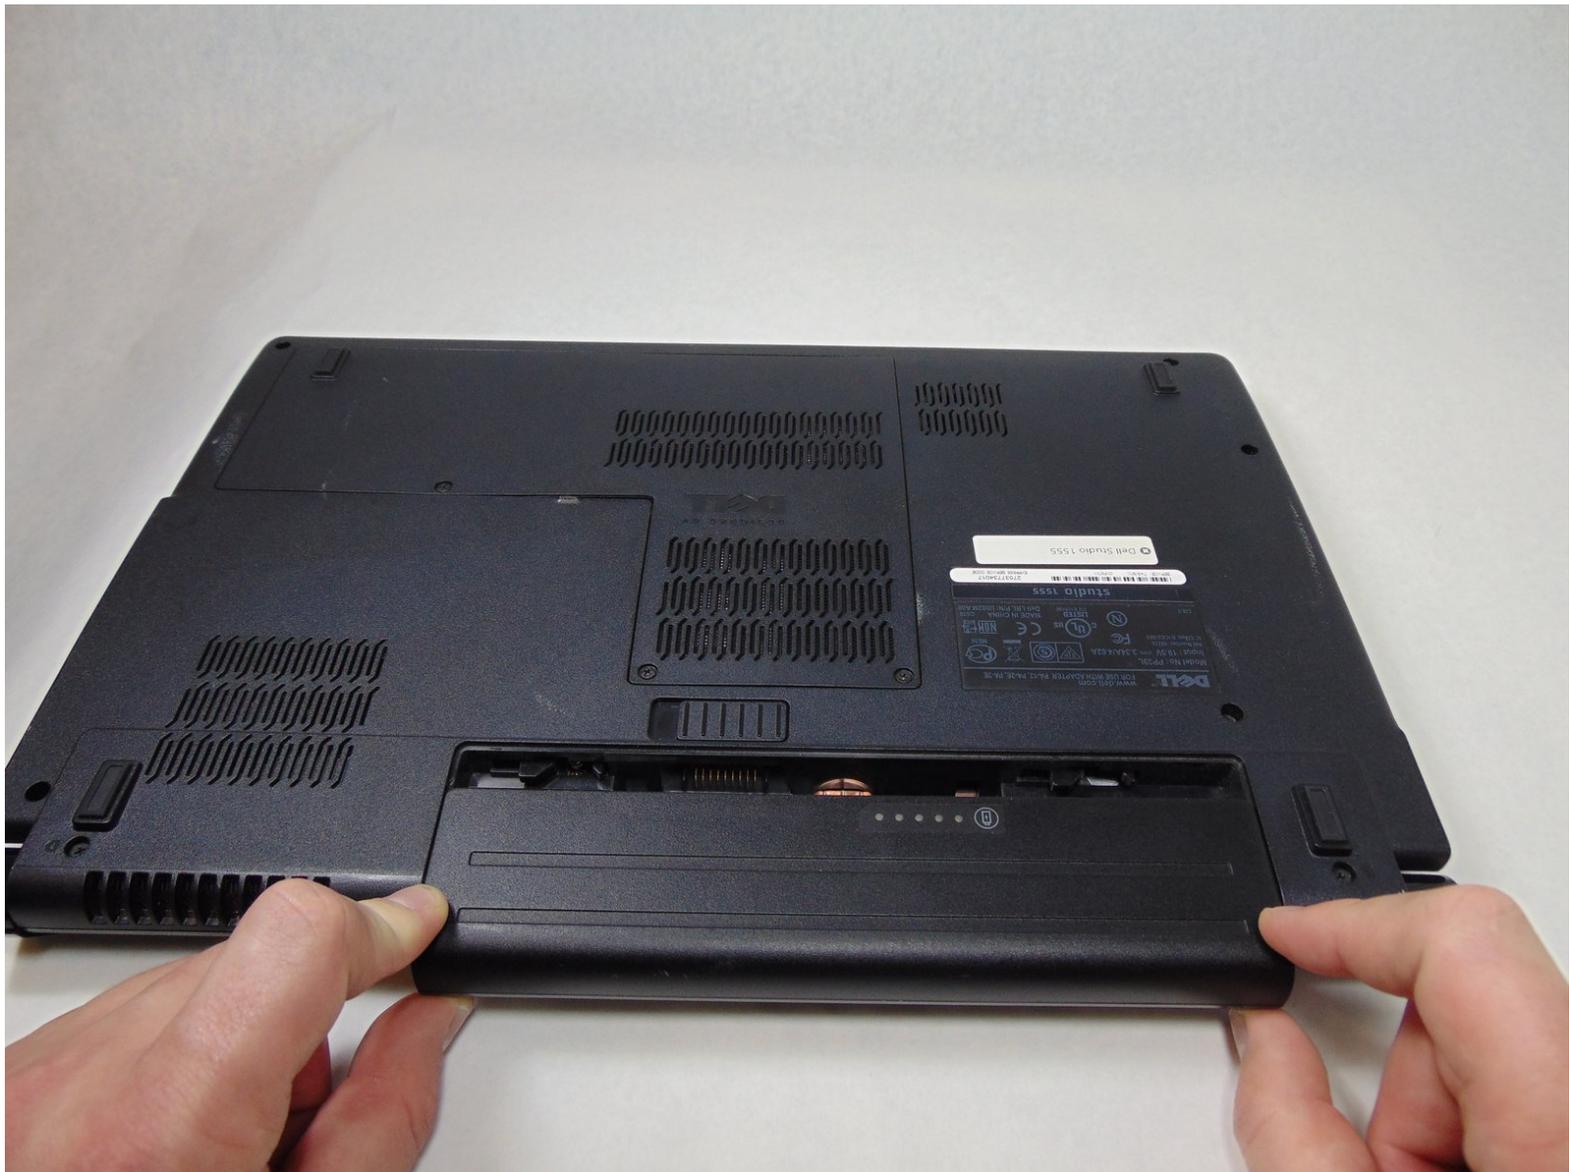

INTRODUCTION

If your battery will not hold a charge you may need to replace it. The battery is located on the underside of the laptop. No tools are required for this guide.

Step 1 — Battery




- Turn off and unplug the laptop.
- ⚠ Failure to properly turn off device before handling the battery could result in electrical shock.
- Flip the laptop so the underside is facing up with the battery closest to you.

Step 2



- Slide the locking switch to the left to release the battery.

Step 3

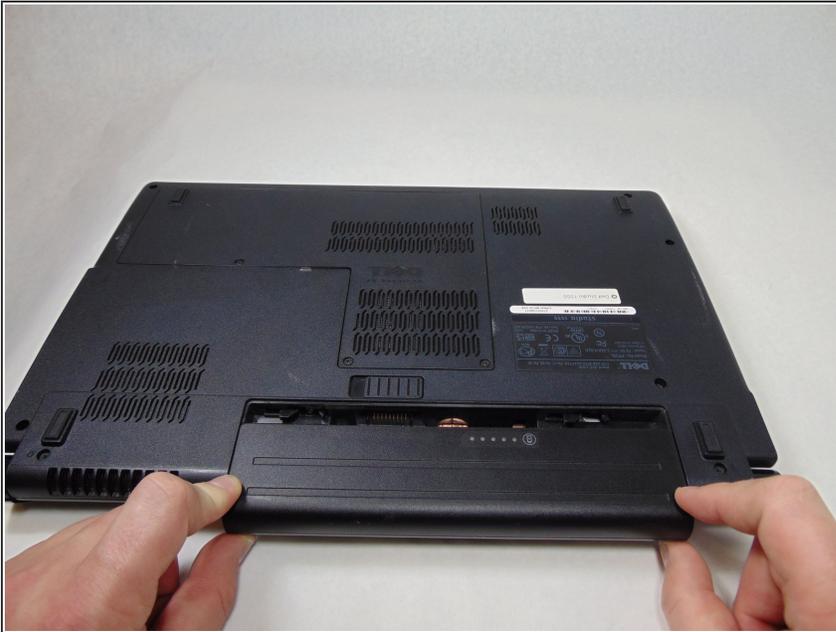

- Gently pull the battery away from the device.

To reassemble your device, follow these instructions in reverse order.