




Lenovo B575-1450 Back Panel Removal

This guide will go through the steps necessary to removing the back panel of the Lenovo B575-1450.

Written By: Carlo Calvillo

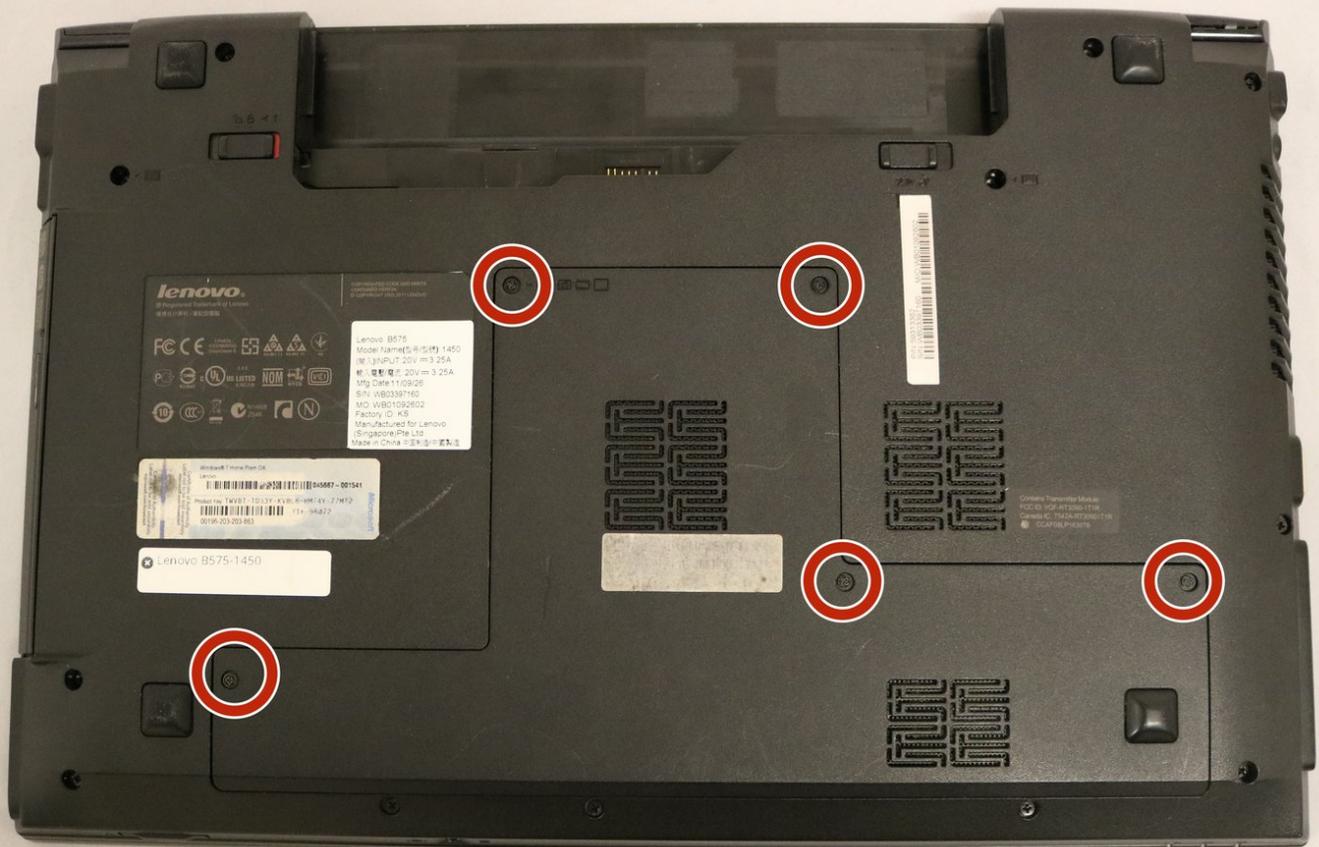


INTRODUCTION

The back panel of the Lenovo B575-1450 allows you access to other internal components that can be replaced in this laptop.

TOOLS:


- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery

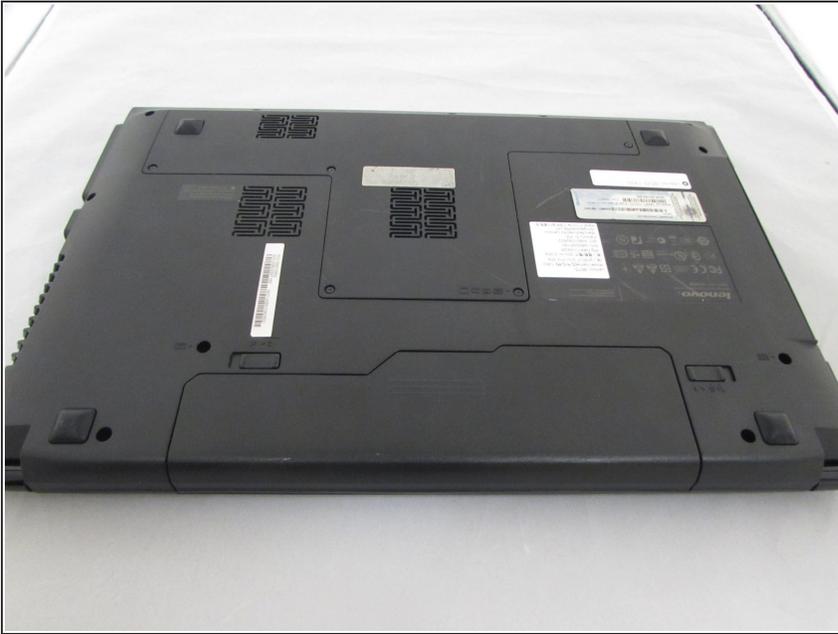

- Turn off the computer.
- Disconnect the charger from the computer.
- Flip the computer upside down.

Step 2

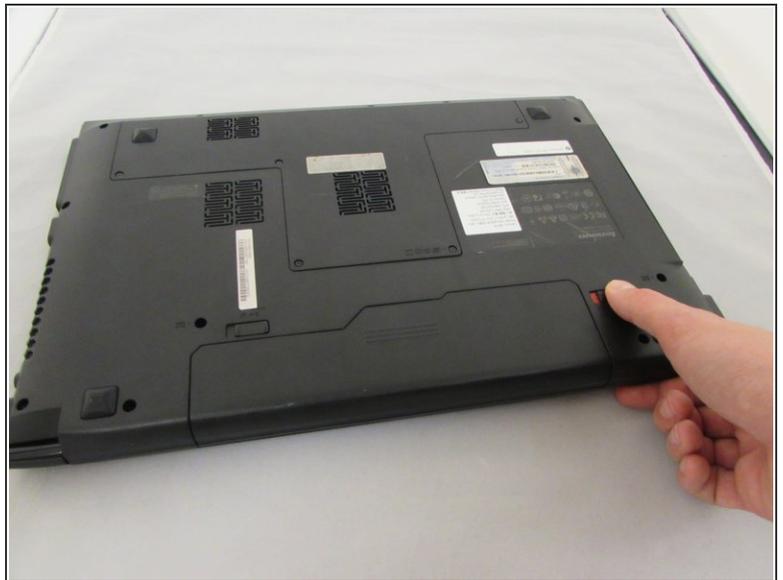


- Push the right-hand switch outward into the "unlocked" position.

Step 3



- While holding the battery, use your other hand to push the left clip to the left and pull the battery out.


Step 4 — Back Panel

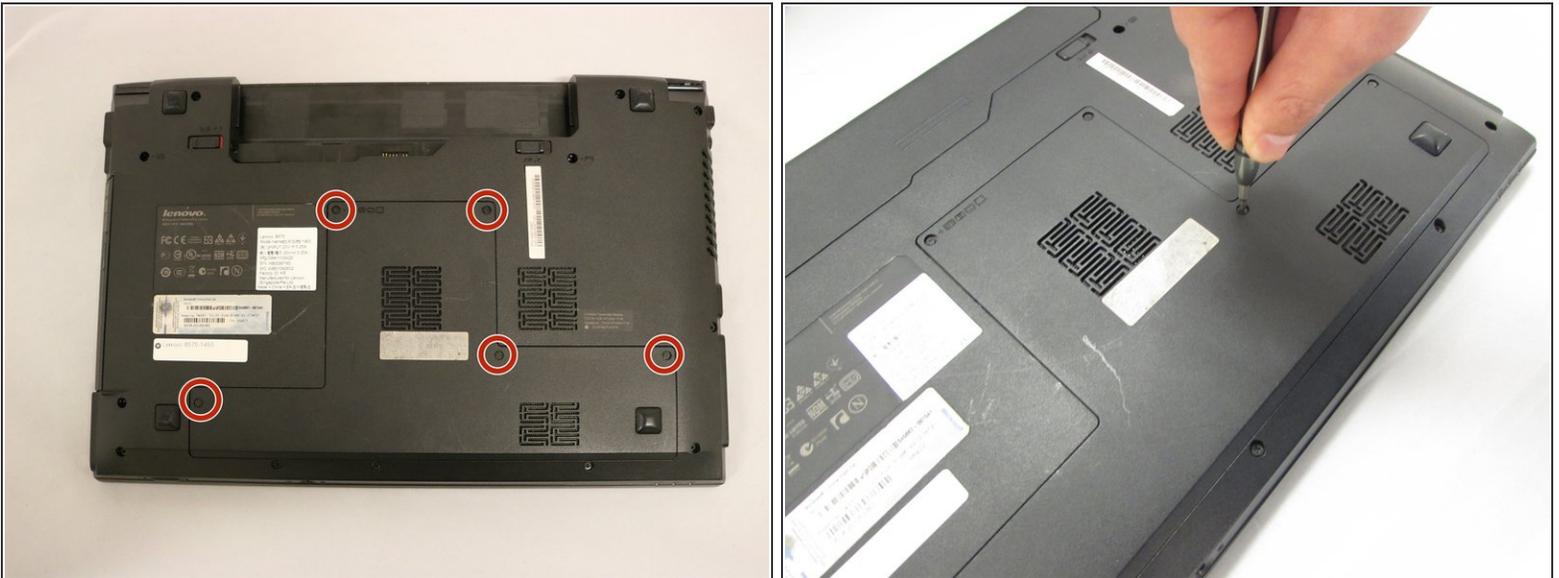

i The screws are captive to the back panel so they are not to be removed.


- Using the Phillips #00 Screwdriver, Loosen the five 5.4 mm screws around the back panel from the laptop.

Step 5

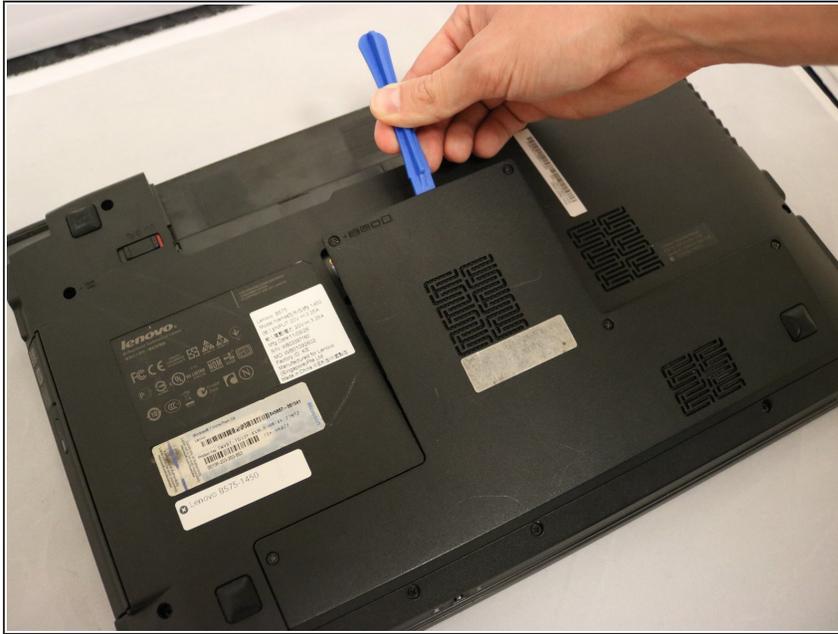

- Using a plastic opening tool, pry the back panel from the laptop.

Step 6

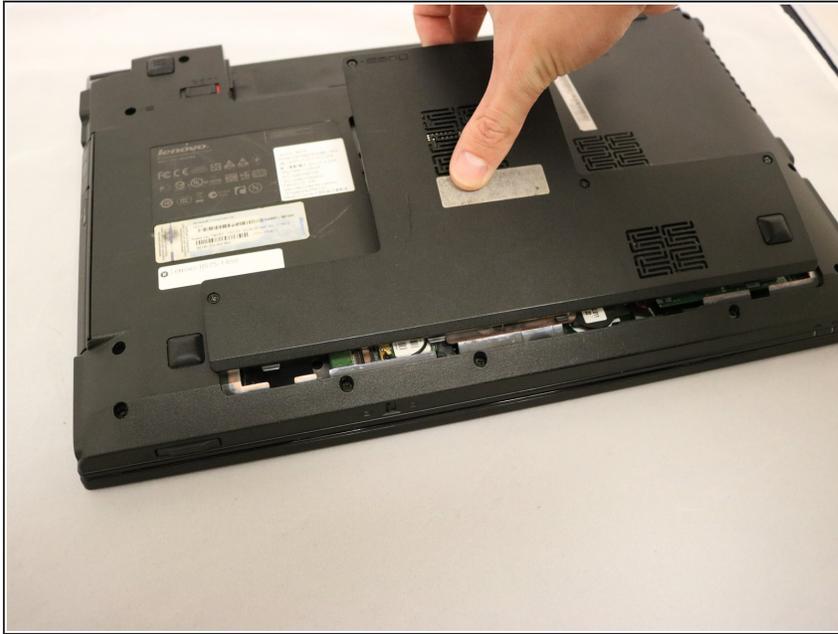

- Pull the panel outward from the rest of the laptop. The inside of the laptop will be exposed. From here you can access the CD-ROM drive, hard drive, and Keyboard.

To reassemble your device, follow these instructions in reverse order.