



# LeapFrog LeapPad 2 Battery Replacement

Replace the batteries in your LeapFrog LeapPad 2 if they are dead or dying.


Written By: Chase Mamatey



## INTRODUCTION

The LeapFrog LeapPad 2 requires four (4) AA batteries which are easily replaced without any tools. The LeapPad 2 should be powered off before removal of the existing batteries.

## Step 1 — Battery

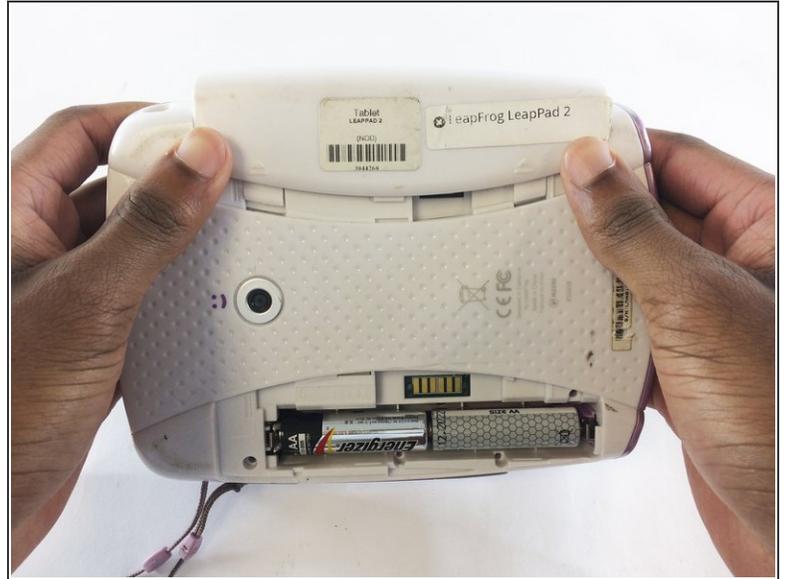

- Turn the tablet so the back is visible.
- One at a time, remove the battery covers by sliding them towards the sides and away from the center of the device.

## Step 2



- Remove the AA batteries from both battery compartments of the device.

To reassemble your device, follow these instructions in reverse order.