



Garmin Nuvi 265WT Screen Replacement

Written By: Patricia Gonzalez



 **TOOLS:**

- [Spudger](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [P2 Pentalobe Screwdriver](#) (1)
-

Step 1 — Screen



- Remove PN/Model sticker on the lower side of the device.
 - Use pentalobe screwdriver to remove the two screws underneath it.
 - Use the nylon spudger to remove the screen from the device.
- ⚠ The regular black nylon spudger should be used whenever possible, especially around glass displays and other sensitive components.

Step 2




- Lift up the screen gently and place it on the opposite side.

Step 3



- Use a plastic opening tool to gently lift up the white rectangular snap clip that is attached to the screen.

Step 4

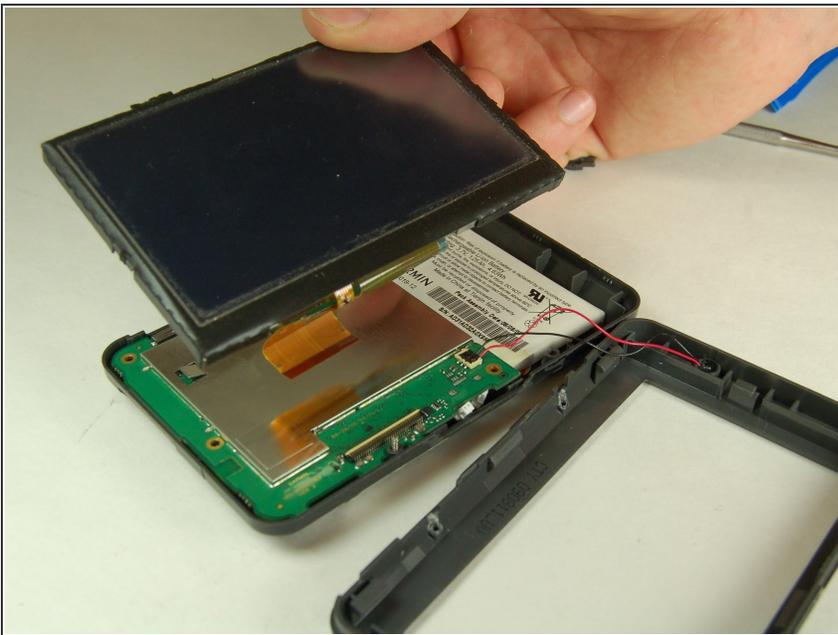

- Lift up the screen and you're done.

To reassemble your device, follow these instructions in reverse order.