



HP Compaq Presario V6000 Trackpad Replacement

This guide will allow the user to replace the trackpad on a HP Compaq Presario V6000.

Written By: adam



INTRODUCTION

This guide demonstrates how to remove and replace and HP Compaq Presario V6000 trackpad in order to preserve the function of the device.



TOOLS:

- [Metal Spudger](#) (1)
-

Step 1 — Trackpad




- Use the metal spudger to gently remove the plastic plate from the rest of the top panel.
- ⚠ Be careful not to break the plastic tabs connecting the two top panels.

Step 2



- Separate the connection of the top piece from the board.

Step 3

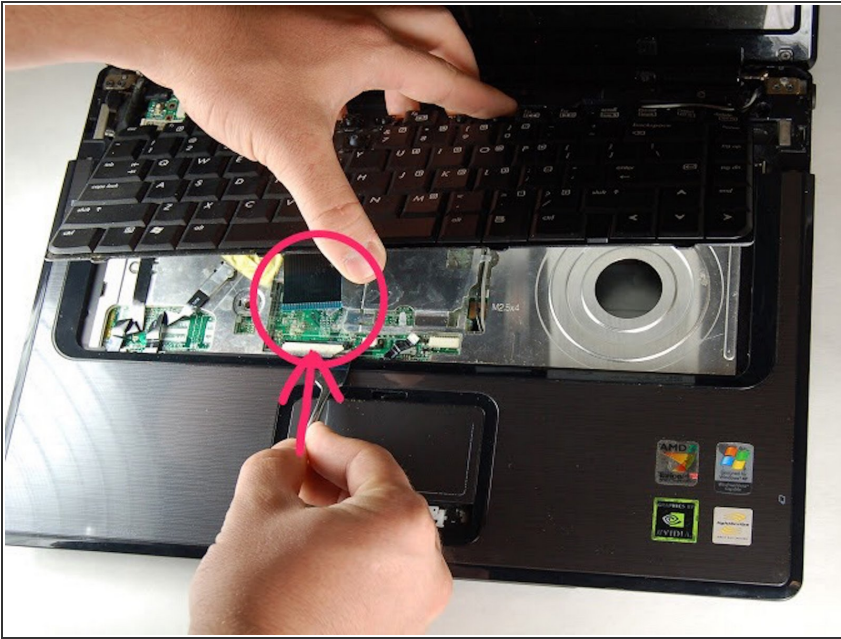

- Remove the connection from the keyboard to its housing.

Step 4




- Separate the power connections.

Step 5



- Unravel the wire.

Step 6

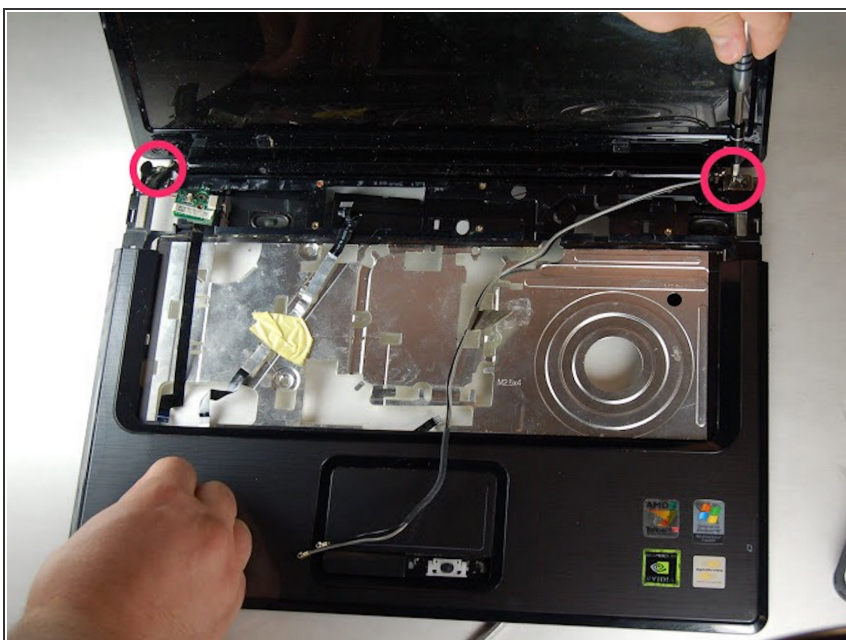


- Remove the screws connecting the plastic housing to the screen.
- ⚠ Use caution when removing the last screw. Do not damage the screen.

Step 7



- Make sure to grip the screen tightly and separate the top and bottom.

Step 8

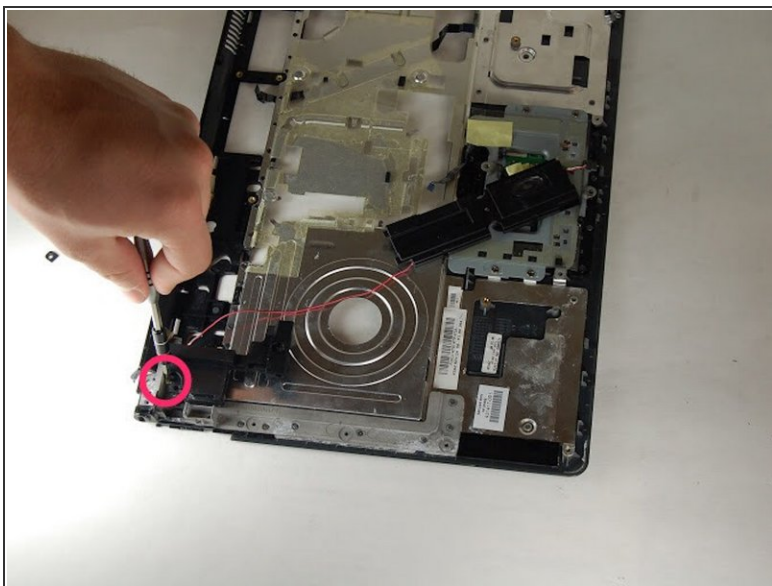

- Remove the screws that hold the trackpad in place.
- Remove the track pad.

To reassemble your device, follow these instructions in reverse order.