



iPhone 4S Headphone Jack Cable Assembly Replacement

Internal prerequisite.

Written By: Walter Galan



INTRODUCTION

Internal prerequisite.

TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Headphone Jack Cable Assembly



⚠ In this step, be careful not to remove the headphone jack without first separating the top microphone from the upper case, as they are connected by a fragile flex cable.


- Use a plastic opening tool to start to pry the headphone jack out of its recess in the rear case.
- Then use the opening tool to gently peel the microphone up from the adhesive securing it to the top of the rear case.
- Remove the headphone jack assembly from the rear case, being careful not to tear the microphone flex cable.

Step 2




- Remove the 1.6 mm Phillips screw securing the mute switch bracket to the outer case.

Step 3

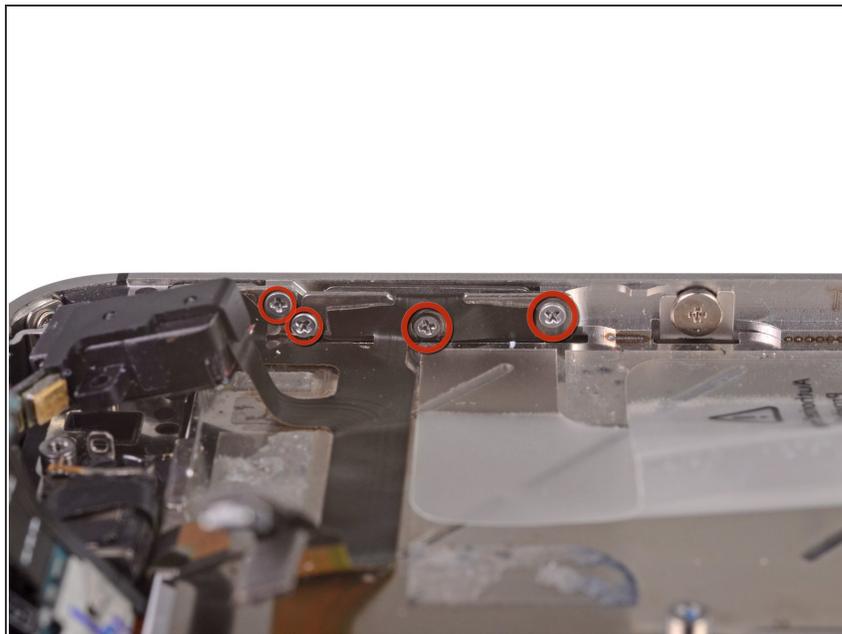


- Remove the four 1.5 mm Phillips screws securing the volume button and silent switch brackets to the outer case.

Step 4

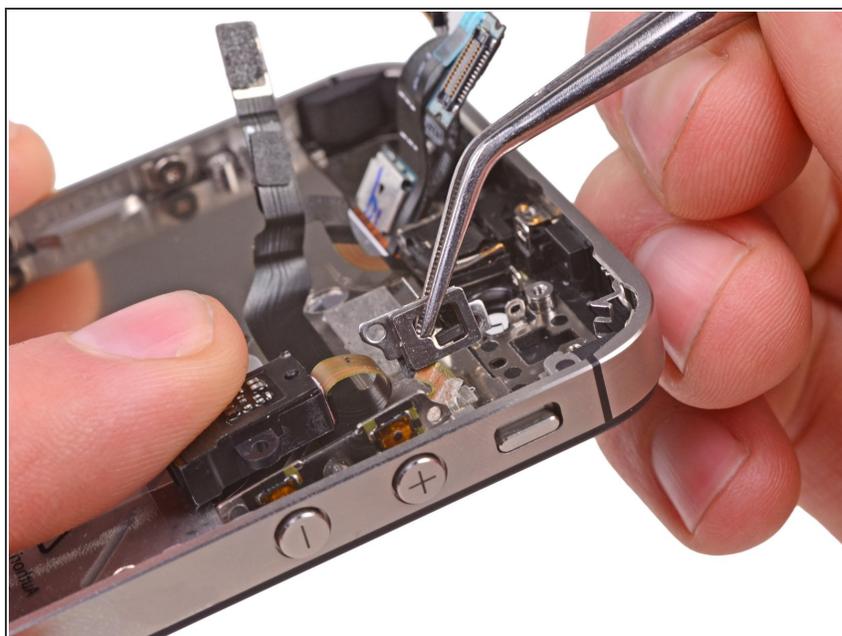

- Use a pair of tweezers to gently pull the silent switch bracket away from the outer case.

Step 5

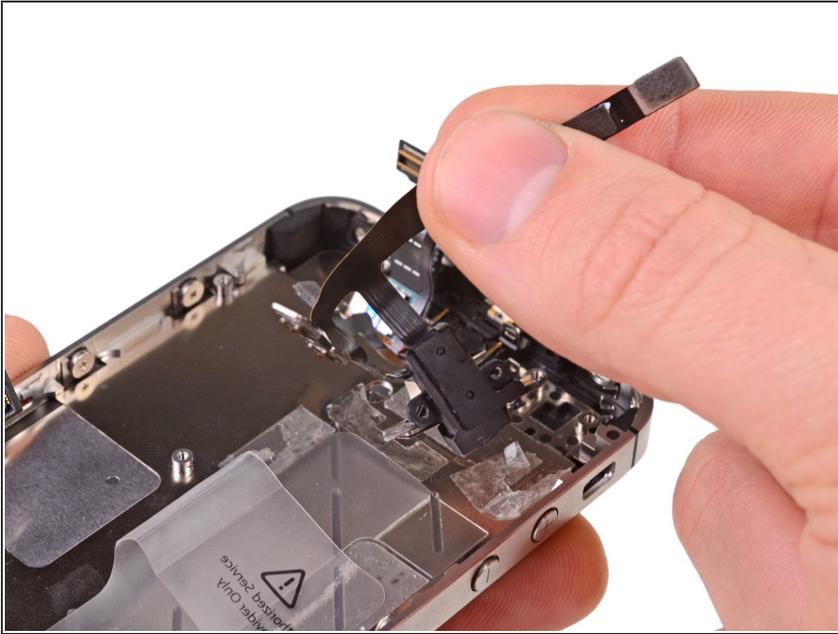

- Carefully peel the headphone jack/volume button cables off the adhesive securing them to the rear case.
- Remove the headphone jack cable assembly from the iPhone.

To reassemble your device, follow these instructions in reverse order.