


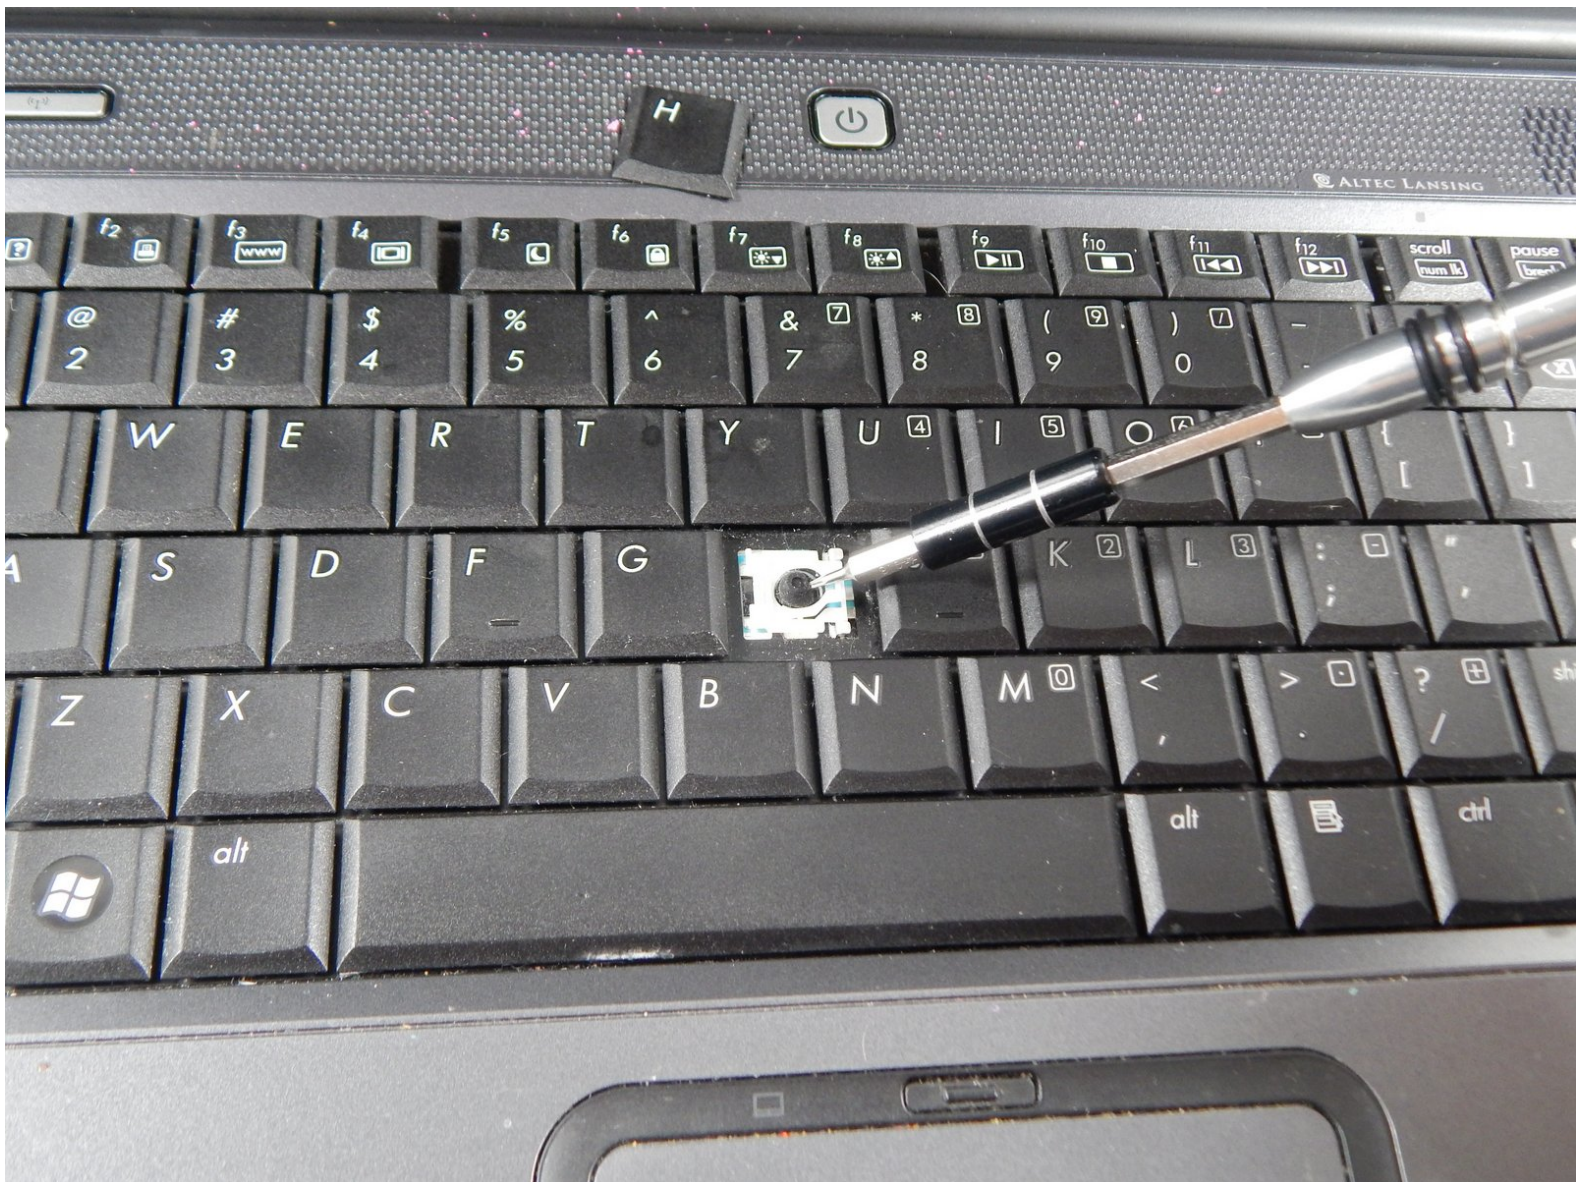

# HP Compaq C700 Key Replacement

This guide will show how to remove a key from the keyboard of a HP Compaq C700 laptop.

Written By: Taylor Johansen



---

## INTRODUCTION

This guide details the process for removing an individual key to gain access underneath the key.

---



### TOOLS:

- [iFixit Opening Tools](#) (1)
-




## Step 1 — Key



- ⚠ It is advised to work on the device only when it is powered off so as to avoid electrocution risks.
- Turn off computer by pushing and holding on the power button located above the keyboard.

## Step 2

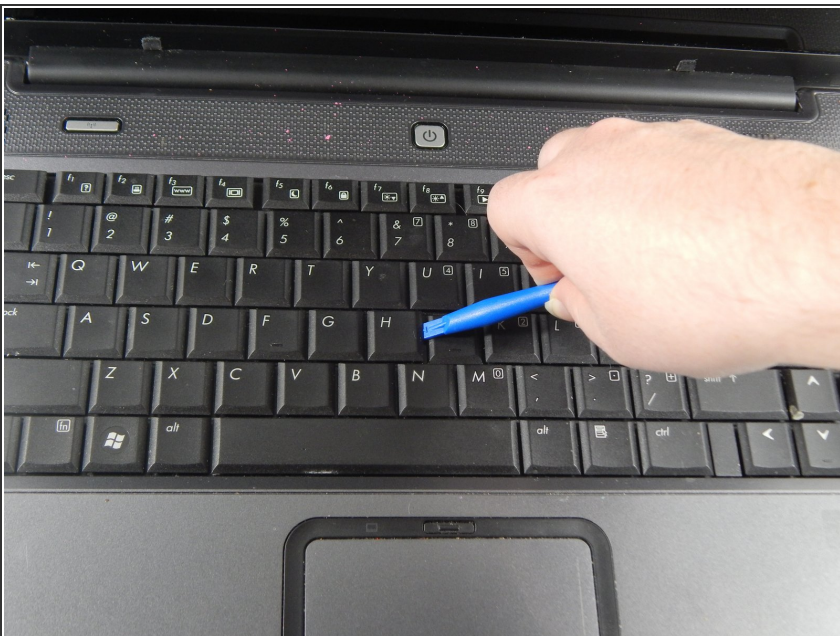

- Position the opening tool under the edge of the key.
- Gently pry up one side of the key until the key pops out of place.

To reassemble your device, follow these instructions in reverse order.