



Samsung Galaxy Tab 3 Kids Battery Replacement

Follow this guide to install a new Samsung Galaxy Tab 3 Kids battery.

Written By: ajhoffman



INTRODUCTION

This replacement guide will walk you through how to replace the battery in the Samsung Galaxy Tab 3 7.0 Kids. Having a bad or broken battery can lead to poor battery life or unwanted shut downs.

For your safety, discharge your battery below 25% before disassembling your Galaxy Tab. This reduces the risk of a dangerous thermal event if the battery is accidentally damaged during the repair. If your battery is swollen, take [appropriate precautions](#).



TOOLS:

- [Phillips #000 Screwdriver](#) (1)
 - [iFixit Opening Tool](#) (1)
-



Step 1 — Battery



⚠ Before beginning this repair, make sure that the device is completely turned off.

- Wedge the plastic opening tool in the seam between the screen and the back cover.
- Slide the tool around all the edges and remove the screen from the back cover.

Step 2

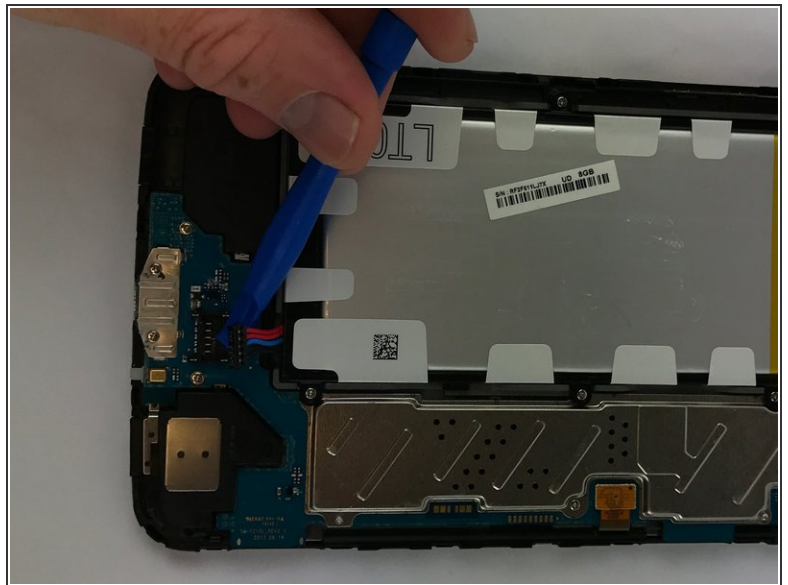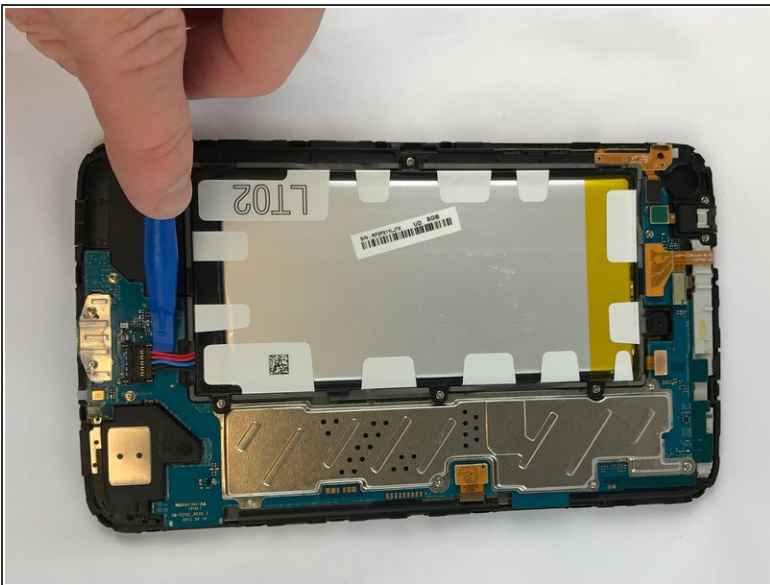

- Unplug the battery connection carefully using the plastic opening tool.

Step 3



- Remove the four 1.2 mm Phillips #000 screws surrounding the battery.

Step 4



- Use your hands to gently lift the battery up to remove it.
- ⓘ If it does not come off easily, there may be some glue underneath the battery and may need to be pried off with a spudger.

To reassemble your device, follow these instructions in reverse order.