



Asus MeMO Pad HD 8 ME180A Battery Replacement

Read through this guide if you are experiencing...

Written By: Rebecca Ellerhorst



INTRODUCTION

Read through this guide if you are experiencing problems regarding your Asus MeMO Pad HD 8 ME180A's battery.

TOOLS:

[iFixit Opening Tool](#) (1)

[Phillips #0 Screwdriver](#) (1)

[Heavy-Duty Spudger](#) (1)


[Anti-Static Wrist Strap](#) (1)

Step 1 — Battery



- Use a plastic opening tool to separate the back half from the front half.
 - Pull the back panel away from the device.
- ⓘ The volume buttons can fall out of the case. Be careful not to lose them.

Step 2

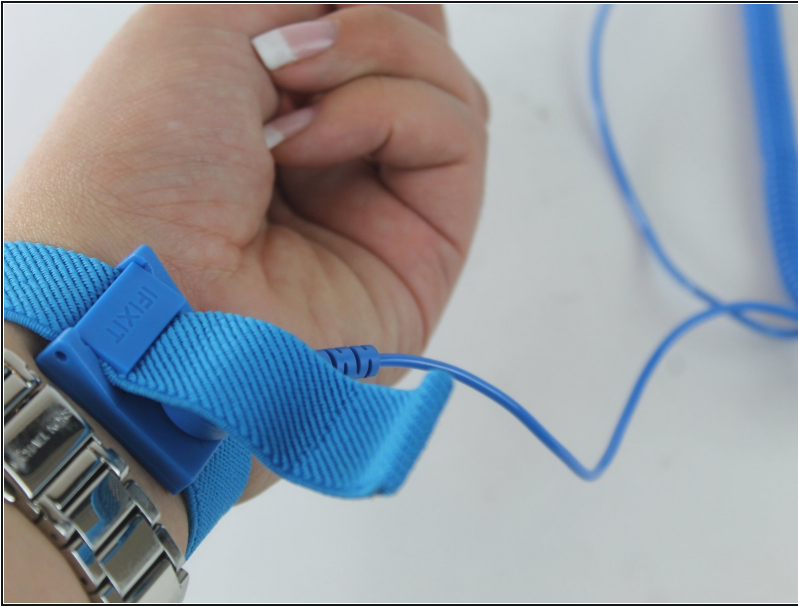


- Ensure that you are wearing your [Anti-Static Wrist Strap](#).

Step 3




- Lift the white bar on the ZIF connector and pull the metal connector out.

Step 4

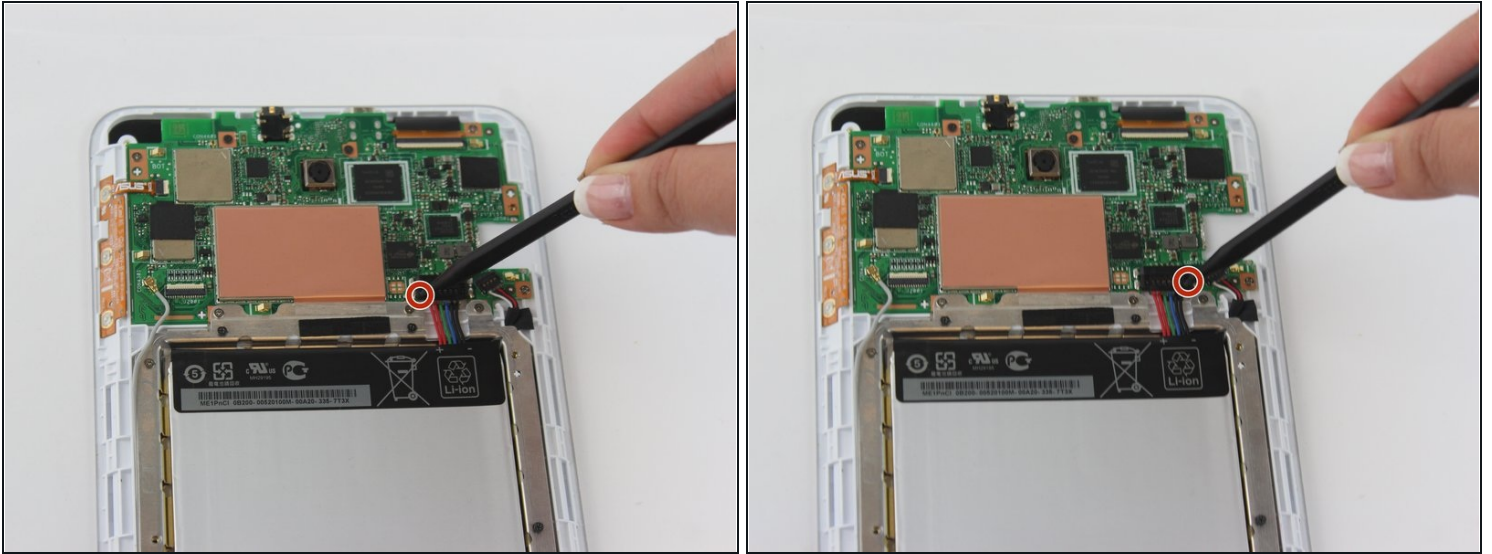

- Using your spudger, press down on the two spots shown in order to release the cables.
- Ensure that the touchscreen cables are fully disconnected.

Step 5

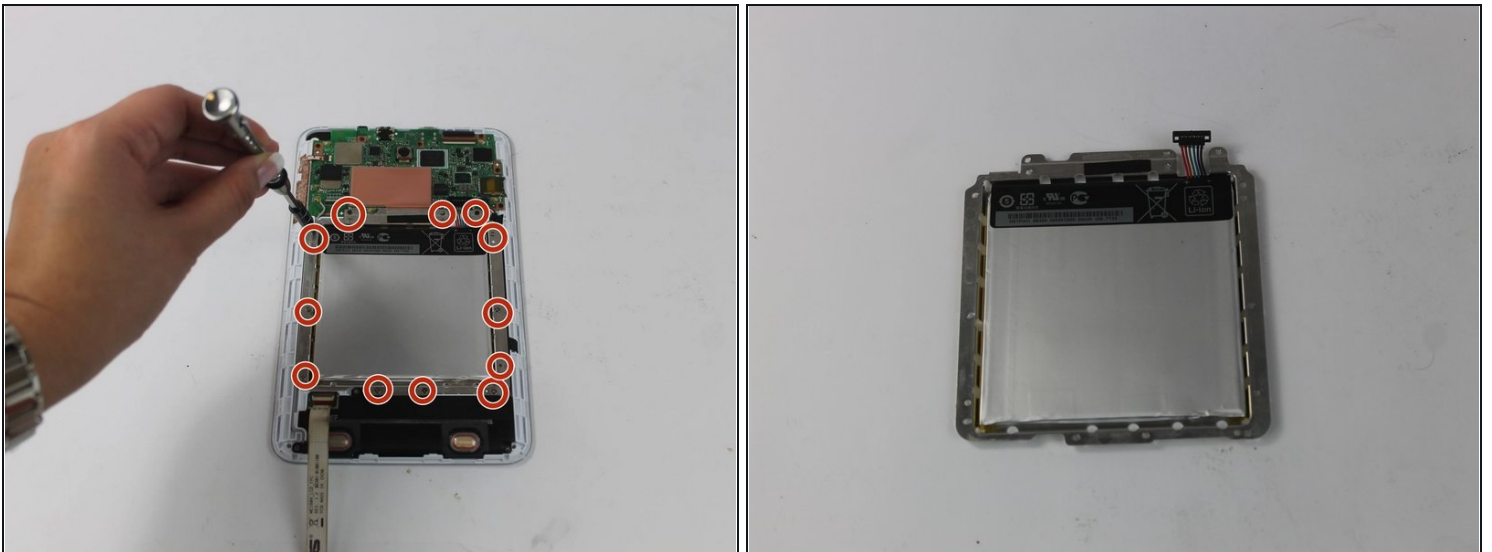

- Using a PH#0 screwdriver, remove the twelve silver 3.2 mm screws.
- Pull the battery out.

To reassemble your device, follow these instructions in reverse order.

