



Dell Inspiron M5110 Module Cover Replacement

Written By: Cody Flynn



TOOLS:

Phillips #0 Screwdriver (1)

Step 1 — Battery



- Shut down the computer and turn it upside down.

Step 2




- Slide both of the battery release latches on the bottom of the device in towards the center of the computer.

Step 3



- Slide and lift the battery up and out from the device.

Step 4 — Module Cover

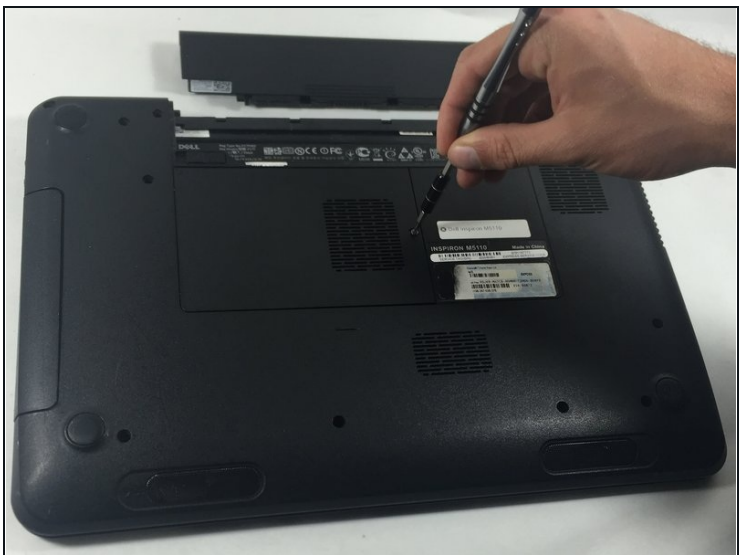

- Remove the 5 mm Phillips # 0 screw in the middle of the device.

Step 5



- Remove the module cover pressing in the release tabs and pulling the cover up and away from the base of the device.

To reassemble your device, follow these instructions in reverse order.