



# Asus Transformer Book T100TAF Camera Replacement

This guide shows you how to replace the camera board in your Asus Transformer Book T100TAF.

Written By: Corey Duff






## TOOLS:



- [Spudger](#) (1)
  - [Tweezers](#) (1)
  - [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Camera

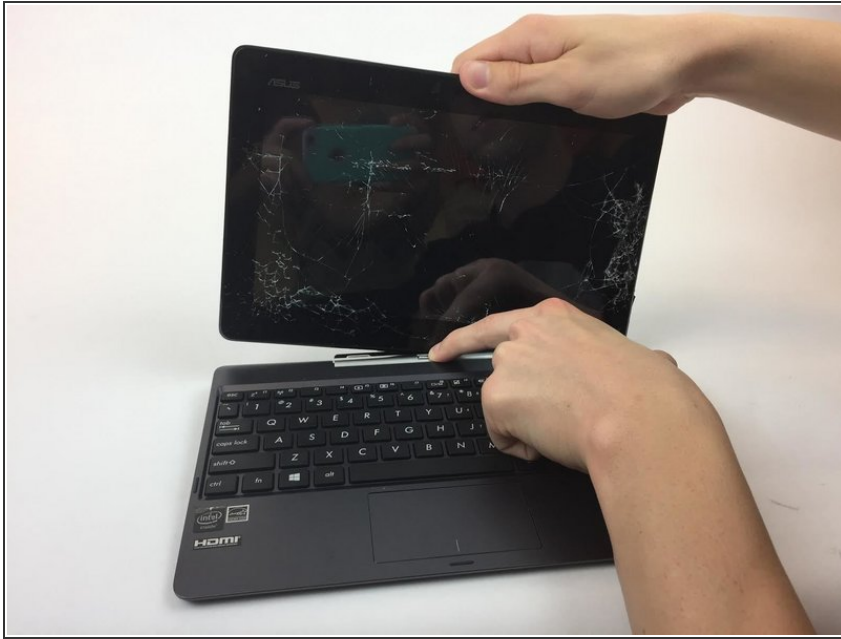



- Detach the keyboard from the screen by depressing the silver button on the tablet's hinge and pulling upwards on the tablet.

## Step 2

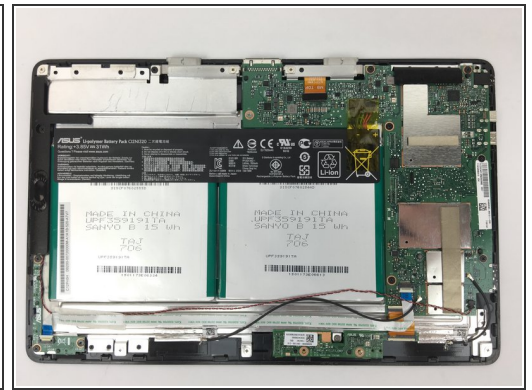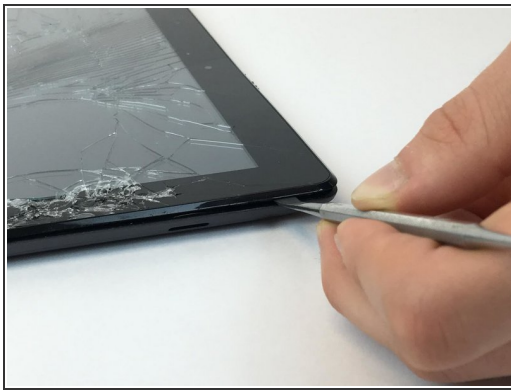

- Insert the spudger behind the plastic backing of the tablet and then slide the spudger around the outside of the tablet, carefully releasing all internal clips.

### Step 3

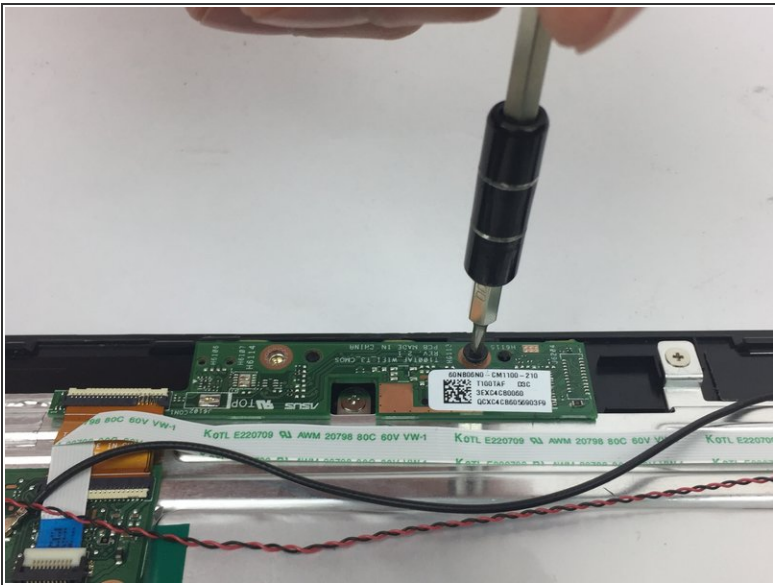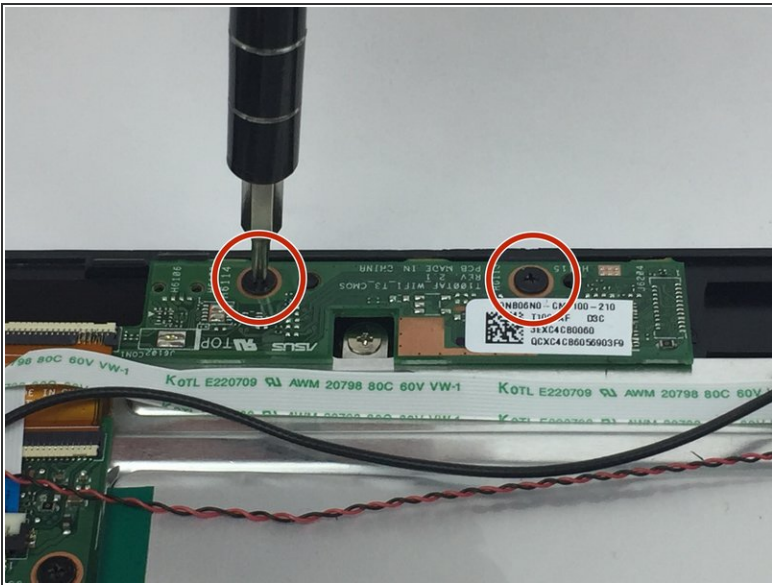

- Remove the two 4.0 mm black screws from the camera board.


## Step 4



- Set aside the two black phillips head 4.0 mm screws.



## Step 5

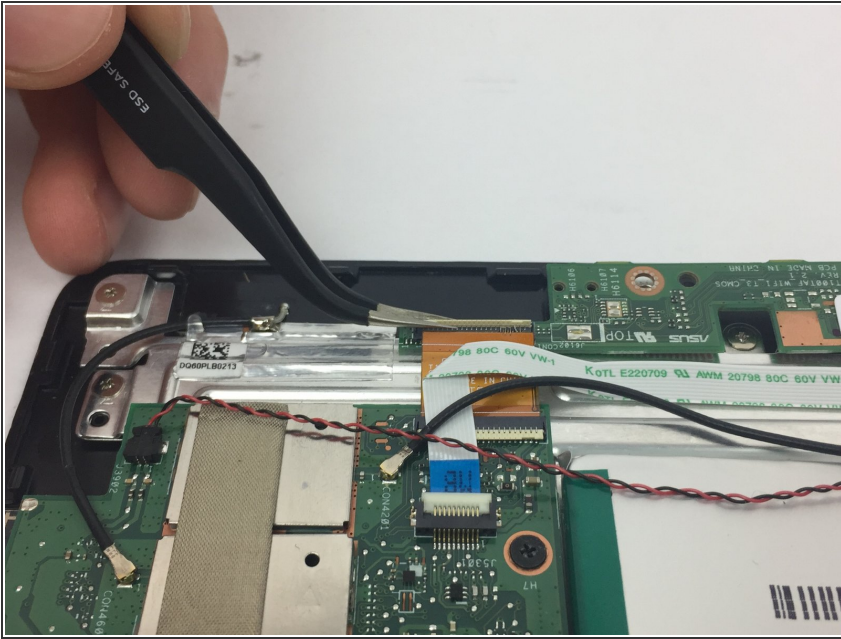

- Using tweezers, disconnect the orange ribbon cable from the camera board by lightly pulling it up and towards the motherboard.

## Step 6



- Lift the camera board away from the device.

To reassemble your device, follow these instructions in reverse order.