

Asus Transformer Book T100TAF Camera Replacement

Written By: Corey Duff




TOOLS:

Spudger (1)

Tweezers (1)


Phillips #00 Screwdriver (1)

Step 1 — Camera

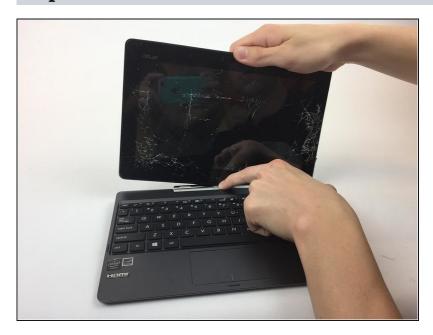

 Detach the keyboard from the screen by depressing the silver button on the tablet's hinge and pulling upwards on the tablet.

Step 2

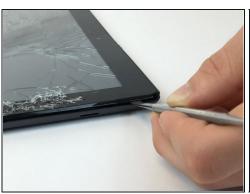






• Insert the spudger behind the plastic backing of the tablet and then slide the spudger around the outside of the tablet, carefully releasing all internal clips.

Step 3

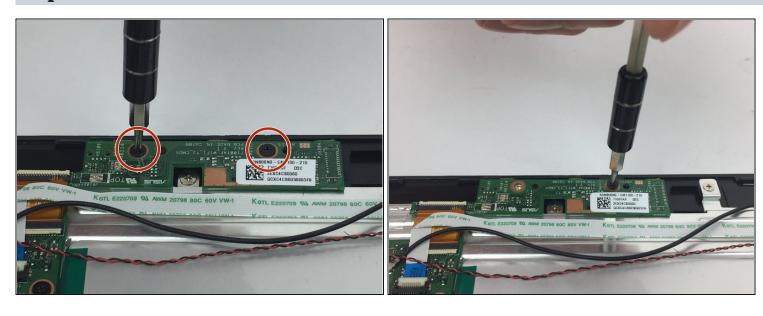


• Remove the two 4.0 mm black screws from the camera board.

Step 4



• Set aside the two black phillips head 4.0 mm screws.

Step 5

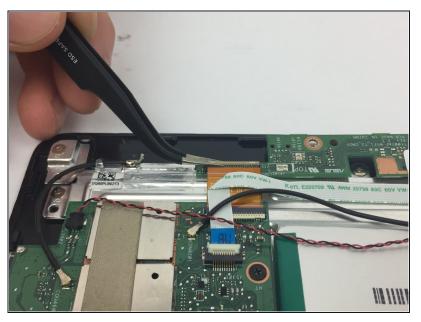

 Using tweezers, disconnect the orange ribbon cable from the camera board by lightly pulling it up and towards the motherboard.

Step 6



• Lift the camera board away from the device.

To reassemble your device, follow these instructions in reverse order.