



Sony Alpha 6000 Lens Replacement

Use this guide to remove the lens on your Sony Alpha 6000 camera.

Written By: Jennifer Vuu



INTRODUCTION

If the lens of your Sony Alpha 6000 is damaged, or you want to use a different kind of attachment lens, this guide will help in removing it.

Step 1 — Battery



- Make sure the camera is turned off by turning the switch to OFF.

Step 2




- Flip the camera around to access the battery compartment.
- Slide the battery compartment lock to the left to unlock it.

Step 3



- Locate the blue latch that holds the battery in.

Step 4

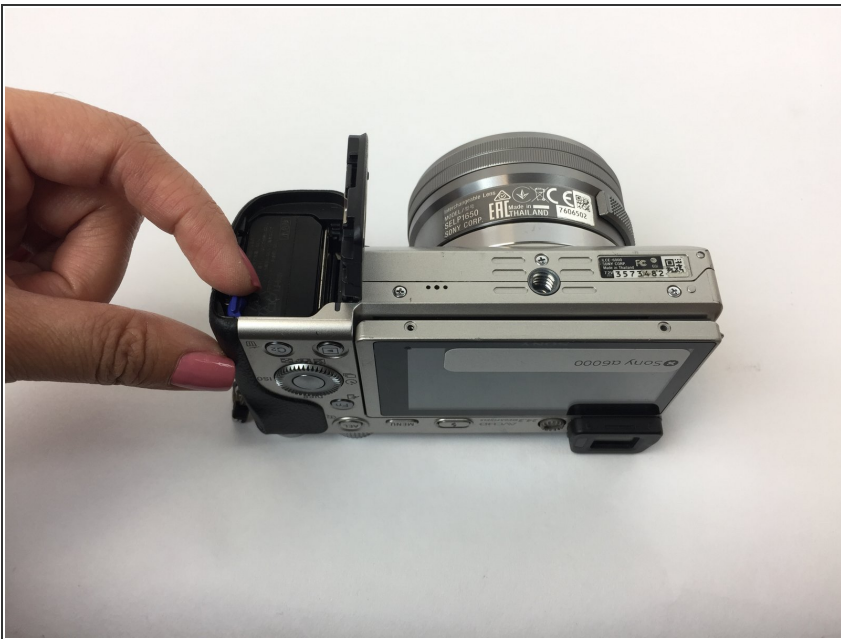

- Push the latch back to release battery.

Step 5



- The battery can now be taken out of its compartment.

Step 6 — Lens



- Press and hold the release button next to the lens on the front of the camera.

Step 7



- While holding the release button, twist the lens counterclockwise and pull it off.

To reassemble your device, follow these instructions in reverse order.