



Motorola Buzz ic502 Keypad Replacement

Tools needed, a screwdriver and a Nylon spudger

Written By: Austin Quinn



INTRODUCTION

This guide will teach you how to remove the keypad



TOOLS:

- [Spudger](#) (1)
 - [T6 Torx Screwdriver](#) (1)
 - [Metal Spudger](#) (1)
-

Step 1 — Battery



- First flip the phone over.
- Then find the back release circled in red.

Step 2



- Carefully remove the back using the release.
- Lift from the bottom!

Step 3




- Lift the battery from the right side.
- After the battery has lifted about a 45 degree angle remove from phone.

Step 4 — Keypad



- Remove the plastic pieces with metal spudger
- Under both are two screws, remove those as well.
- Remove the other four screws on back of phone.

Step 5

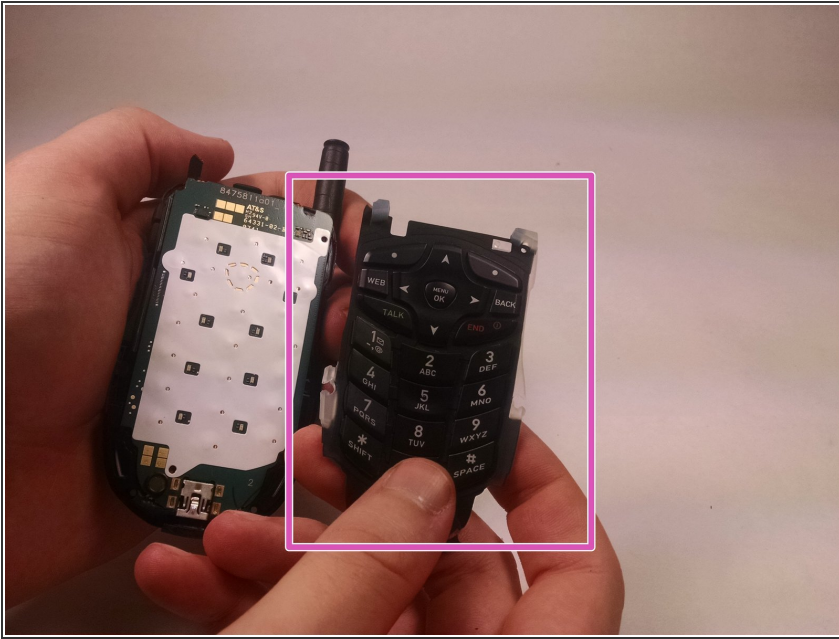

- Carefully lift screen as to not snap wire that connects it (shown is a version in which the screen has been fully removed).
- Lift off keypad and replace.

To reassemble your device, follow these instructions in reverse order.