




VTechCS6719-16 Button Replacement

This is a guide that locates and replaces the inner buttons of the phone.

Written By: Charles montes

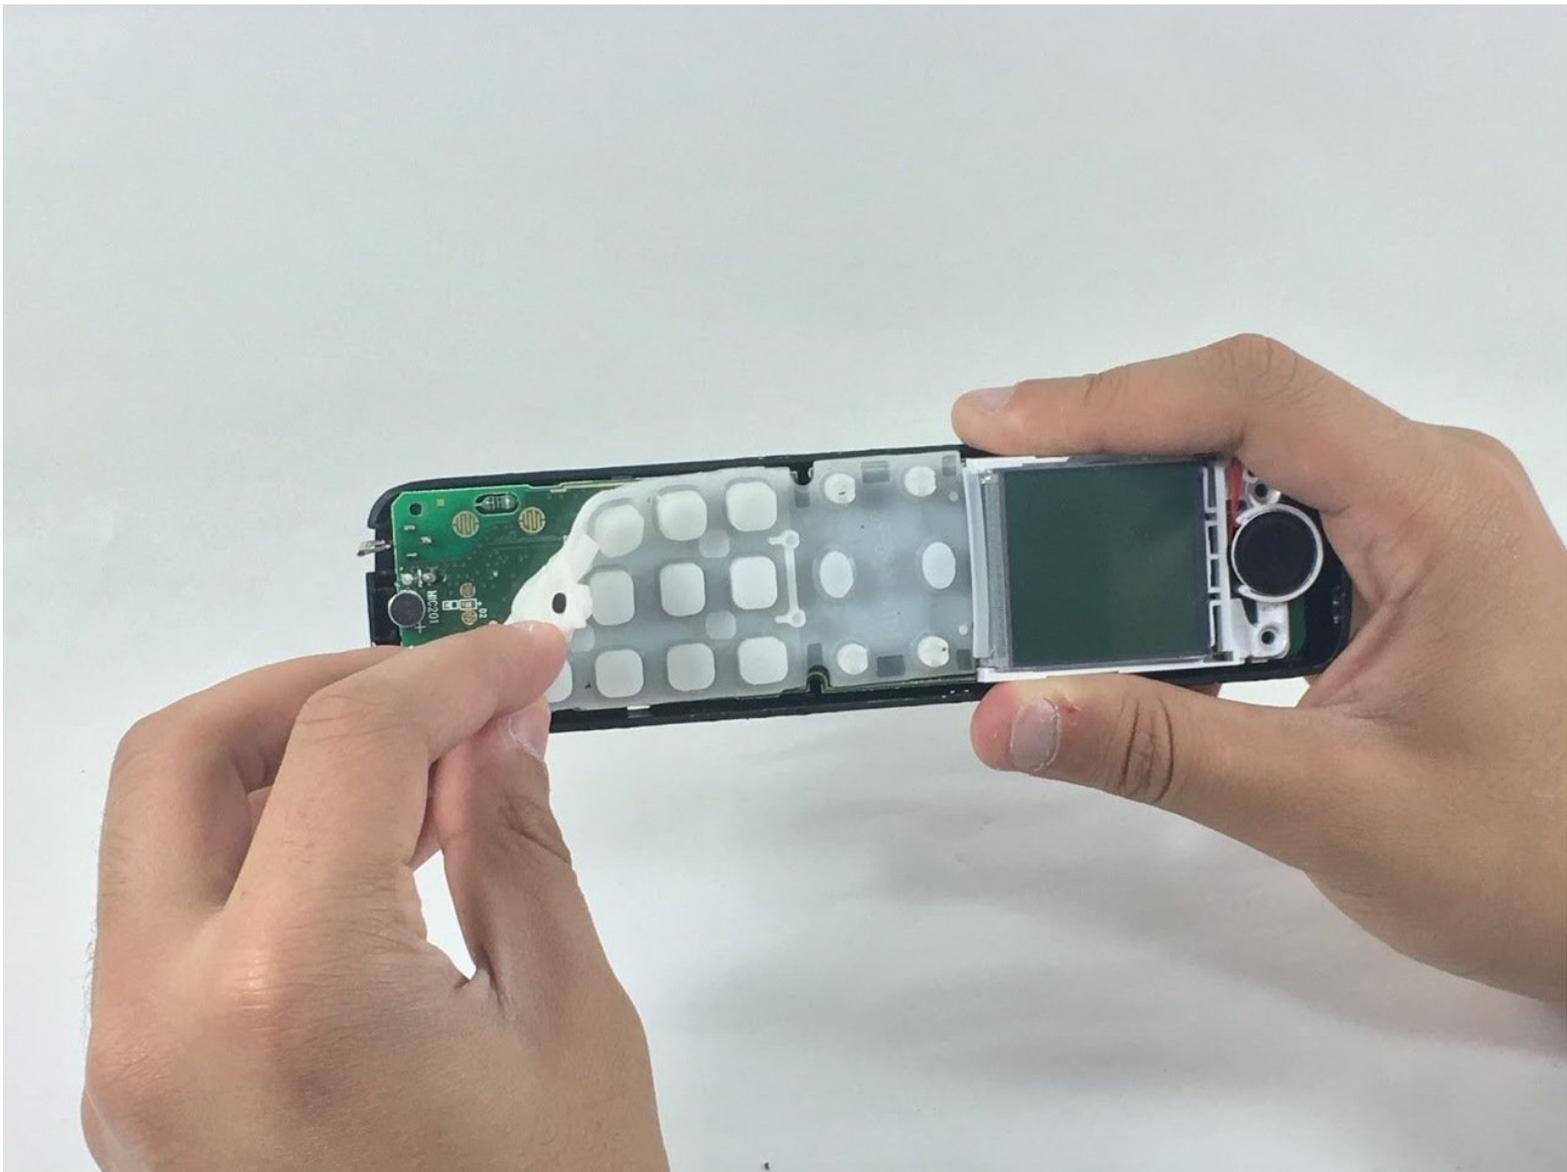

INTRODUCTION

This guide demonstrates a walk-through of steps needed to completely dismantle the phone in order to locate the buttons and replace them with new ones.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
 - [Metal Spudger](#) (1)
-

Step 1 — Buttons



- Remove the sliding back cover from case.

Step 2



- lift the battery and unplug the two pin cable from phone base.

Step 3




- Remove the two 10mm screws at the base of the phone .

Step 4




- ⚠ Use the spudger along the edge using a firm but gentle lifting motion.
- ⓘ When doing this feel for the hooks that latch the phones front and back cases.

Step 5

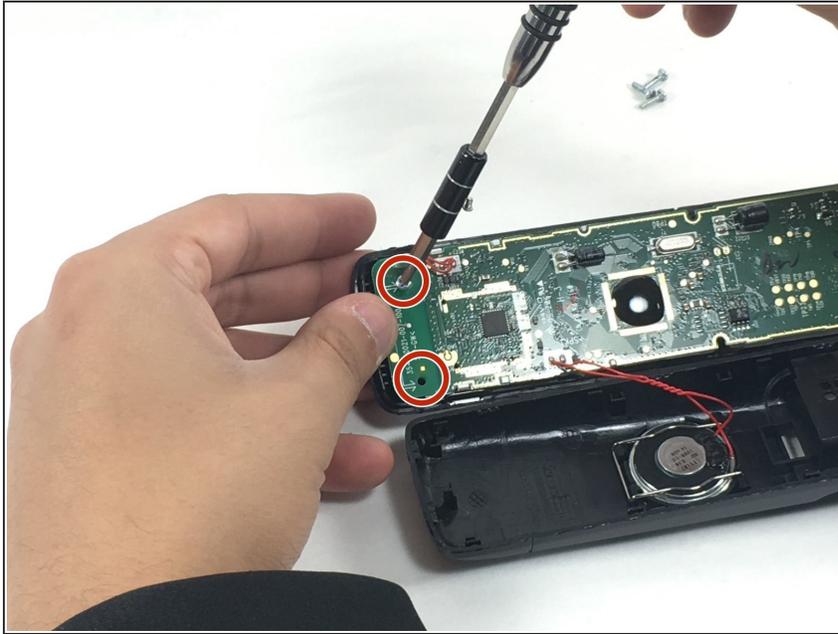


- Unscrew a second set of 10mm screws to obtain access to the other side.

Step 6

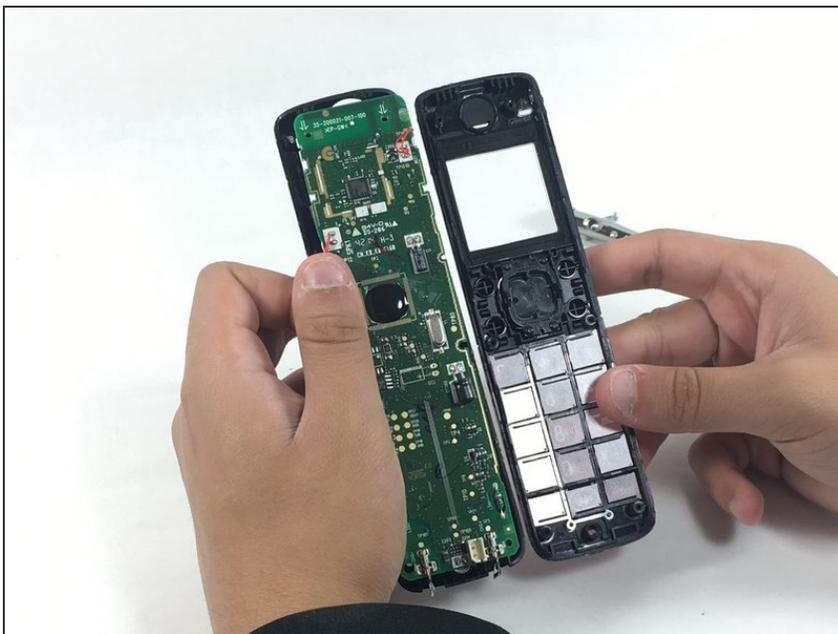

- ⓘ The front of the phone can now be placed to the side
- You will notice the button covers, these display the numerical values and positions of each button
- These can be placed aside as they will get in the way later.

Step 7

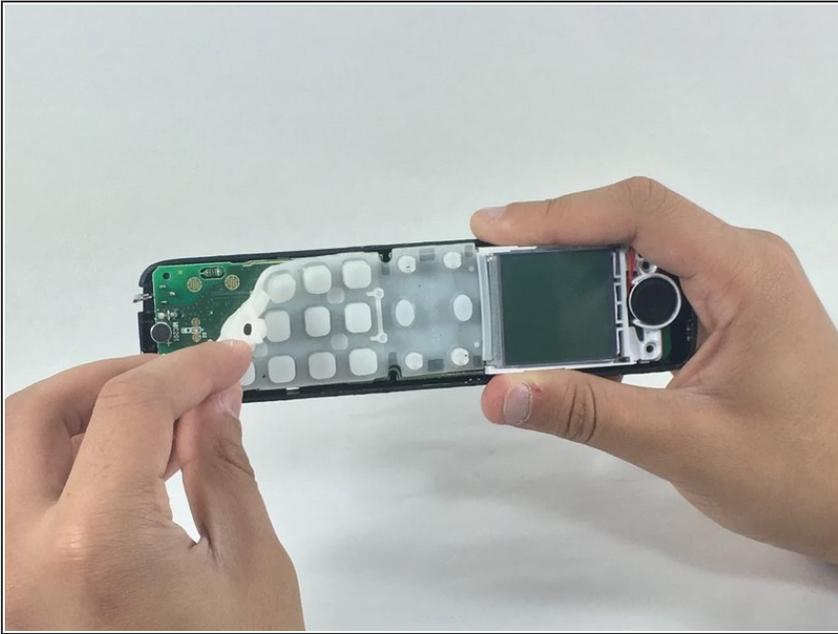

- ⓘ Now the silicon pads for the phone buttons are exposed.
- These can easily be removed by pulling away the pads from the circuit board.
- To replace simply align the new pad onto the button positions.

To reassemble your device, follow these instructions in reverse order.