



Samsung BD-H5100 Media Controls Replacement

This guide will teach you how to replace the media controls in the Samsung BD-H5100.

Written By: Mira Patel



INTRODUCTION

We will teach the reader how to replace the media controls in the Samsung BD-H5100 in the case the controls don't work anymore when pressed.



TOOLS:


- [Spudger](#) (1)
 - [64 Bit Driver Kit](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Media Controls



- Use the Phillips Head #2 screwdriver to remove the three 10mm screws on the back panel.

Step 2

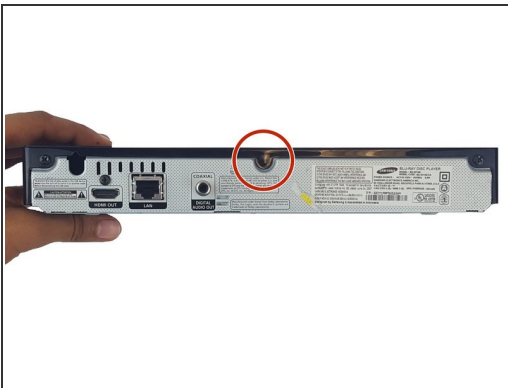

- Use the plastic spudger to pry open the top panel from the center tab.
- ⚠ Be careful not to break the ribbon connecting the motherboard on the bottom panel to the top panel.

Step 3



- Pull the ribbon gently from one corner by the blue tab to remove it.

Step 4



- Use a Phillips Head #00 to unscrew the two 7mm screws on the media controls.

Step 5



- Remove the white cover from the media controls.

To reassemble your device, follow these instructions in reverse order.