


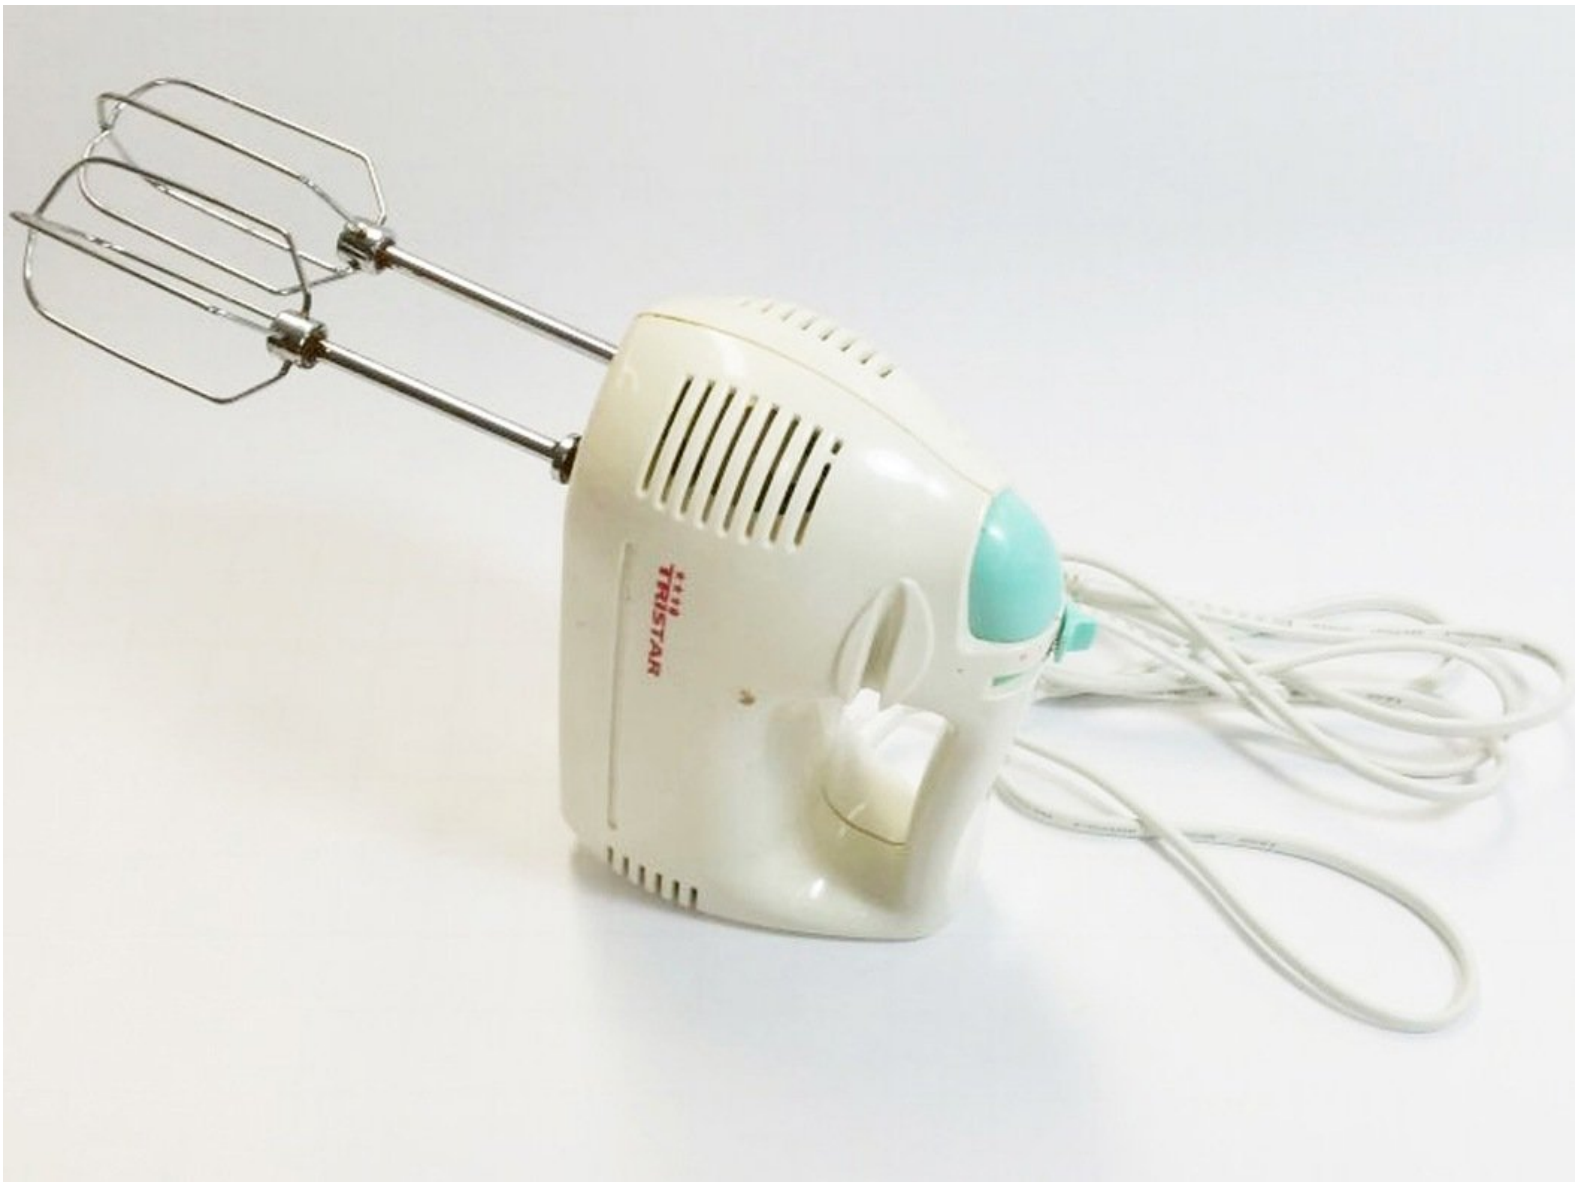

Tristar Handmixer Gears Replacement

This fast fix will explain how the mixer can be opened, cleaned and its gears replaced without harming the product.

Written By: njjong





INTRODUCTION

Be aware that too much liquid might harm the engine of the product. For opening the product a spanner screwdriver is needed.

TOOLS:




- [Phillips #0 Screwdriver](#) (1)
 - [Spanner 3.0 Screwdriver](#) (1)
-

Step 1 — Gears

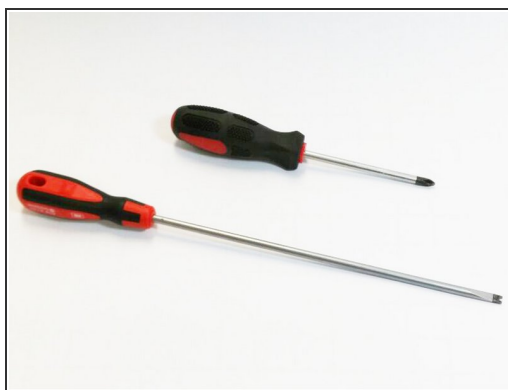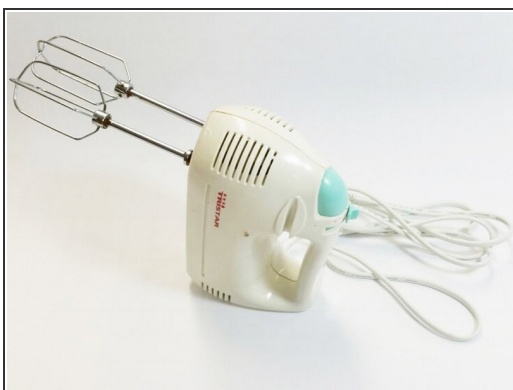

- Remove all the screws with the spanner and Phillips screwdrivers.


Step 2

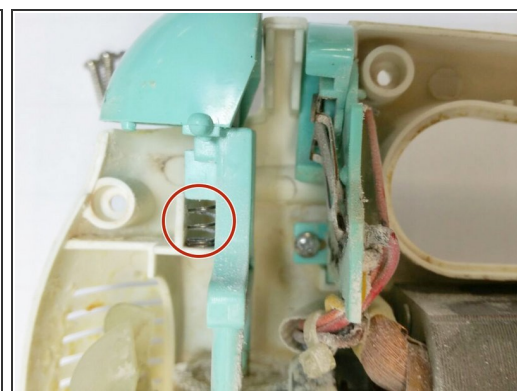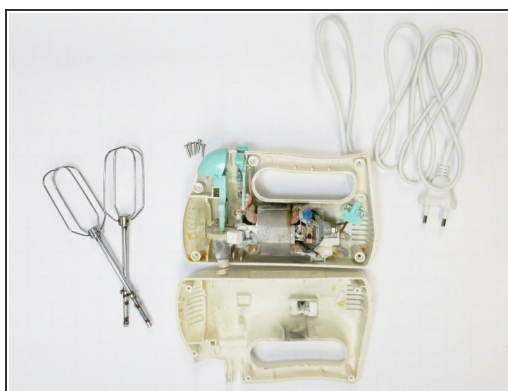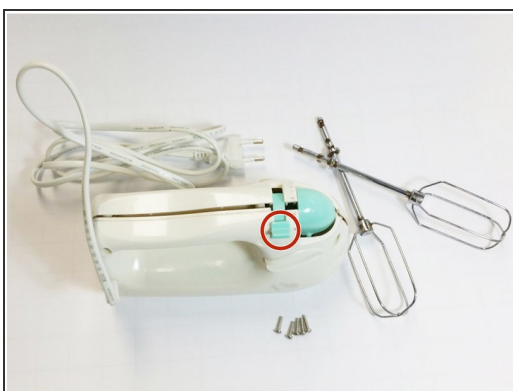

- Take off the mixer heads.
 - ❗ Push the eject button to do so.
- Put the mixer in mode 5.
- Gently open the mixer.

⚠ The spring might jump loose!!

Step 3

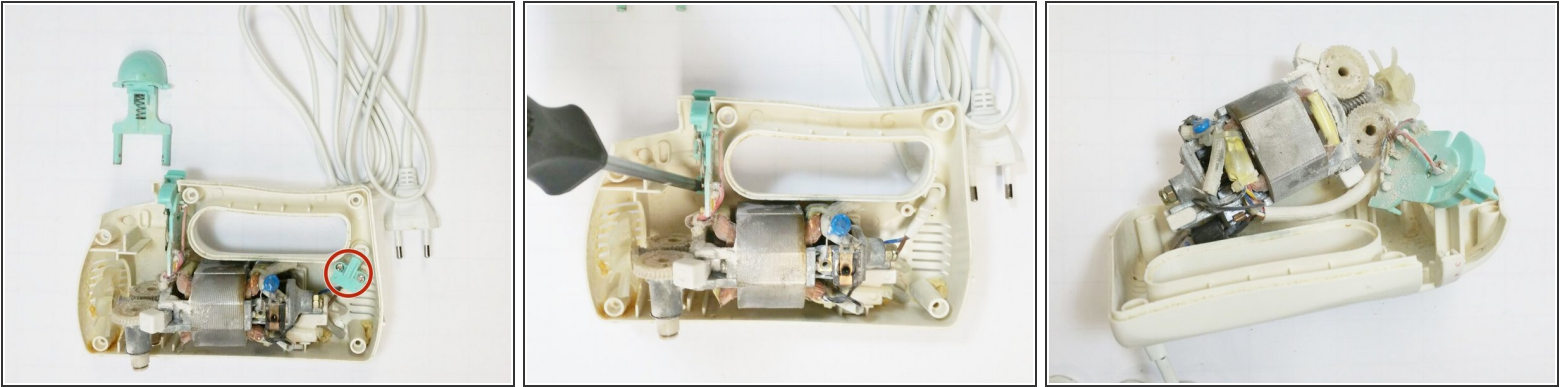

- Remove the eject button by carefully lifting it out.
- Remove the cable holder using the Phillips screw driver.
- Remove the screw holding the mode button.
- Carefully lift out the electrical unit.

Step 4



- Remove the locking rings from the back end of the gears.
- ① Use 2 screwdrivers to apply force on both sides of the locking rings.
- Lift the gears from encapsulant.

Step 5



- Replace gears.
- Reassemble the mixer.
- Happy mixing!

To reassemble your device, follow these instructions in reverse order.