



How to reset Tchibo Cafissimo


Just a few steps and the Tchibo Cafissimo is...

Written By: Schlauer Bauer

INTRODUCTION

Just a few steps and the Tchibo Cafissimo is reset.

Step 1 — Reset the machine

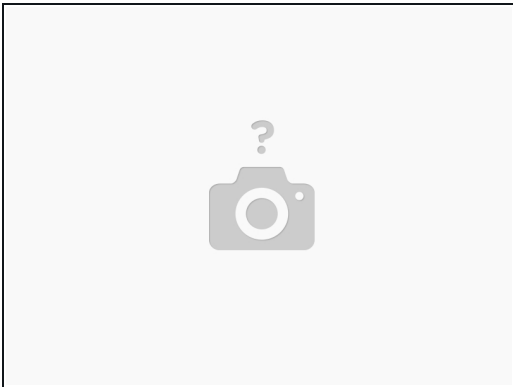

- Open the big metallic lever and switch of the machine
- Press the espresso button (the top of the 3 coffee buttons) and while holding switch on the machine. Release the button. (If it's not working, repeat this step with pressing the two top coffee buttons)
- Close the big lever and open it again. (Probably repeat it twice)
- If it worked the machine gives a signal (beep). So it is resetted

Arbeite die Schritte in umgekehrter Reihenfolge ab, um dein Gerät wieder zusammenzubauen.