



Toshiba Satellite L305-S5955 RAM Replacement

In this guide, you will learn how to replace the RAM in your Toshiba Satellite laptop.

Written By: Samuel Baker



INTRODUCTION

A quick and easy way to learn how to replace the RAM in your Toshiba Satellite.



TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-


Step 1 — RAM



⚠ Make sure before proceeding to power down, remove the charger, and close your laptop, to avoid damaging your device or harming yourself.

- Flip laptop over and locate the RAM cover in the middle of the laptop.

Step 2

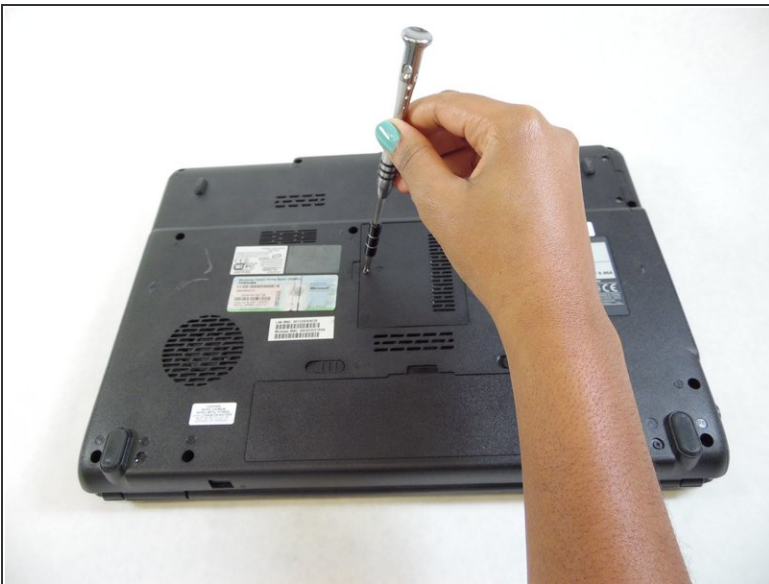

- Unscrew the screw marked "4" with PH1 screwdriver.
- Remove cover by lifting up and pulling it out.

Step 3




- Push latches outwards away from the RAM chip until it pops up.

⚠ Fingers may be pinched by the latches.

- Pull RAM chip out.

Step 4

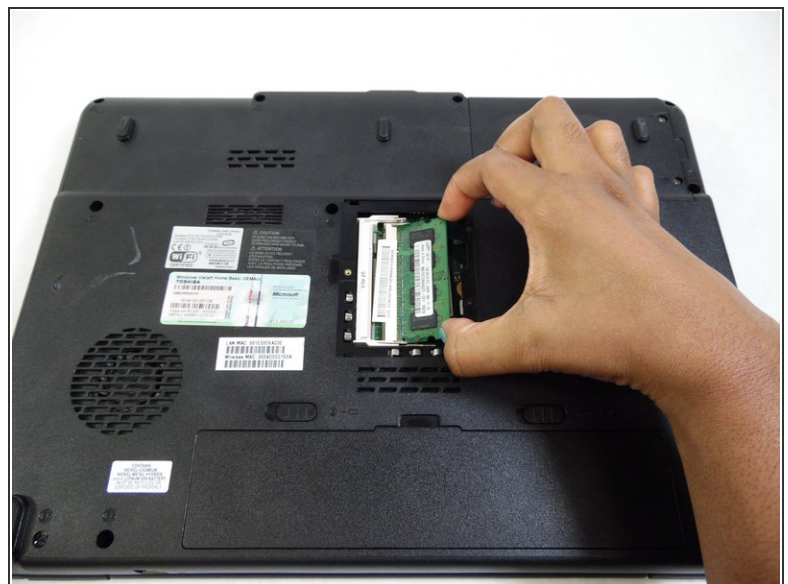

- Repeat Step 3 for the bottom RAM chip.

This document was generated on 2020-11-28 05:33:42 AM (MST).

To reassemble your device, follow these instructions in reverse order.