



CrystalView NB4-35788 Battery Replacement

This guide contains steps to replace the battery of the CrystalView NB4-35788.

Written By: Courtney Clark



INTRODUCTION

Replace your dying battery to restore the power of your CrystalView Netbook.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [Spudger](#) (1)
- [Soldering Iron](#) (1)



PARTS:

- [Solder](#) (1)

Step 1 — Battery



⚠ Power off the device before beginning disassembly.

● Using a Phillips #00 Screwdriver, take out the following screws:

- Two 6 mm screws
- Three 4 mm screws
- Four 3 mm screws


i These screws can be taken out in any order.

Step 2



● Using a Phillips #00 Screwdriver, remove the screws located under the top two standoffs.

Step 3

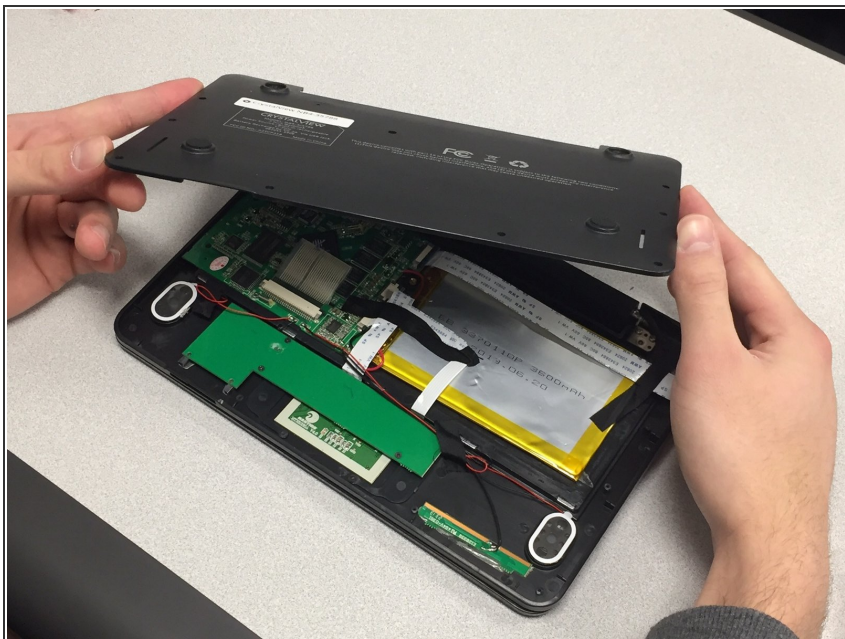


- Remove the cover off the back of the device.

Step 4



- Remove the battery using a plastic spudger.
- ⚠ Do not use a metal spudger, as this can damage the device.

Step 5

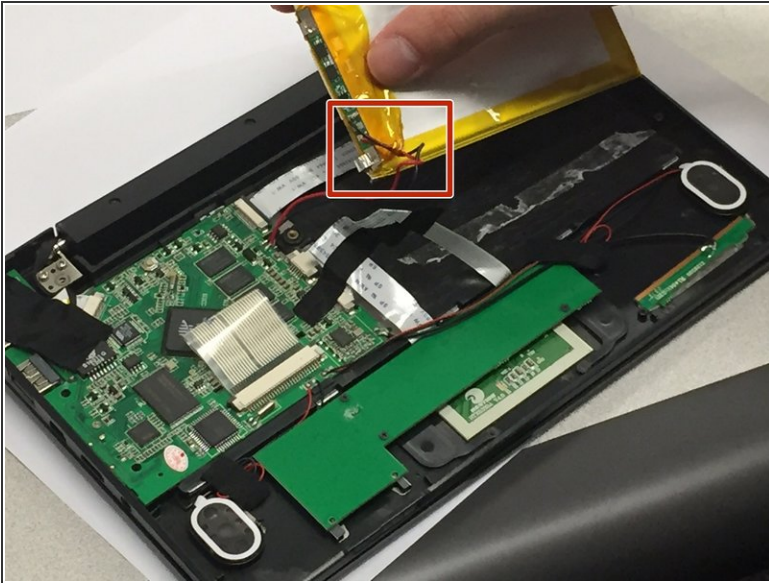

- Peel back the yellow film on the old battery to expose the red and black wires
- De-solder these wires to disconnect the old battery
- ⚠ Be careful while using a soldering iron as it is extremely hot.
- Follow the [How To Solder and Desolder Connections](#) guide for help.

To reassemble your device, follow these instructions in reverse order.