



Samsung Galaxy Tab 3 10.1 Motherboard Replacement

Written By: Corey Brown



TOOLS:

Spudger (1)
Phillips #000 Screwdriver (1)
iFixit Opening Picks (Set of 6) (1)
Nylon Tipped Tweezers (1)

PARTS:

Galaxy Tab 3 10.1 Motherboard (1)

Step 1 — Rear Case



- Insert an opening pick between the rear case and the plastic rim.
- ⓘ You may need to add multiple picks to detach the clips.
- Slide the pick along the edge of the rear case until you release the plastic clips attaching the rear case to the display.
- Continue to slide the pick around the edge of the rear case until all clips are released.

Step 2



- Lift the case up to remove it.

Step 3 — Battery




- Use the flat end of a nylon spudger to pry up the **black** plastic tabs securing the two ZIF connectors.

Step 4




- Use the flat end of a nylon spudger to pry up the **brown** plastic tab securing the orange ribbon cable.

Step 5

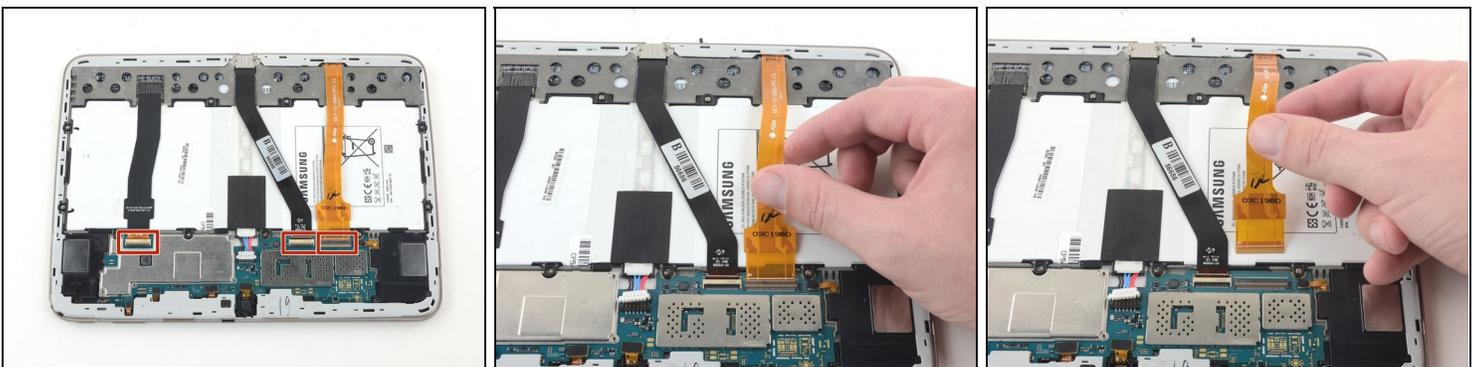


- Remove all three ribbon cables by gently pulling the cables away from the ZIF connectors.

Step 6

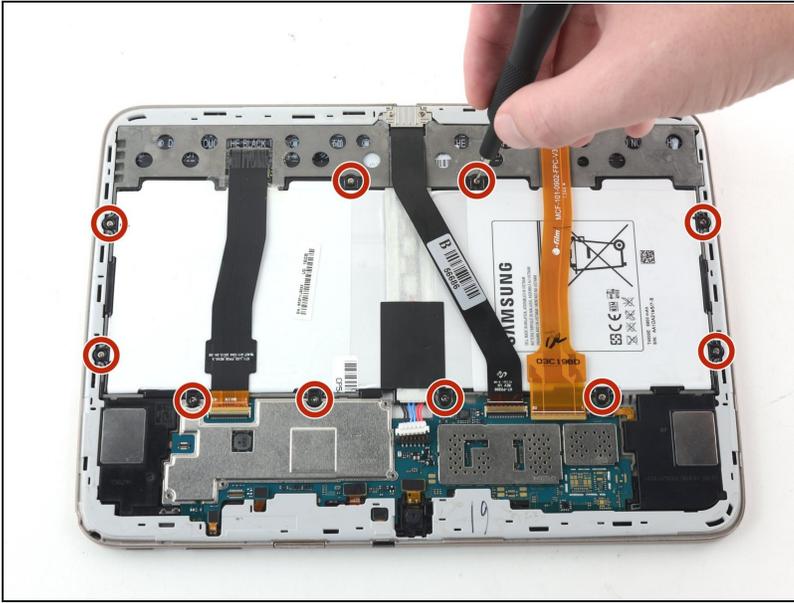


- Use a Phillips #000 screwdriver to remove the ten 3mm screws securing the battery to the chassis.

Step 7

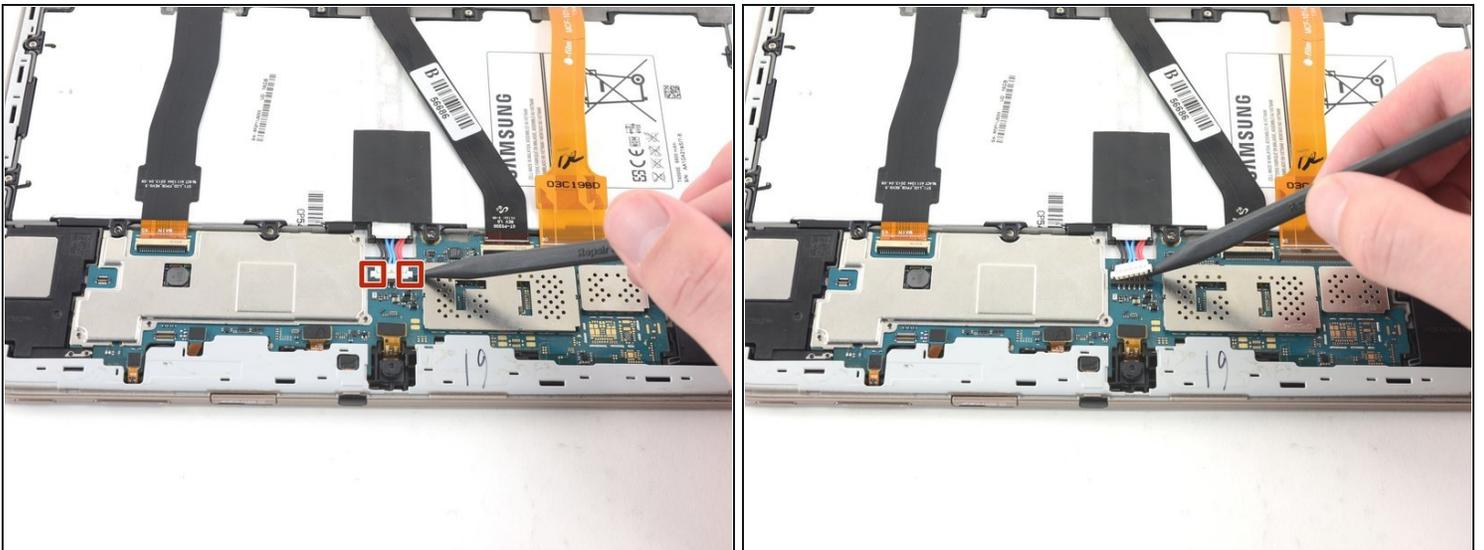

- Use the pointed end of a nylon spudger to pry the two battery connections away from the motherboard.

Step 8

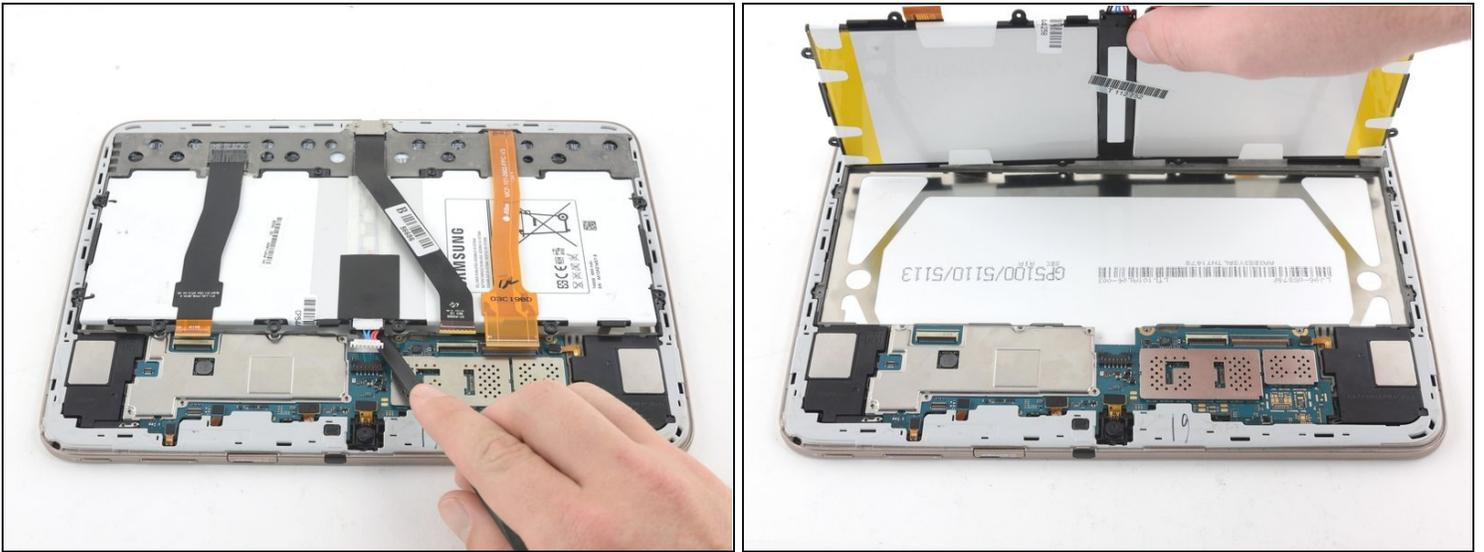


- Lift with a nylon spudger to remove the battery.

Step 9 — Motherboard



- Insert an opening pick between the plastic frame and the screen.
- Slide the opening pick around the perimeter of the screen.
 - ① You will hear clicking noises as each plastic clip is released from the display chassis.

Step 10

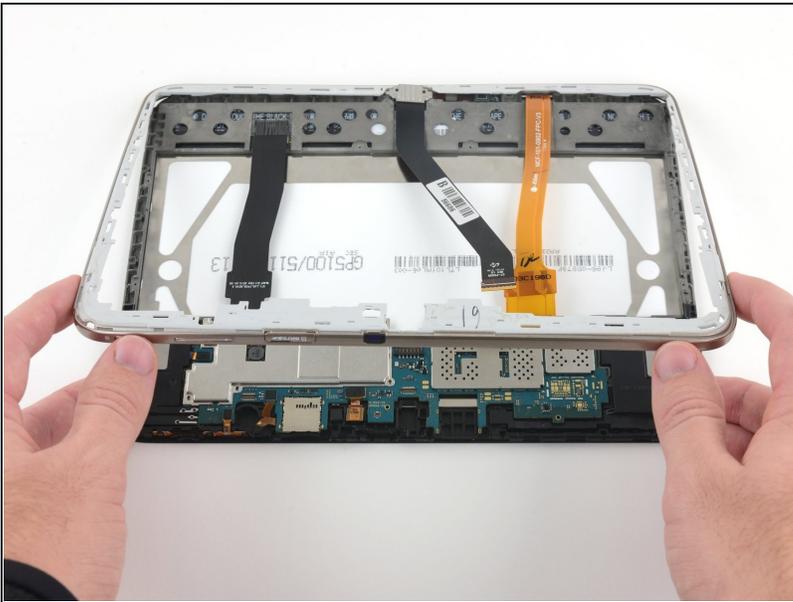

- Lift the plastic frame to remove.


⚠ Avoid the three delicate ribbon cables.

Step 11




- Use a Phillips #000 screwdriver to remove the 3mm screw attaching the motherboard to the display chassis.

Step 12

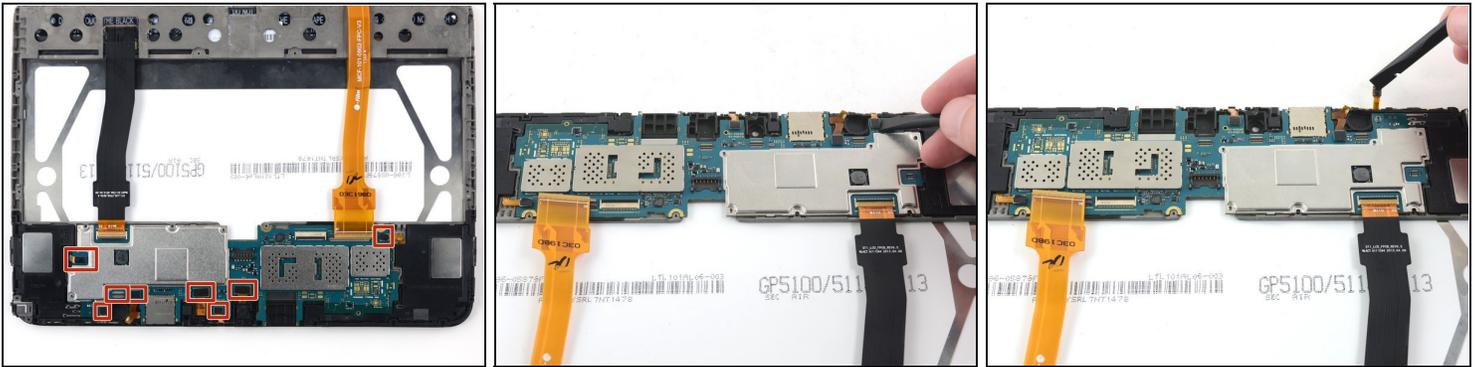

- Use a nylon spudger to flip up the eight press-fit connectors from the motherboard.
ⓘ The vibration motor is missing from these photos.

Step 13

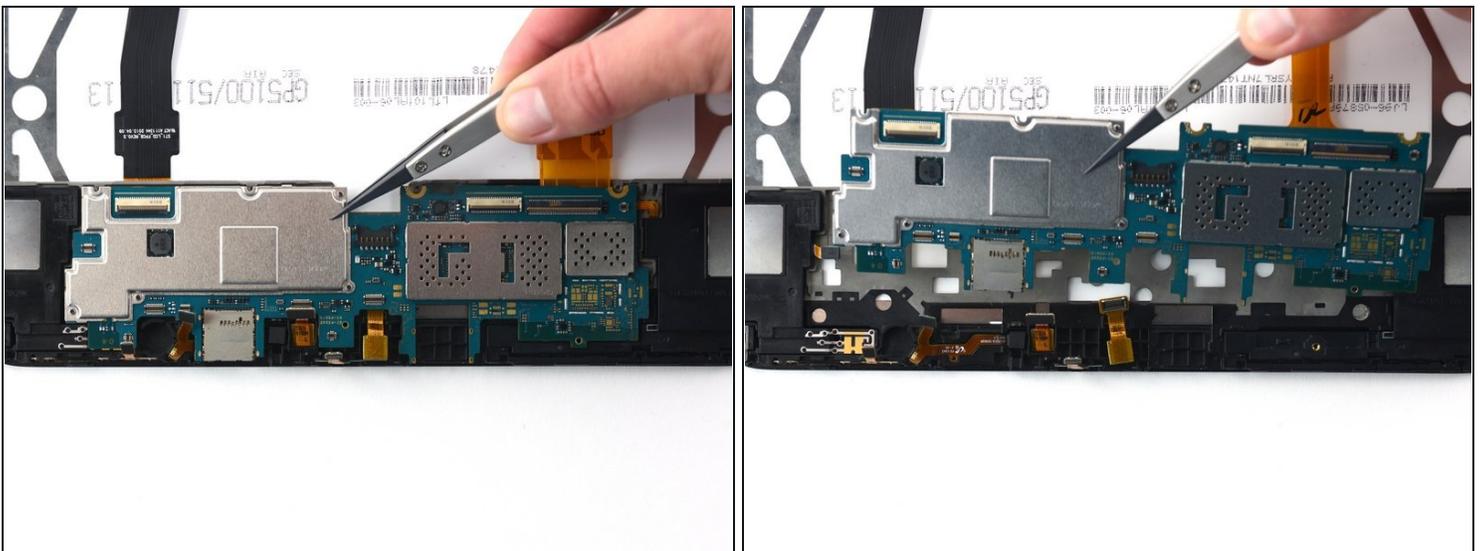

- Use nylon-tipped tweezers to remove the motherboard.

To reassemble your device, follow these instructions in reverse order.