



Asus Zenbook UX31E Battery Replacement

A guide on replacing the battery in a Asus Zenbook UX31E

Written By: Hersi Dahir



 **TOOLS:**

- [iFixit Opening Tool](#) (1)
- [T4 Torx Screwdriver](#) (1)
- [Phillips #00 Screwdriver](#) (1)

Step 1 — Back Cover




- Using a T4 Torx screwdriver, remove the ten screws at the marked locations.
- ⓘ Place the screws into a container as to not lose them.

Step 2




- Carefully slide your iFixit Opening Tool between the back panel.
- Lift the back plate of your ASUS ZenBook UX31E, and place it to the side.

Step 3 — Battery

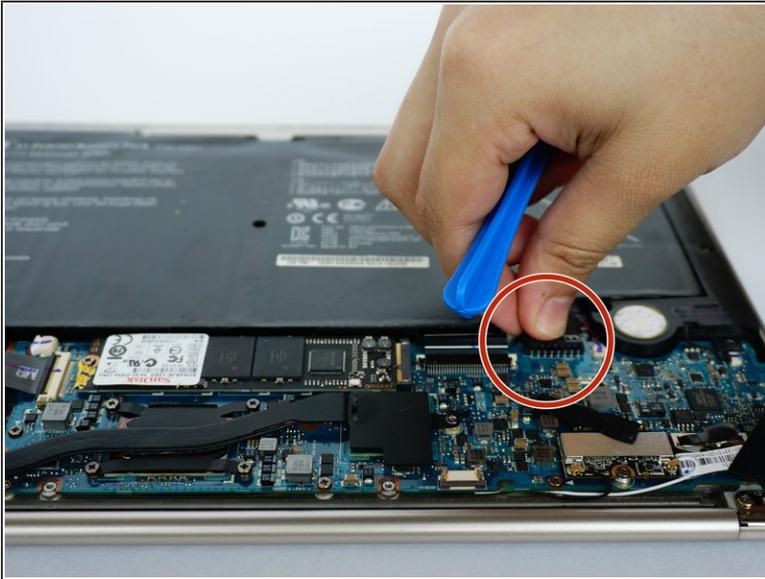

- Disconnect the battery from the motherboard by gently pulling up and down on the connector.


Step 4

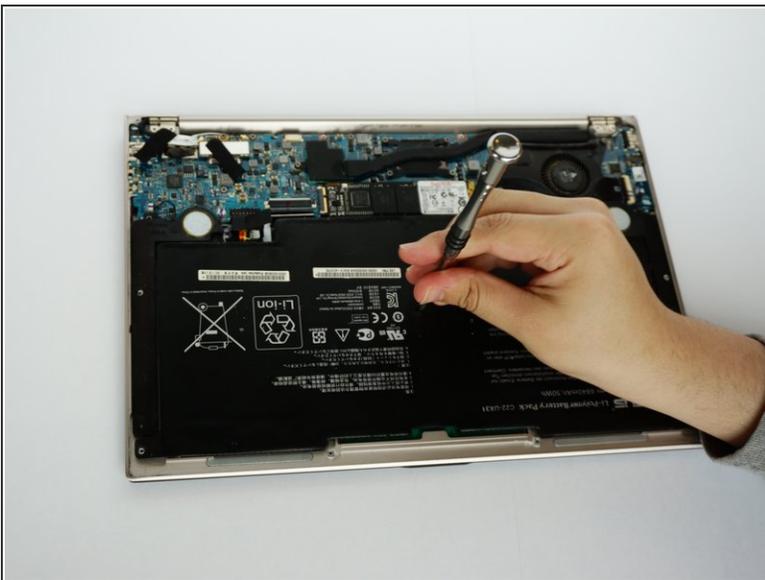

- Using the Phillips #00 screwdriver, remove the screws from the middle and the two corners of the battery.

- ① Place the screws into a container as to not lose them.

Step 5

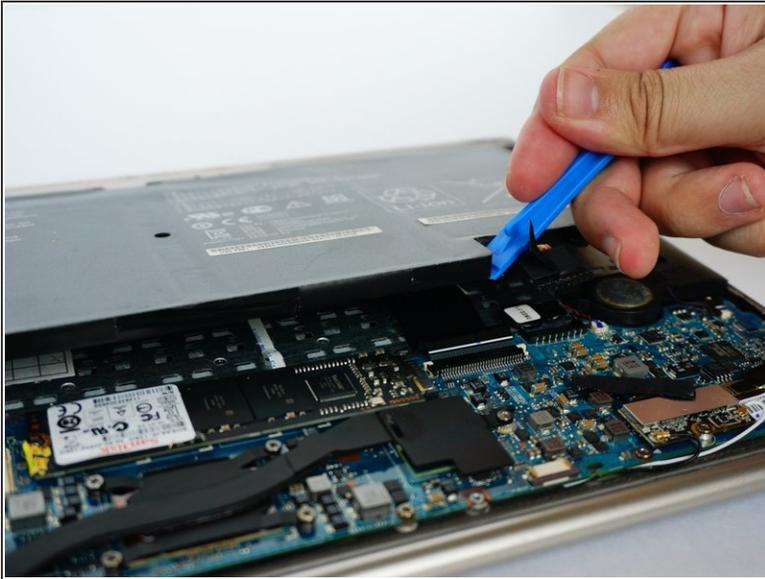

- Remove the battery. (Picture-1)
- Picture of what the battery looks like.(Picture-2)

To reassemble your device, follow these instructions in reverse order.