




Sony Vaio VPCEB11FM Battery Replacement

Laptop batteries usually last for about 1-2...

Written By: Maxine Filcher

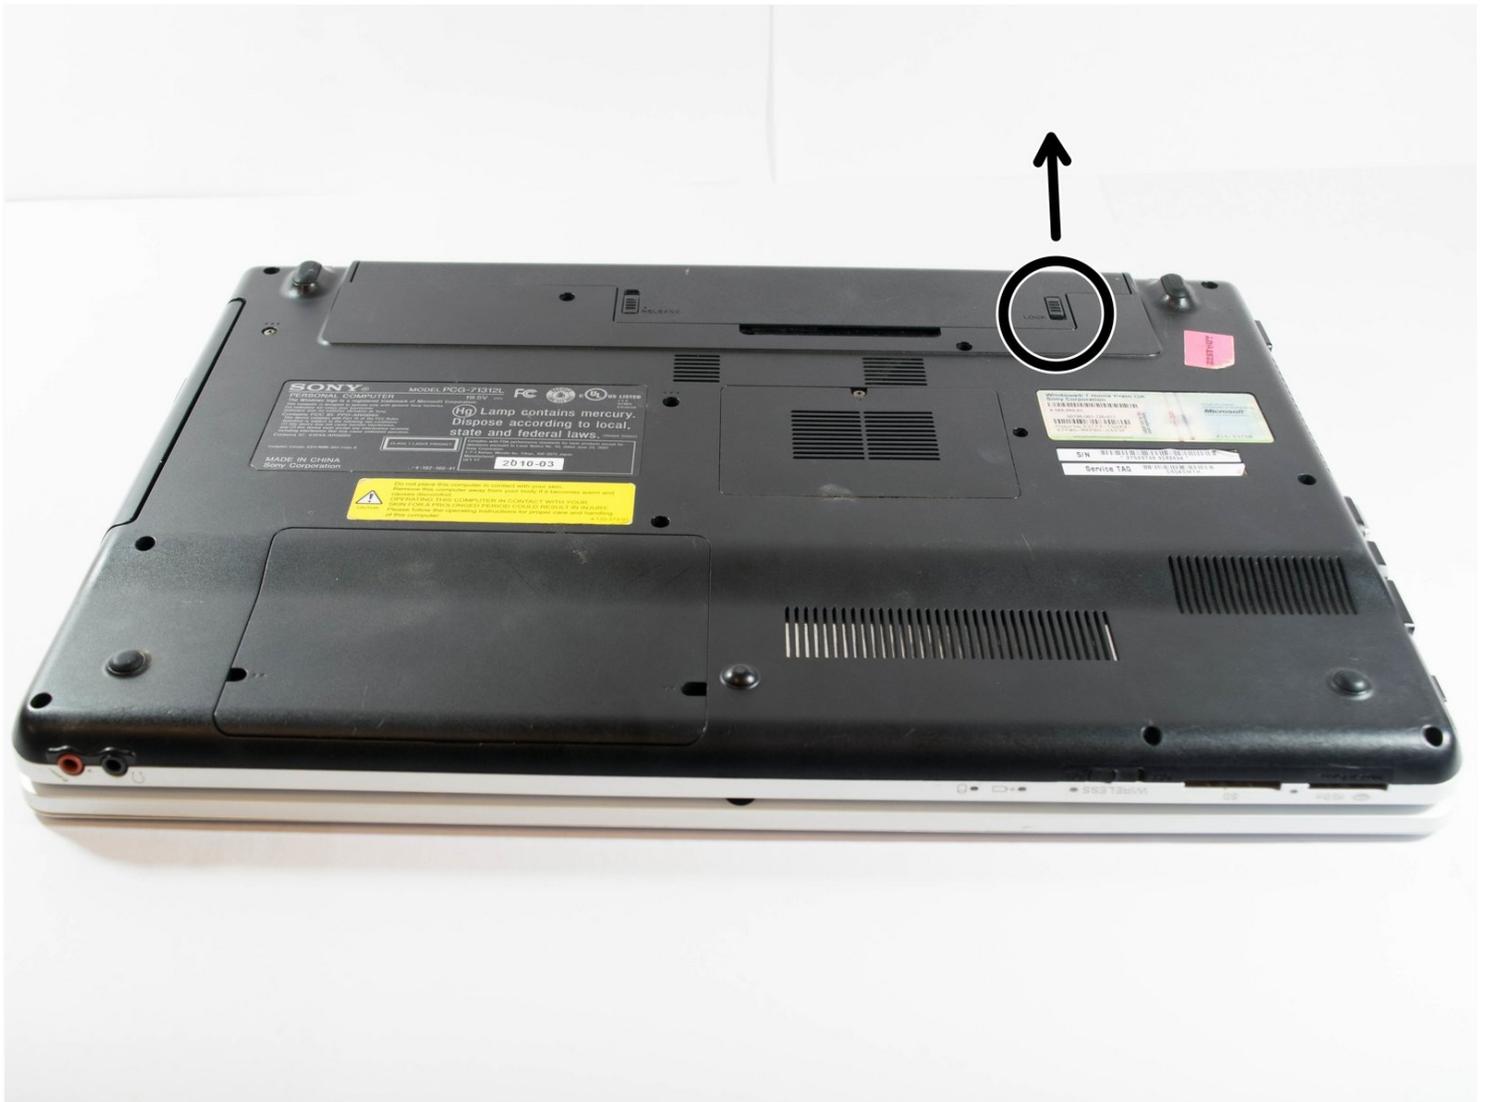

INTRODUCTION

Laptop batteries usually last for about 1-2 years, or for about 300-400 charge cycles. If your laptop battery is becoming problematic, be sure to stick to the following steps to keep your computer running smoothly. The Sony Vaio VPCEB11FM does not require any tools in order to replace its battery. This guide will be walking through the steps necessary in order to successfully replace the battery. Be sure to discard the old battery at a local hazardous-waste collection point.

Step 1 — Battery



⚠ Power down and disconnect the laptop from power supply.

- Using your fingers, unlock the tab by pushing on the slide.

Step 2



- While holding the release slide, use your thumb to lift the lip of the battery to pull it out.

Step 3



- Pull the battery out.

To reassemble your device, follow these instructions in reverse order.