




Lenovo Ideatab A1107 Battery Replacement

Replace your faulty battery on your Lenovo Ideatab A1107.

Written By: Mariah Scott

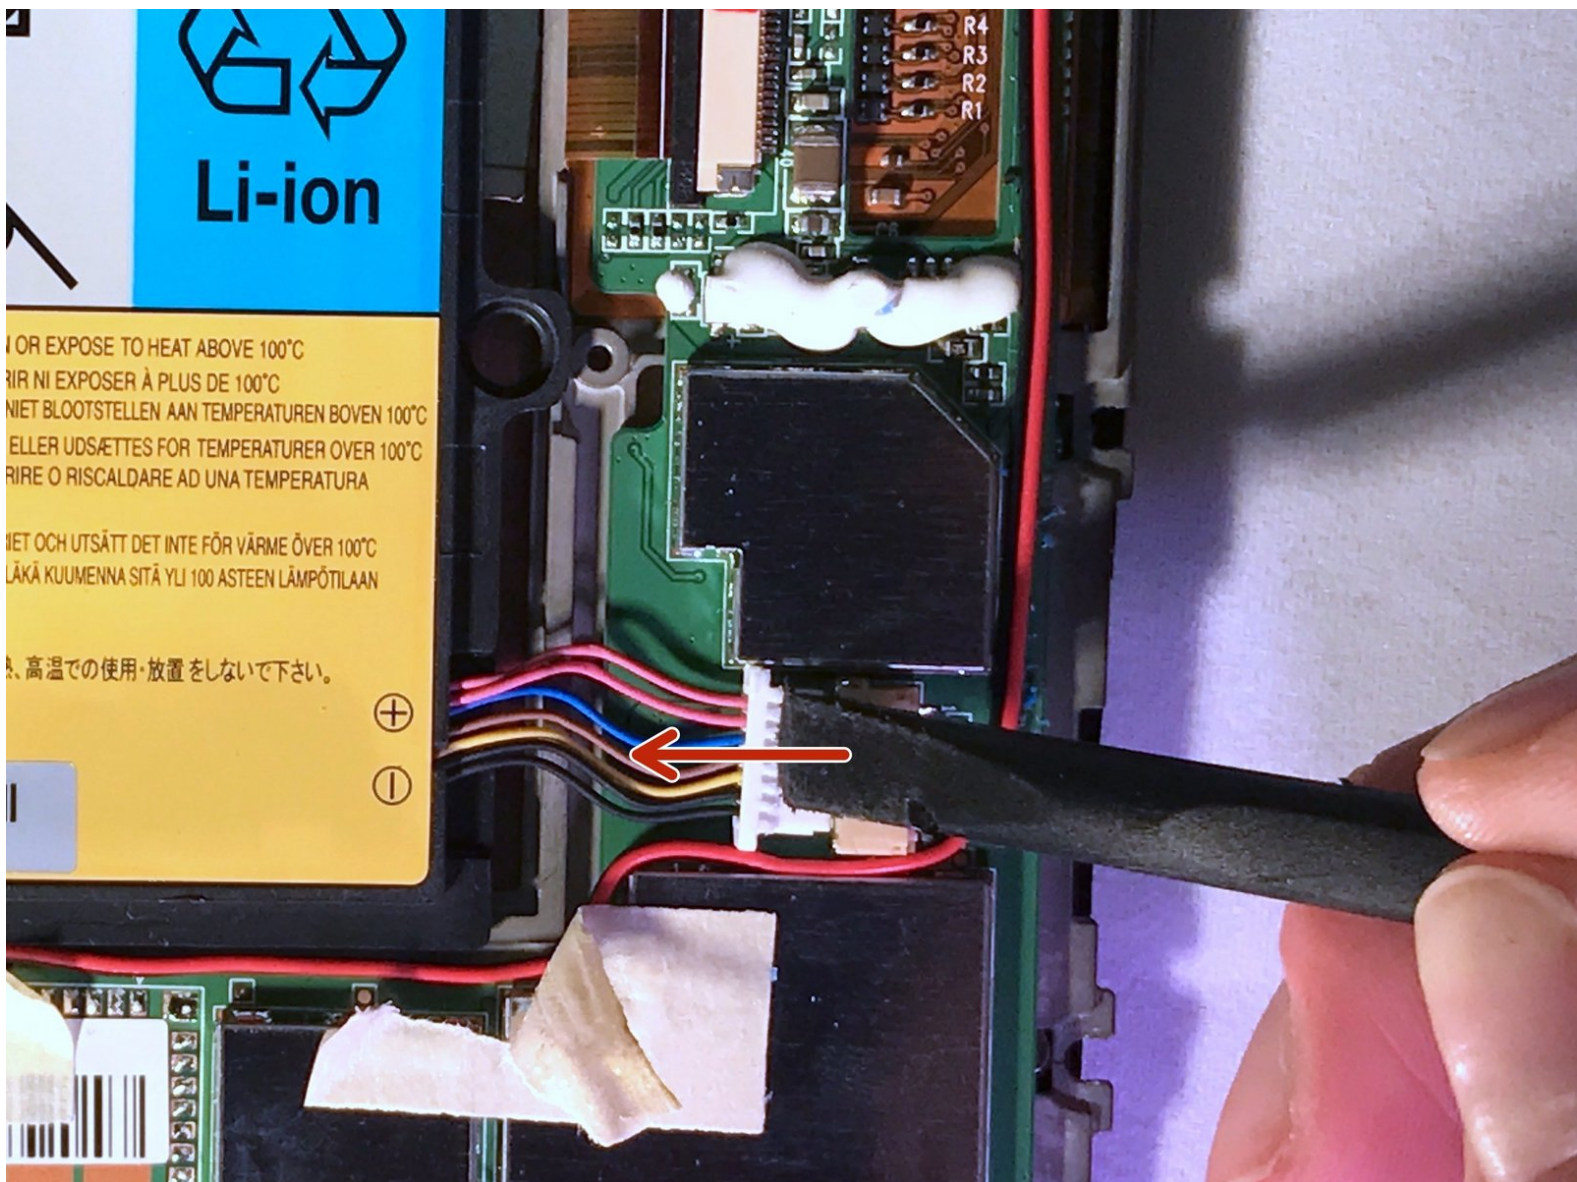

INTRODUCTION

The Lenovo Ideatab A1107 Battery Replacement guide will show users how to safely remove the battery from the Lenovo Ideatab A1107. Included in the guide are the proper tools needed to complete the replacement, as well as photos with mark-ups.

TOOLS:



- [Phillips #000 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (2)
 - [Heavy-Duty Spudger](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Back Cover



- Insert a plastic opener in-between the black back panel and the silver body of the tablet.
- Use the plastic opener to pry the back panel off by moving the plastic opener around the outside edge of the device.

Step 2

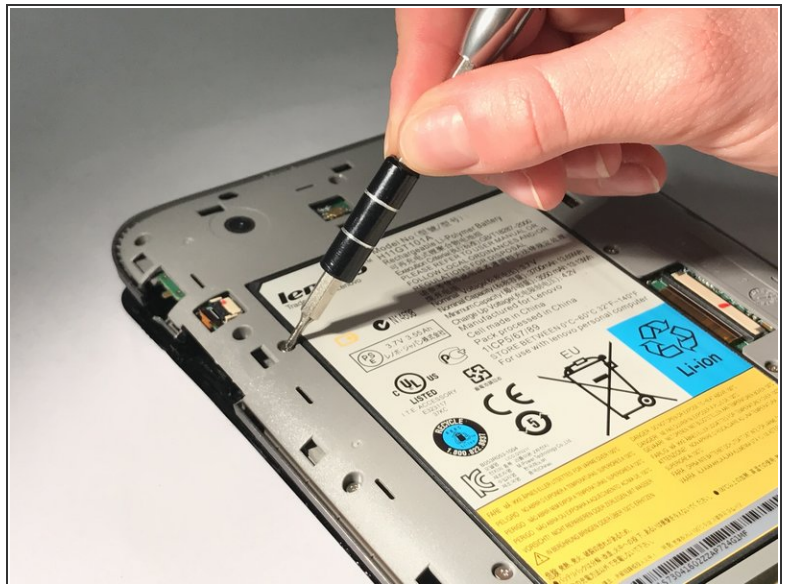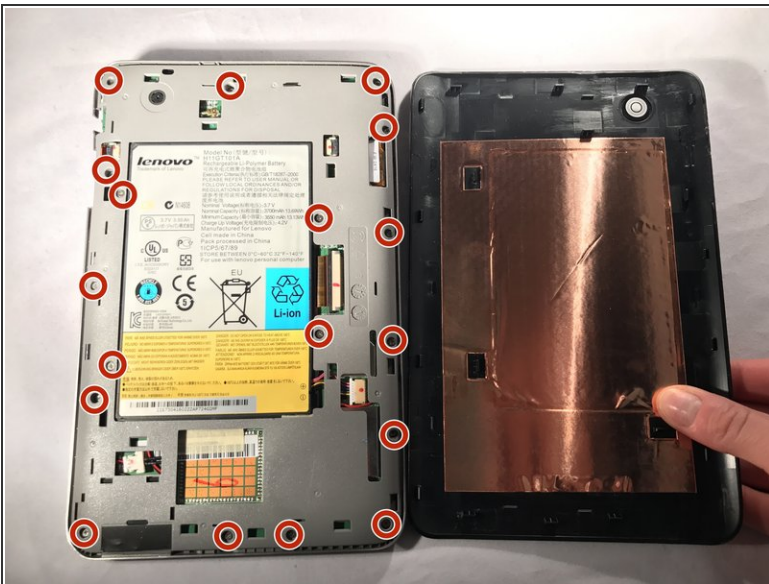


- Use a Phillips #000 screwdriver to remove the seventeen 4mm screws.

Step 3




- Lift up and remove the interior casing to expose the inner components.
- ⓘ Do not be alarmed if the volume button and lock button fall off when removing the interior casing.

Step 4 — Battery

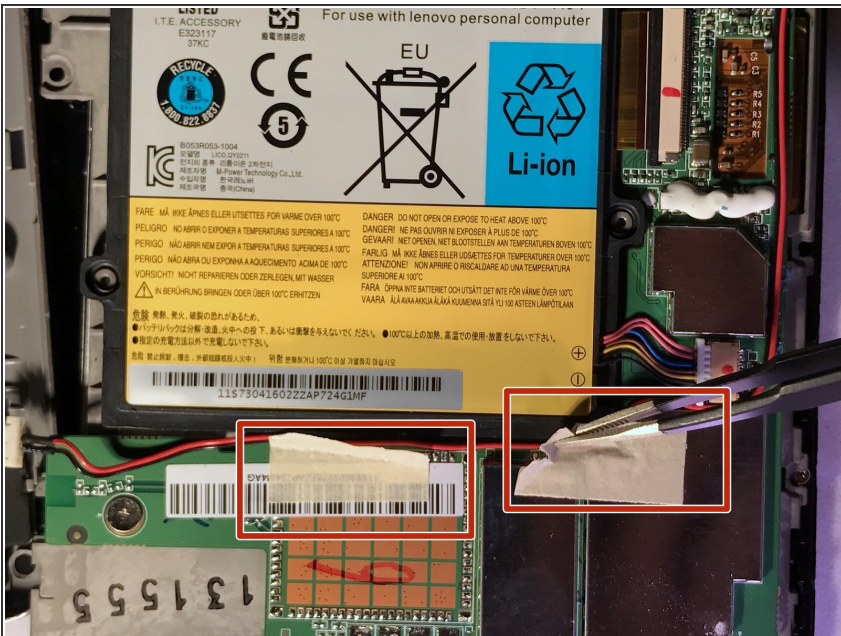


- Use tweezers to remove the tape covering the battery's wiring.

Step 5

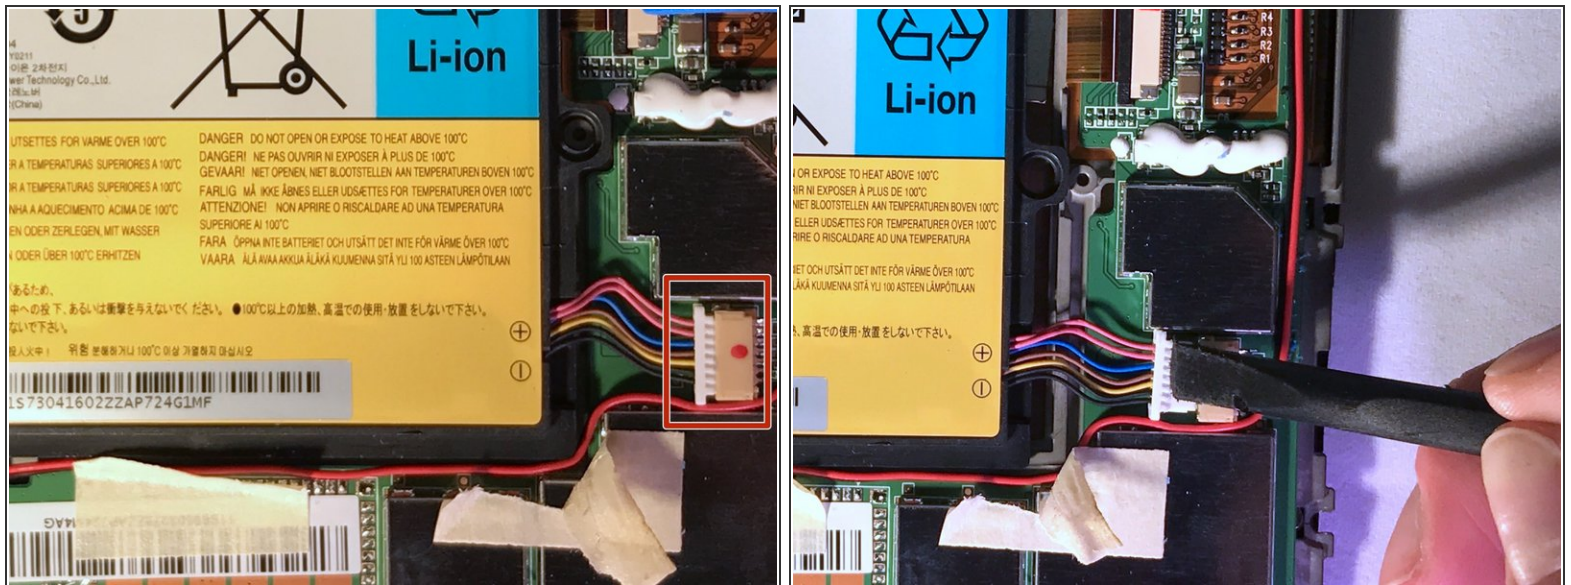

- ⚠ Do not puncture the lithium-ion battery. Ruptured batteries can catch fire or explode.
- ⚠ Do not use metal tools to remove the battery wire. They present the risk of electrocution.
- Use a plastic spudger tool to push the battery's wire harness and disconnect it from the device.

Step 6

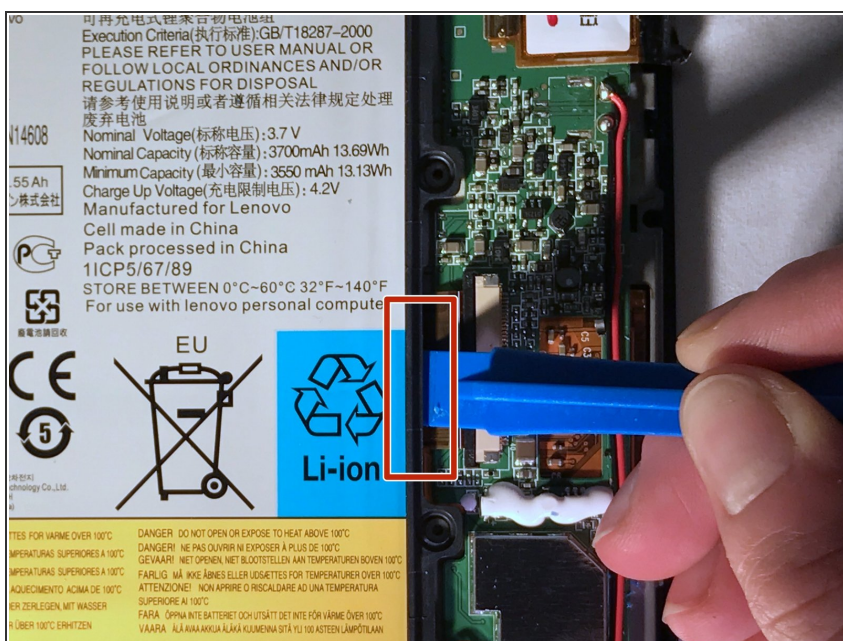

- ⚠ Do not puncture the lithium-ion battery. Ruptured batteries can catch fire or explode.
- Wedge a plastic opening tool in between the battery and the internal components of the device.
- Use the plastic opener tool to remove the battery from its casing.

To reassemble your device, follow these instructions in reverse order.