




Panasonic KX-TGA600M Speaker Replacement

This guide will show you how to replace the speaker on your phone.

Written By: Kaleb Barquera

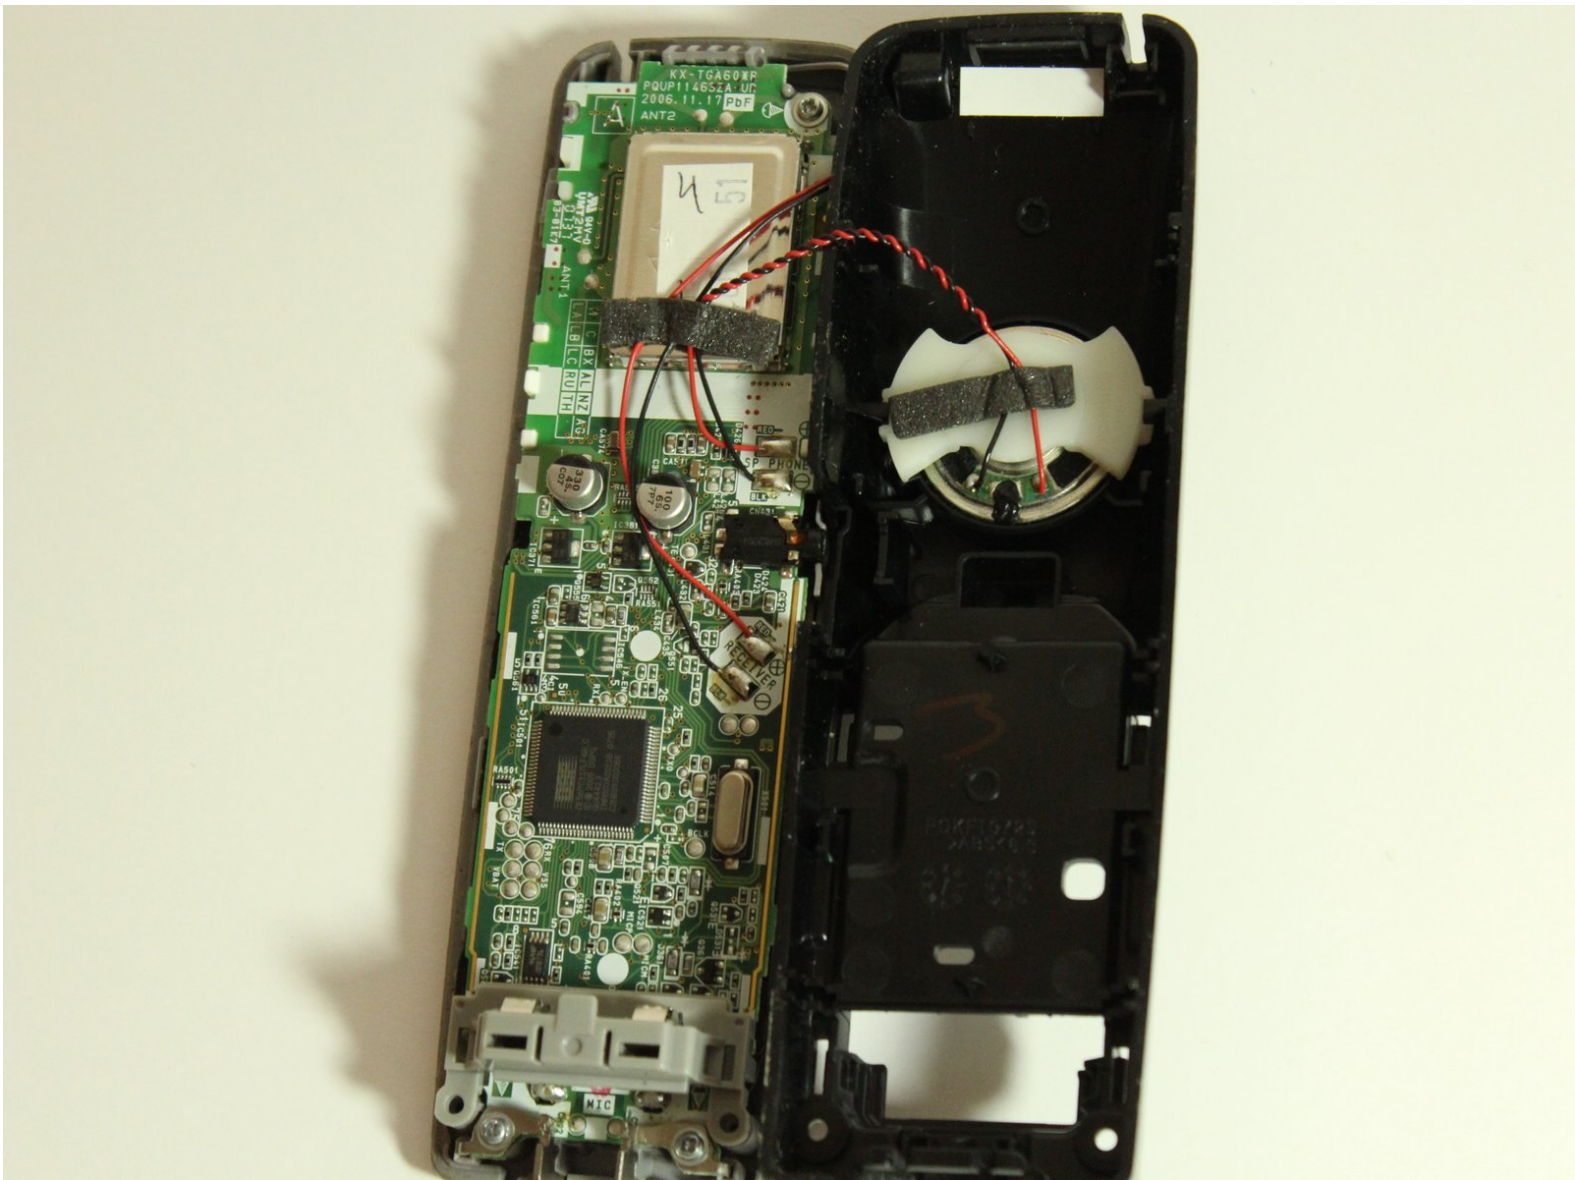

INTRODUCTION

This guide will show you how to replace the speaker on your phone.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [Soldering Iron](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Battery




- On the back of the phone, remove battery cover.
- Push down on the marked indentation and pull downwards.

Step 2




- Pull out to remove the battery.

Step 3 — Speaker

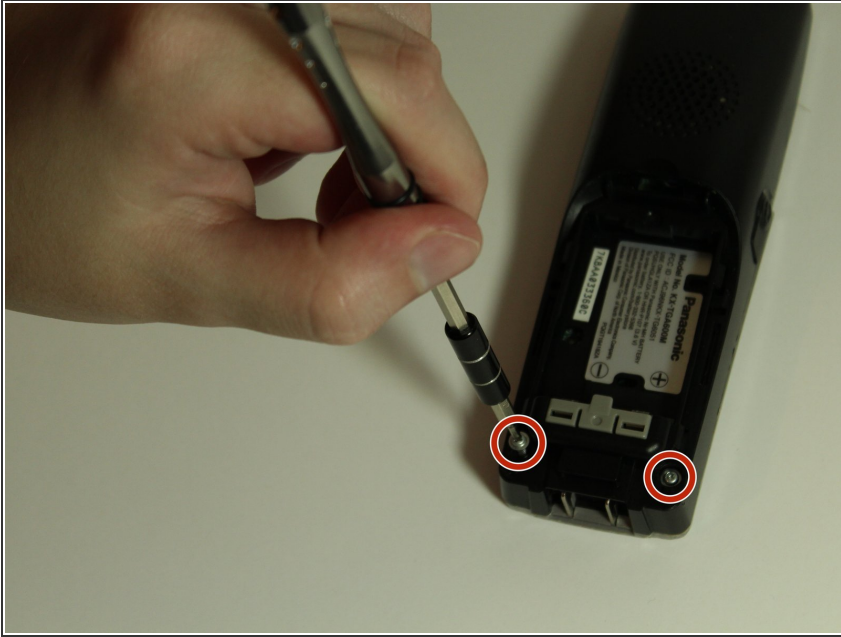

- Unscrew the two screws on the bottom left and right.


Step 4

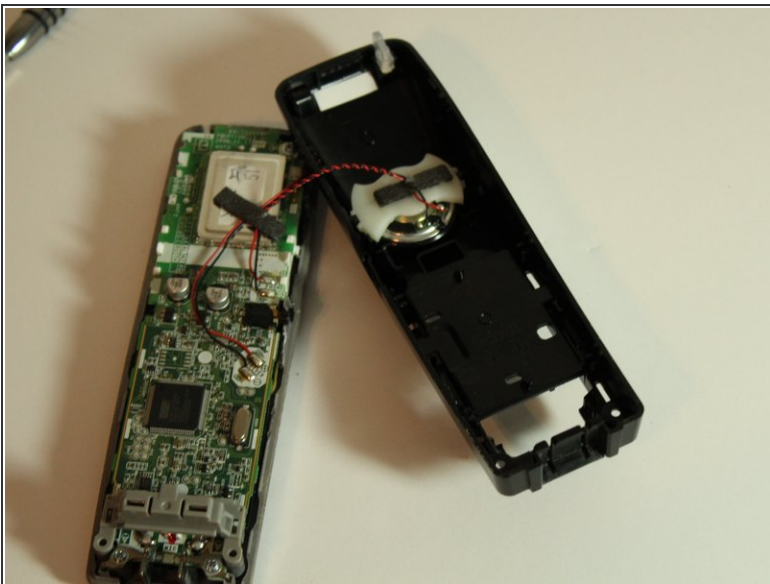

- Separate the front and back of the phone.

⚠ Store loose pieces for later replacement.

Step 5

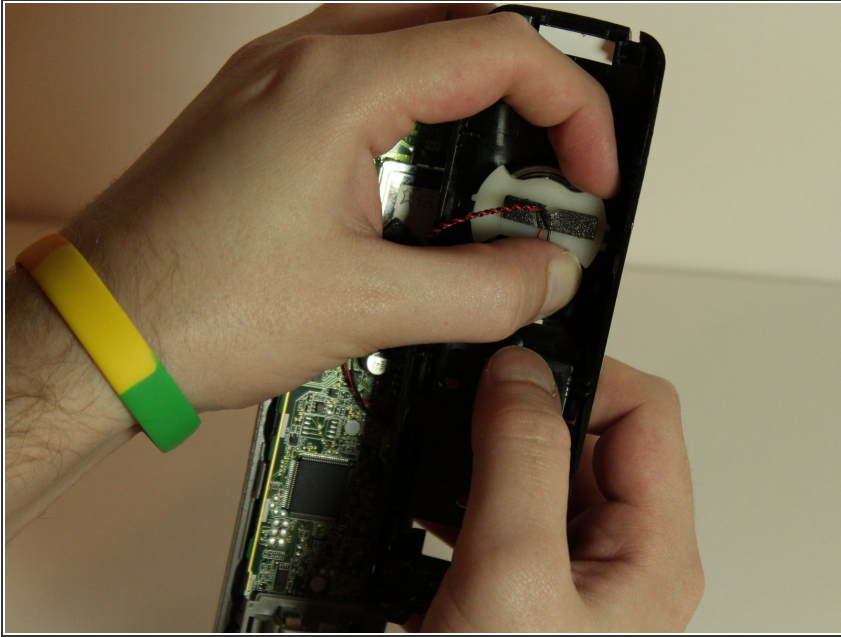

- Remove the speaker housing.
- ⓘ During reassembly, solder the wires onto the speaker housing. For information on soldering, please refer to iFixit's [soldering technique guide](#).

To reassemble your device, follow these instructions in reverse order.