




Lenovo Ideatab A1107 Speaker Replacement

Replacing the speaker on your Lenovo Ideatab A1107.

Written By: Katherine Enders

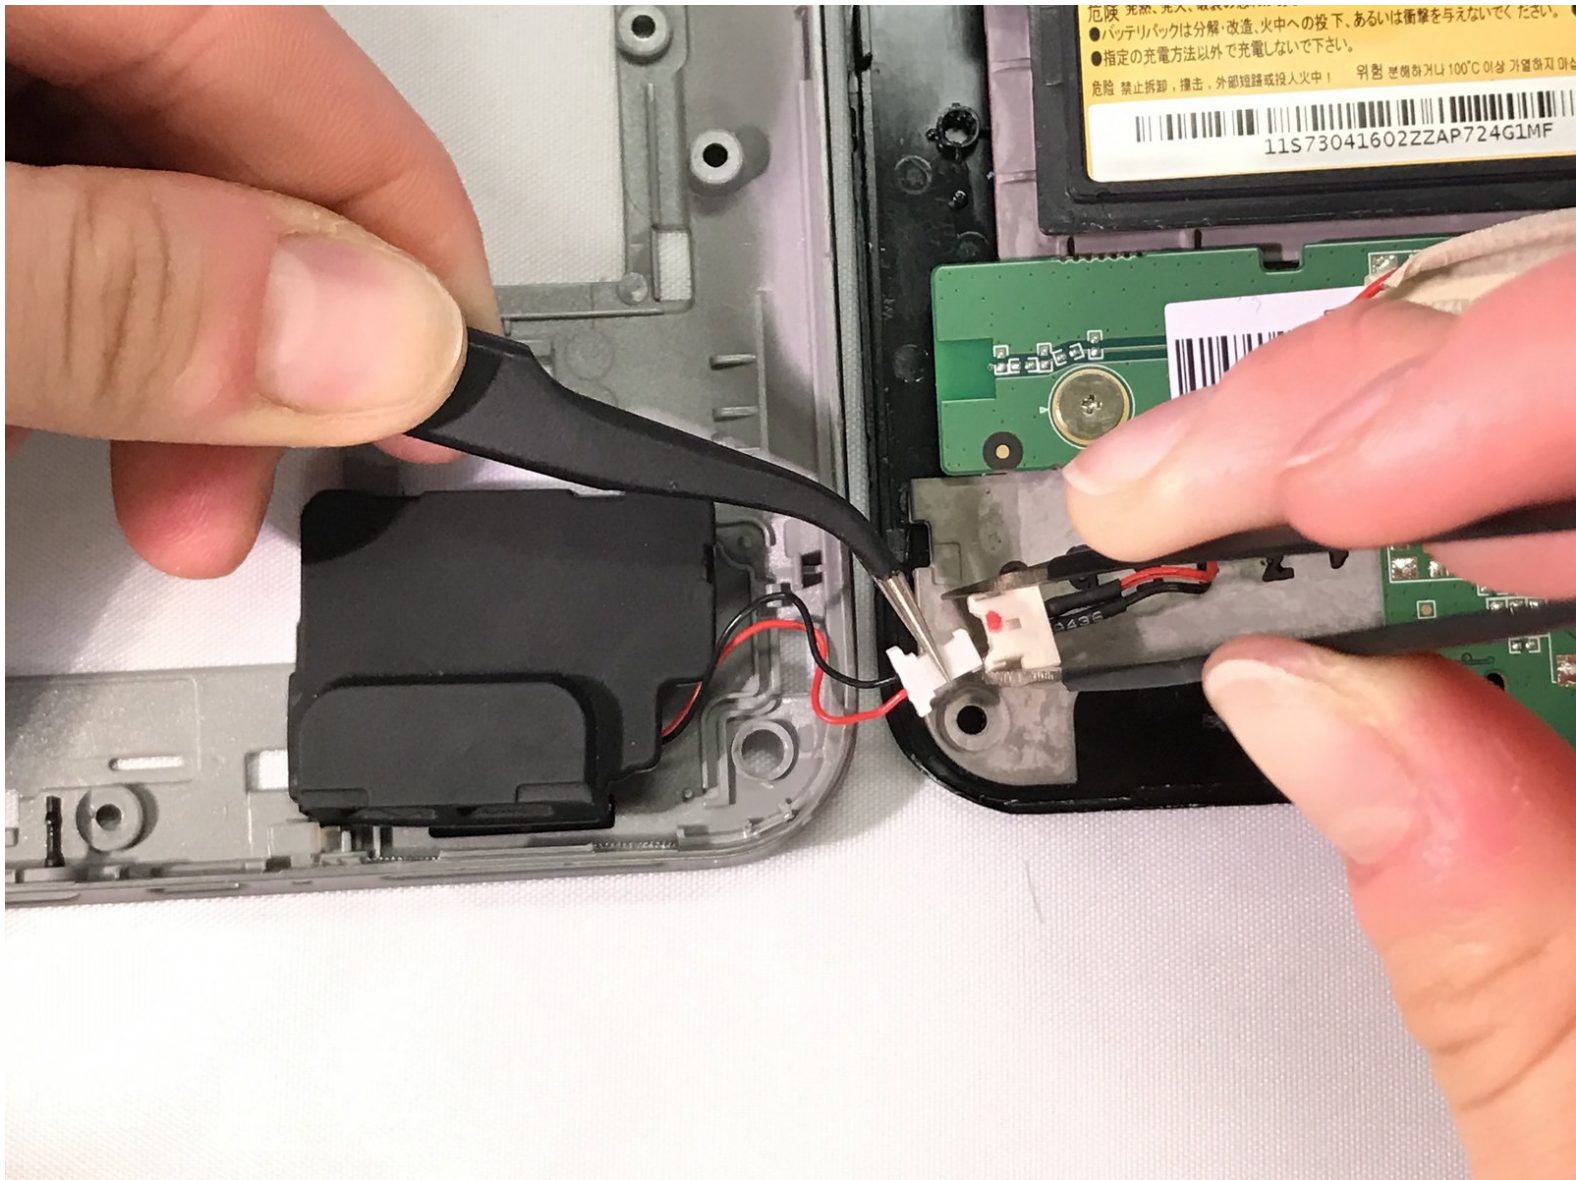

INTRODUCTION

The Lenovo Ideatab A1107 Speaker Replacement guide will show users how to safely remove the speaker from the Lenovo Ideatab A1107. Included in the guide are the proper tools needed to complete the replacement, as well as photos with mark-ups.



TOOLS:



- [iFixit Opening Tools](#) (2)
 - [Phillips #000 Screwdriver](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Back Cover



- Insert a plastic opener in-between the black back panel and the silver body of the tablet.
- Use the plastic opener to pry the back panel off by moving the plastic opener around the outside edge of the device.

Step 2

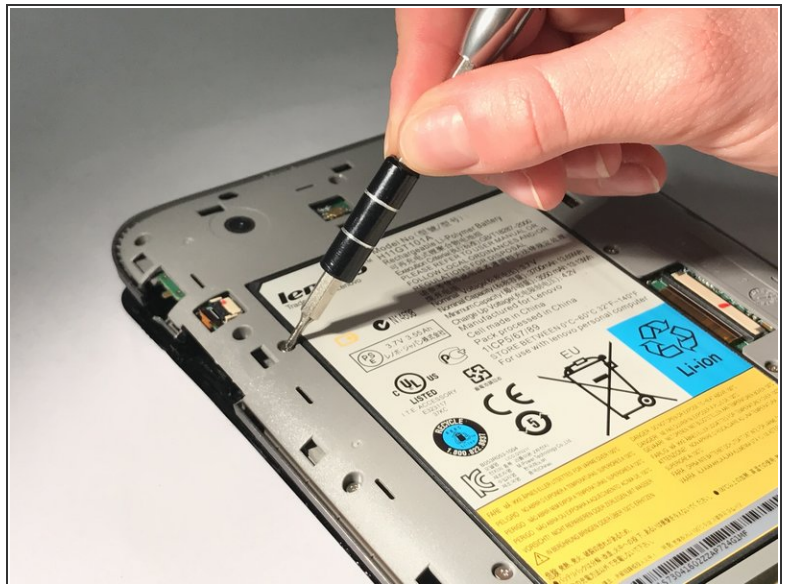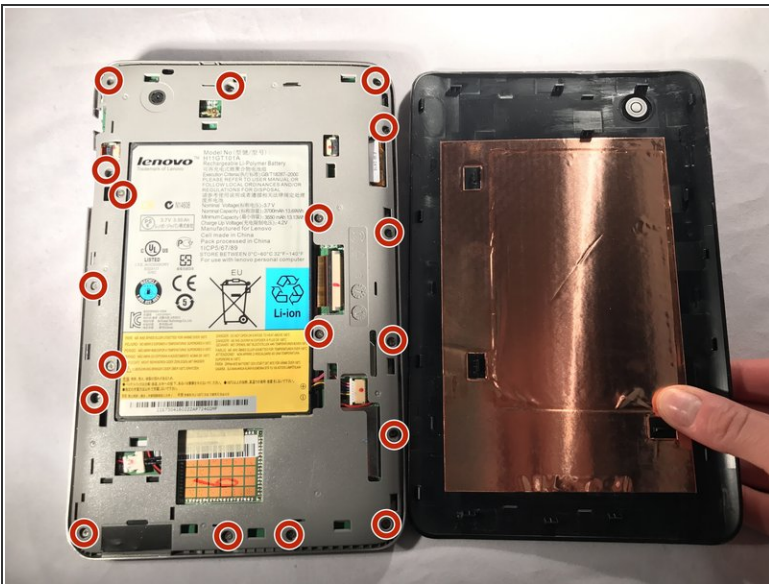


- Use a Phillips #000 screwdriver to remove the seventeen 4mm screws.

Step 3




- Lift up and remove the interior casing to expose the inner components.
- ❗ Do not be alarmed if the volume button and lock button fall off when removing the interior casing.

Step 4 — Speaker

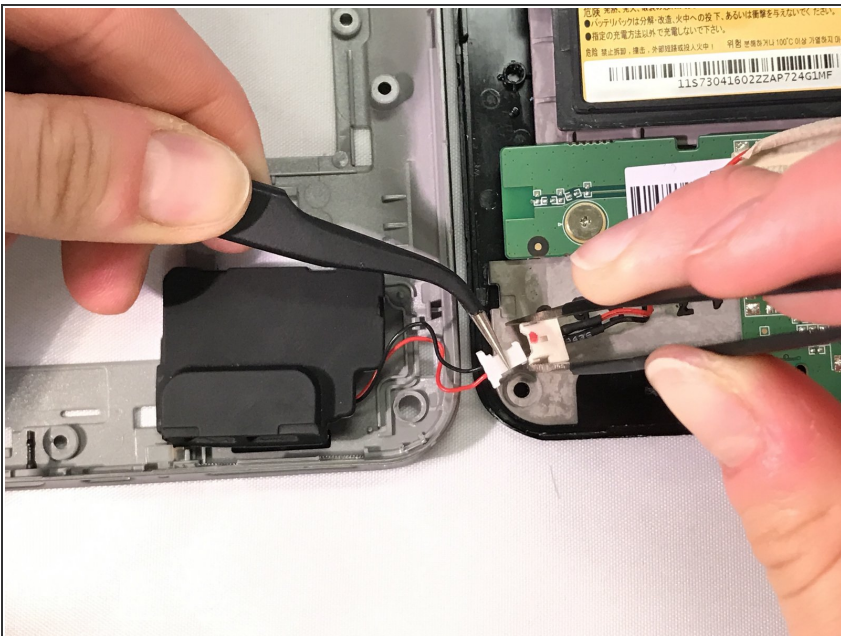


- Use tweezers or hands to disconnect speaker wires.

Step 5

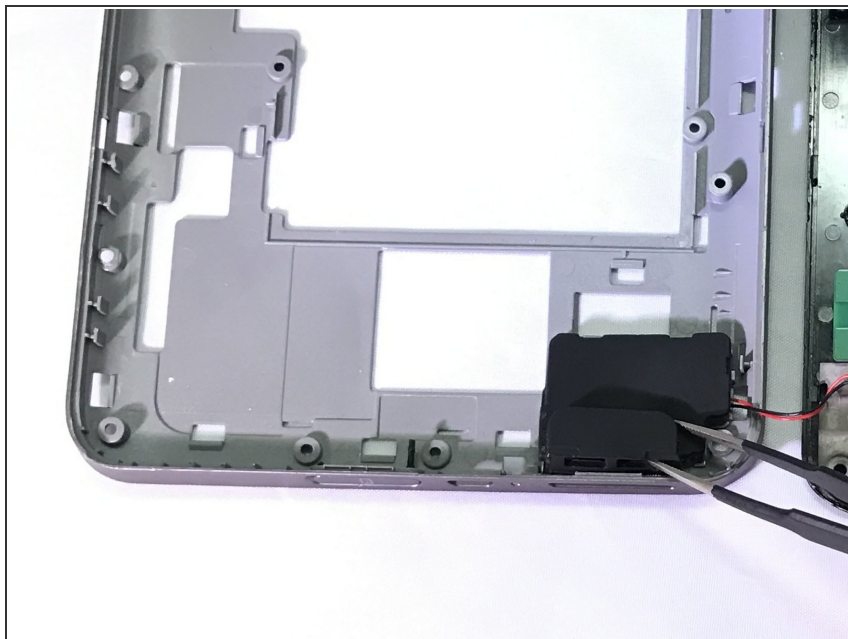

- Use tweezers to pull the speaker off of the casing.

Step 6

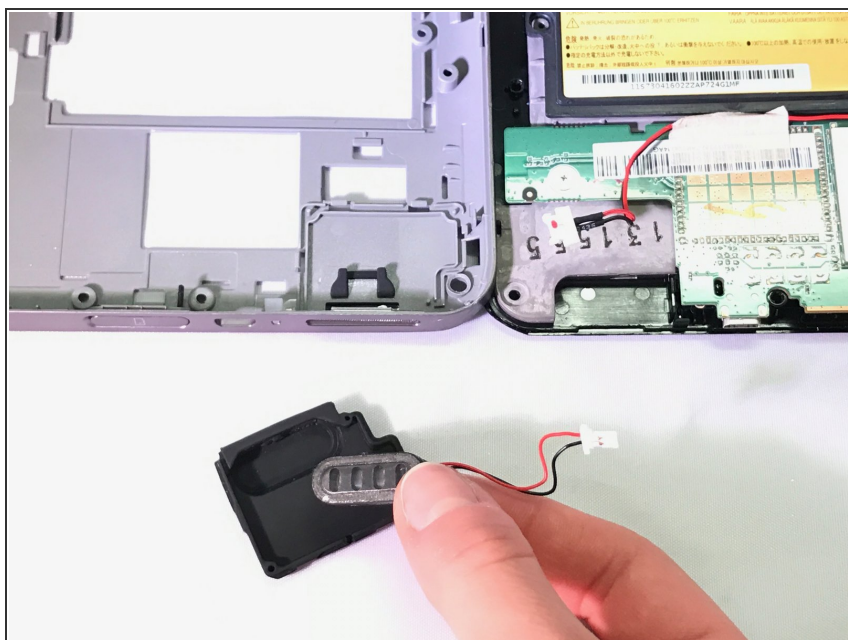

- Remove the speaker component from the rubber casing.

To reassemble your device, follow these instructions in reverse order.