



Protocol Dronium Two HD Camera Replacement

This is how to remove and replace the HD camera on the underside of the drone if necessary.

Written By: William Tietz



INTRODUCTION

This is how to remove and replace the HD camera on the underside of the drone if necessary. Be careful not to pull on the wires as that may damage them. Removing the landing gear closest to the camera wires will make this job easier. Please use a clean and well lit area, as the screws are small.



TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #0 Screwdriver](#) (1)



PARTS:

- [HD Camera](#) (1)

Step 1 — Landing Gear



- Turn device off by moving the selector switch to the left.

Step 2



- Place one hand on the drone and carefully remove the landing gear with the other hand.

⚠ Be gentle as to not break off the studs on the landing gear.

Step 3 — HD Camera




- Use the fine edged plastic opening tool to pull up one side of the plug, and then the other, until it comes loose.

Step 4



- Push the battery cover away from the drone and carefully open it up.

Step 5

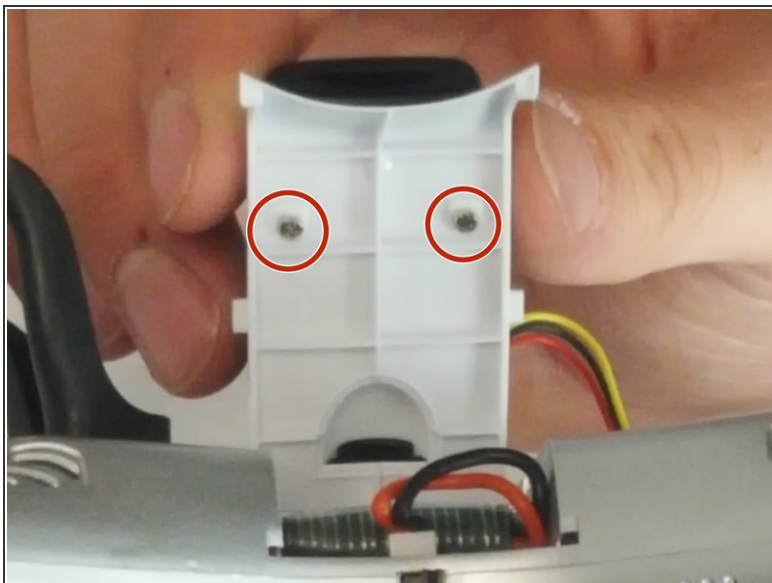

- Carefully remove the two Phillips 5.35 mm screws holding the camera to the battery cover.

Step 6



- Close the battery cover by pulling it towards you. Then, gently pull the camera towards you, freeing it from the battery cover.

To reassemble your device, follow these instructions in reverse order.