



---

## INTRODUCTION


This guide demonstrates how to replace the fret buttons on a Rock Band Beatles Hofner Bass.

---

### TOOLS:


- [JIS Driver Set](#) (1)
-

## Step 1 — Fret Buttons

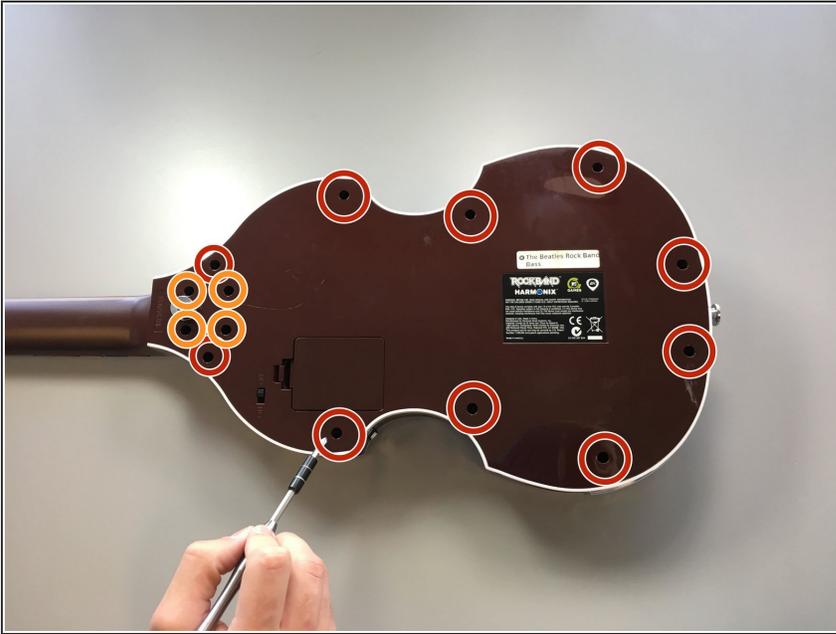



- Flip the guitar onto its backside, so that the strummer is facing the table and the battery compartment is facing you.
- Use a J1 Phillips head screwdriver to remove ten 5mm short screws.
- Use a J1 Phillips head screwdriver to remove four 5mm long screws.

## Step 2

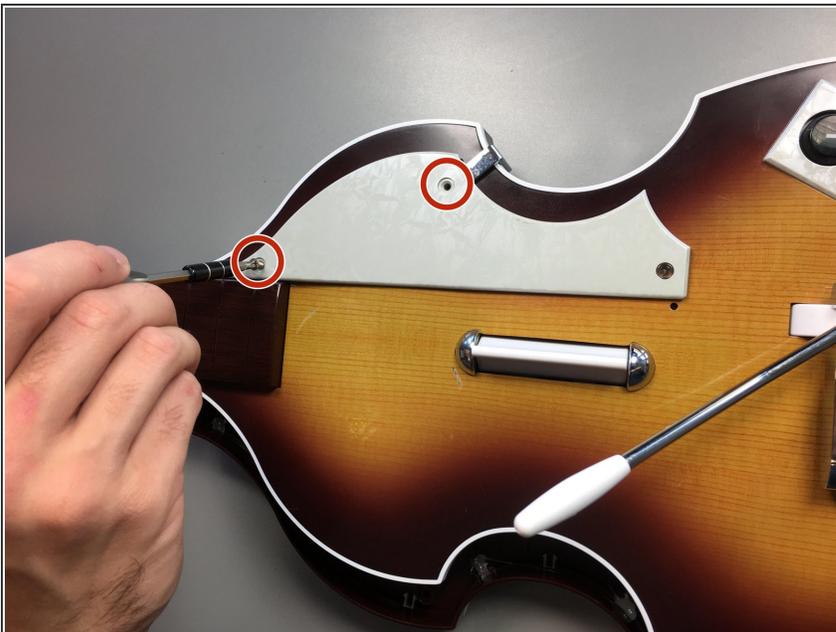


- Flip the guitar to the front, with the strummer and fret buttons facing you.
- Use a J1 Phillips head screwdriver to remove two 10mm silver, short screws.

### Step 3

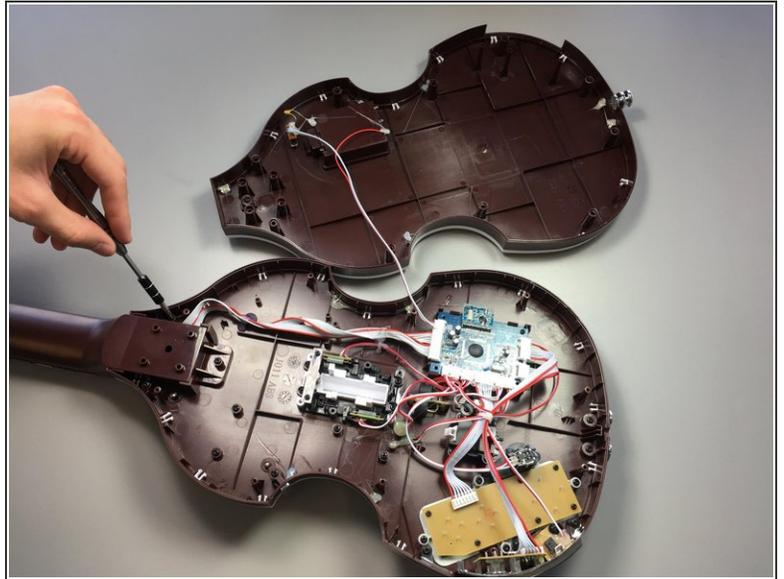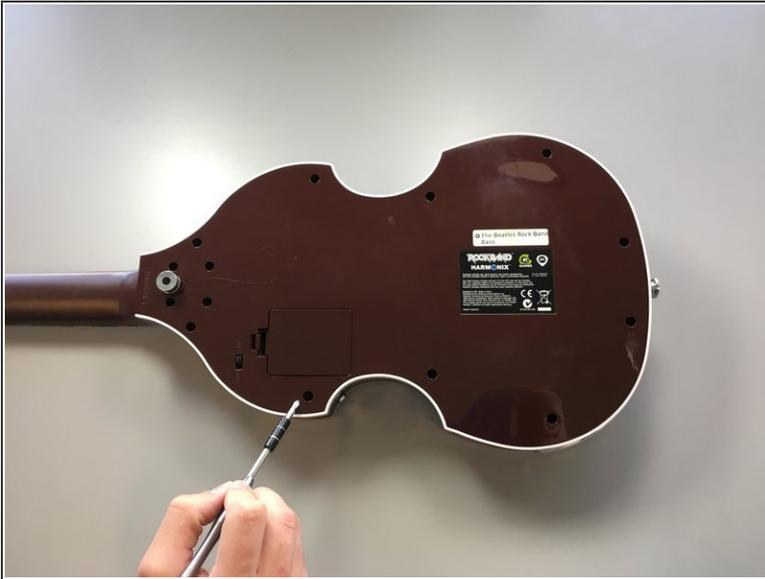

- Flip the guitar on its back again, so that the strummer is facing down and the battery compartment is facing you.
- Pull off the back whole panel so that the guitar is now open.

### Step 4

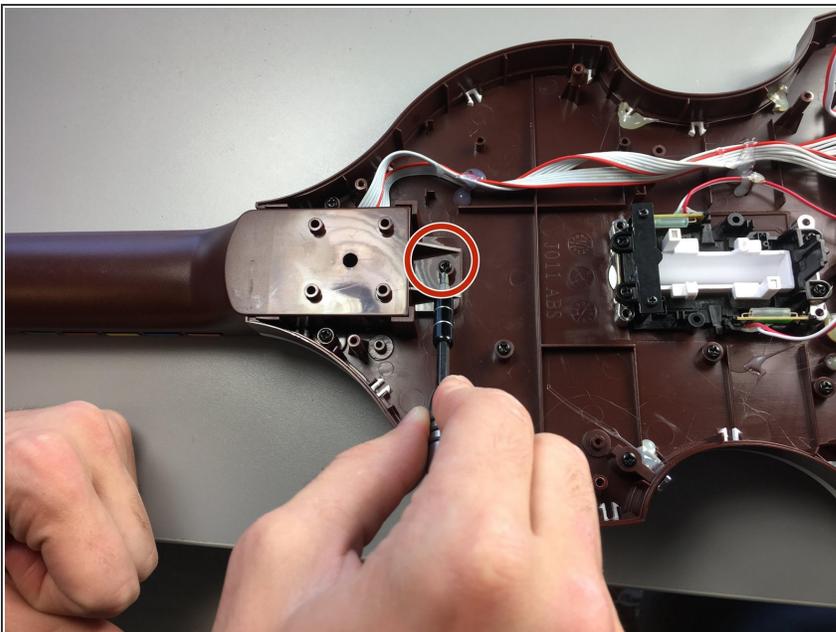


- Using a J1 Phillips screwdriver, unscrew the 10mm screw at the base of the neck.

## Step 5




- Remove the head of the guitar, at the top of the neck. Do this by simply pulling on it, it should slide off out fairly easily.

## Step 6

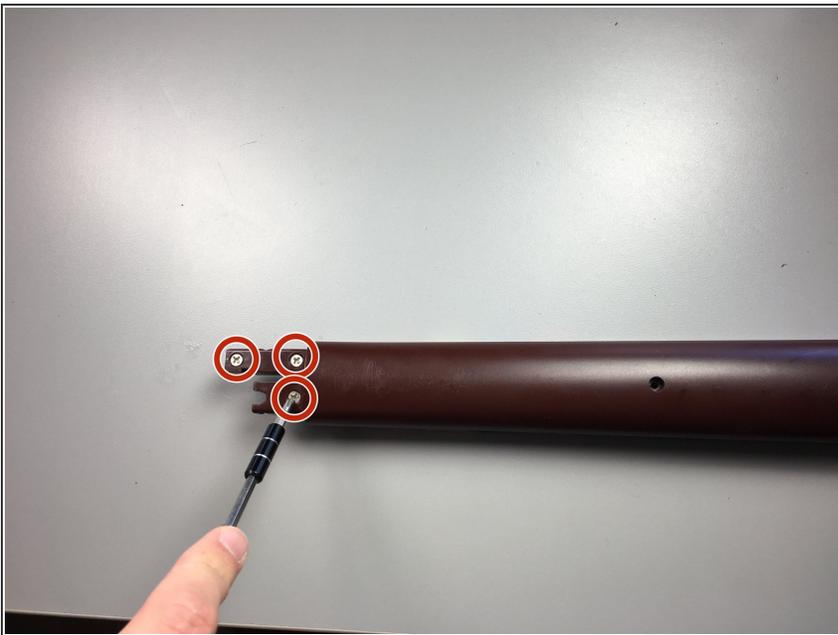



- Use a J1 Phillips screwdriver to remove three silver 10mm screws at the top of the neck.

## Step 7

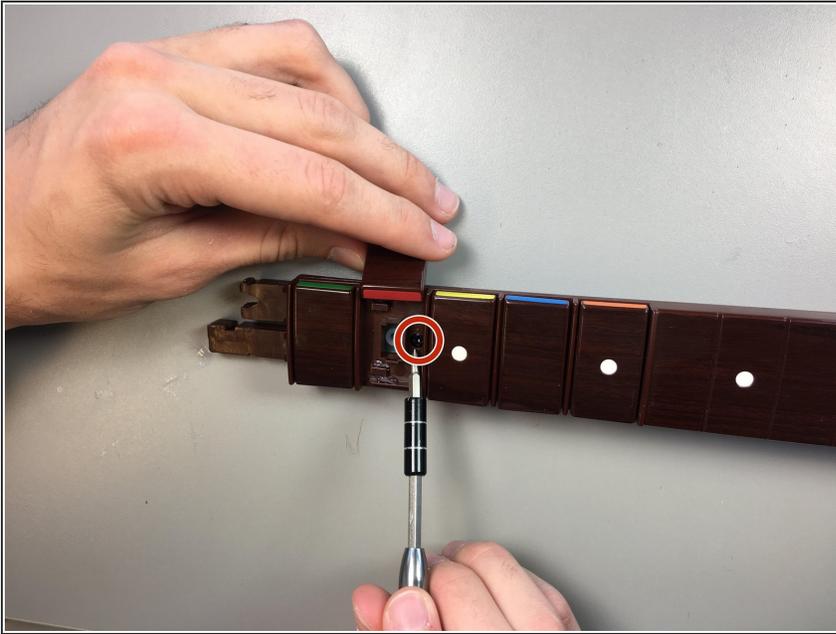

- Pop off the red button at the top by prying.
- Use a J1 Phillips screwdriver to remove the 10mm screw underneath.

## Step 8

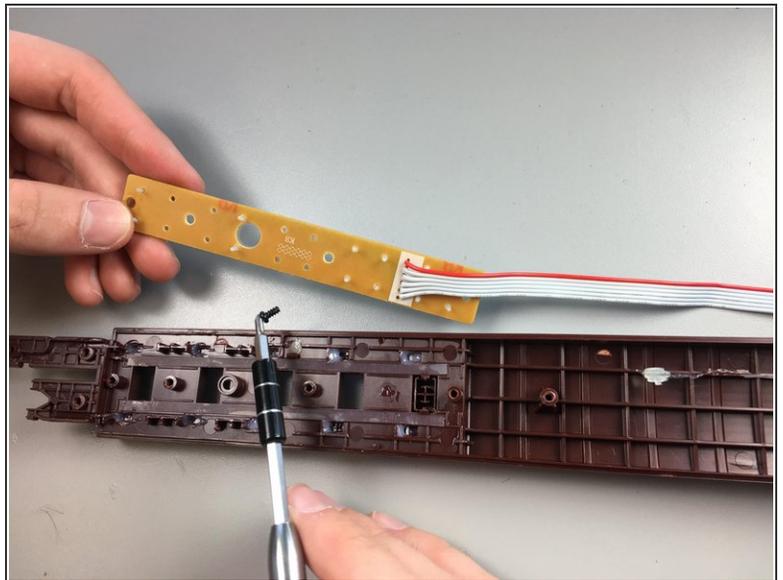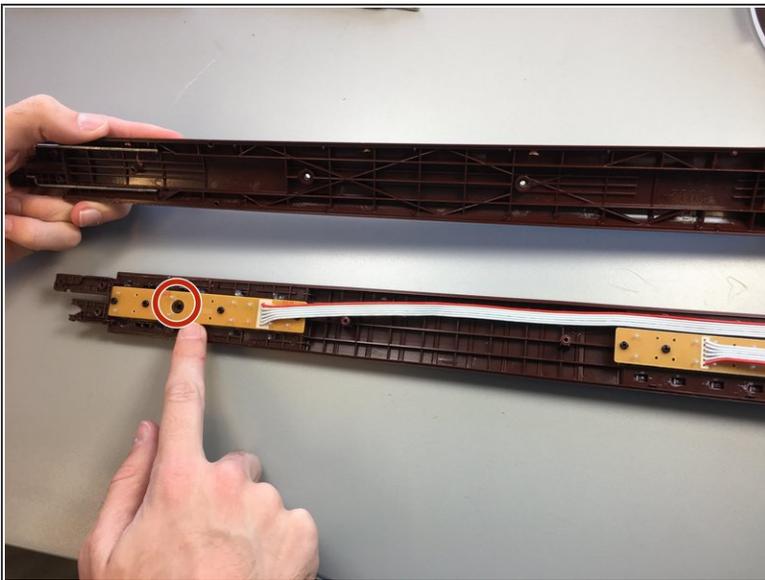

- Remove the 10mm screw on the fret buttons with a J1 Phillips screwdriver.
- Remove the fret buttons.

To reassemble your device, follow these instructions in reverse order.